



Semi-Pro Digital Tire Pressure Gauge

Monroe, WA · 360 453 2030 · www.longacreracing.com

Push **ON** to turn gauge on. Gauge shuts off automatically after 30 seconds of no use (no pressure). Gauge auto-zeros at turn-on. If zeroing is ever needed push **ON** and hold for 5 seconds. Back light is on whenever gauge is on.

- Change batteries when the battery icon shows in the upper right corner of the display. See below right. Replace with 2 quality "AAA" batteries. Access is on the back. Install with correct polarity.

To convert to metric - Bar, Kgm/cm, or kPa:

- Turn gauge on. Hold Units button until Psi at top of display flashes. Release Units, then push Units once to move to BAR, then Kg/cm, or kPa. After 3 seconds normal function will resume.


Units choice:
Psi here



Bar here



Low Battery
indicator

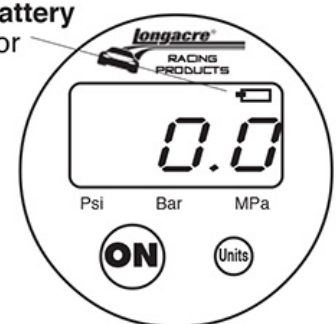

**Reads
to .1 psi**
0-60 psi