



INSTRUCTIONS



© 2021, Speedway Motors, Inc.

22 Circuit Wiring Kit Instructions 910-64022

Fuse Box Connections
(viewed from underside)

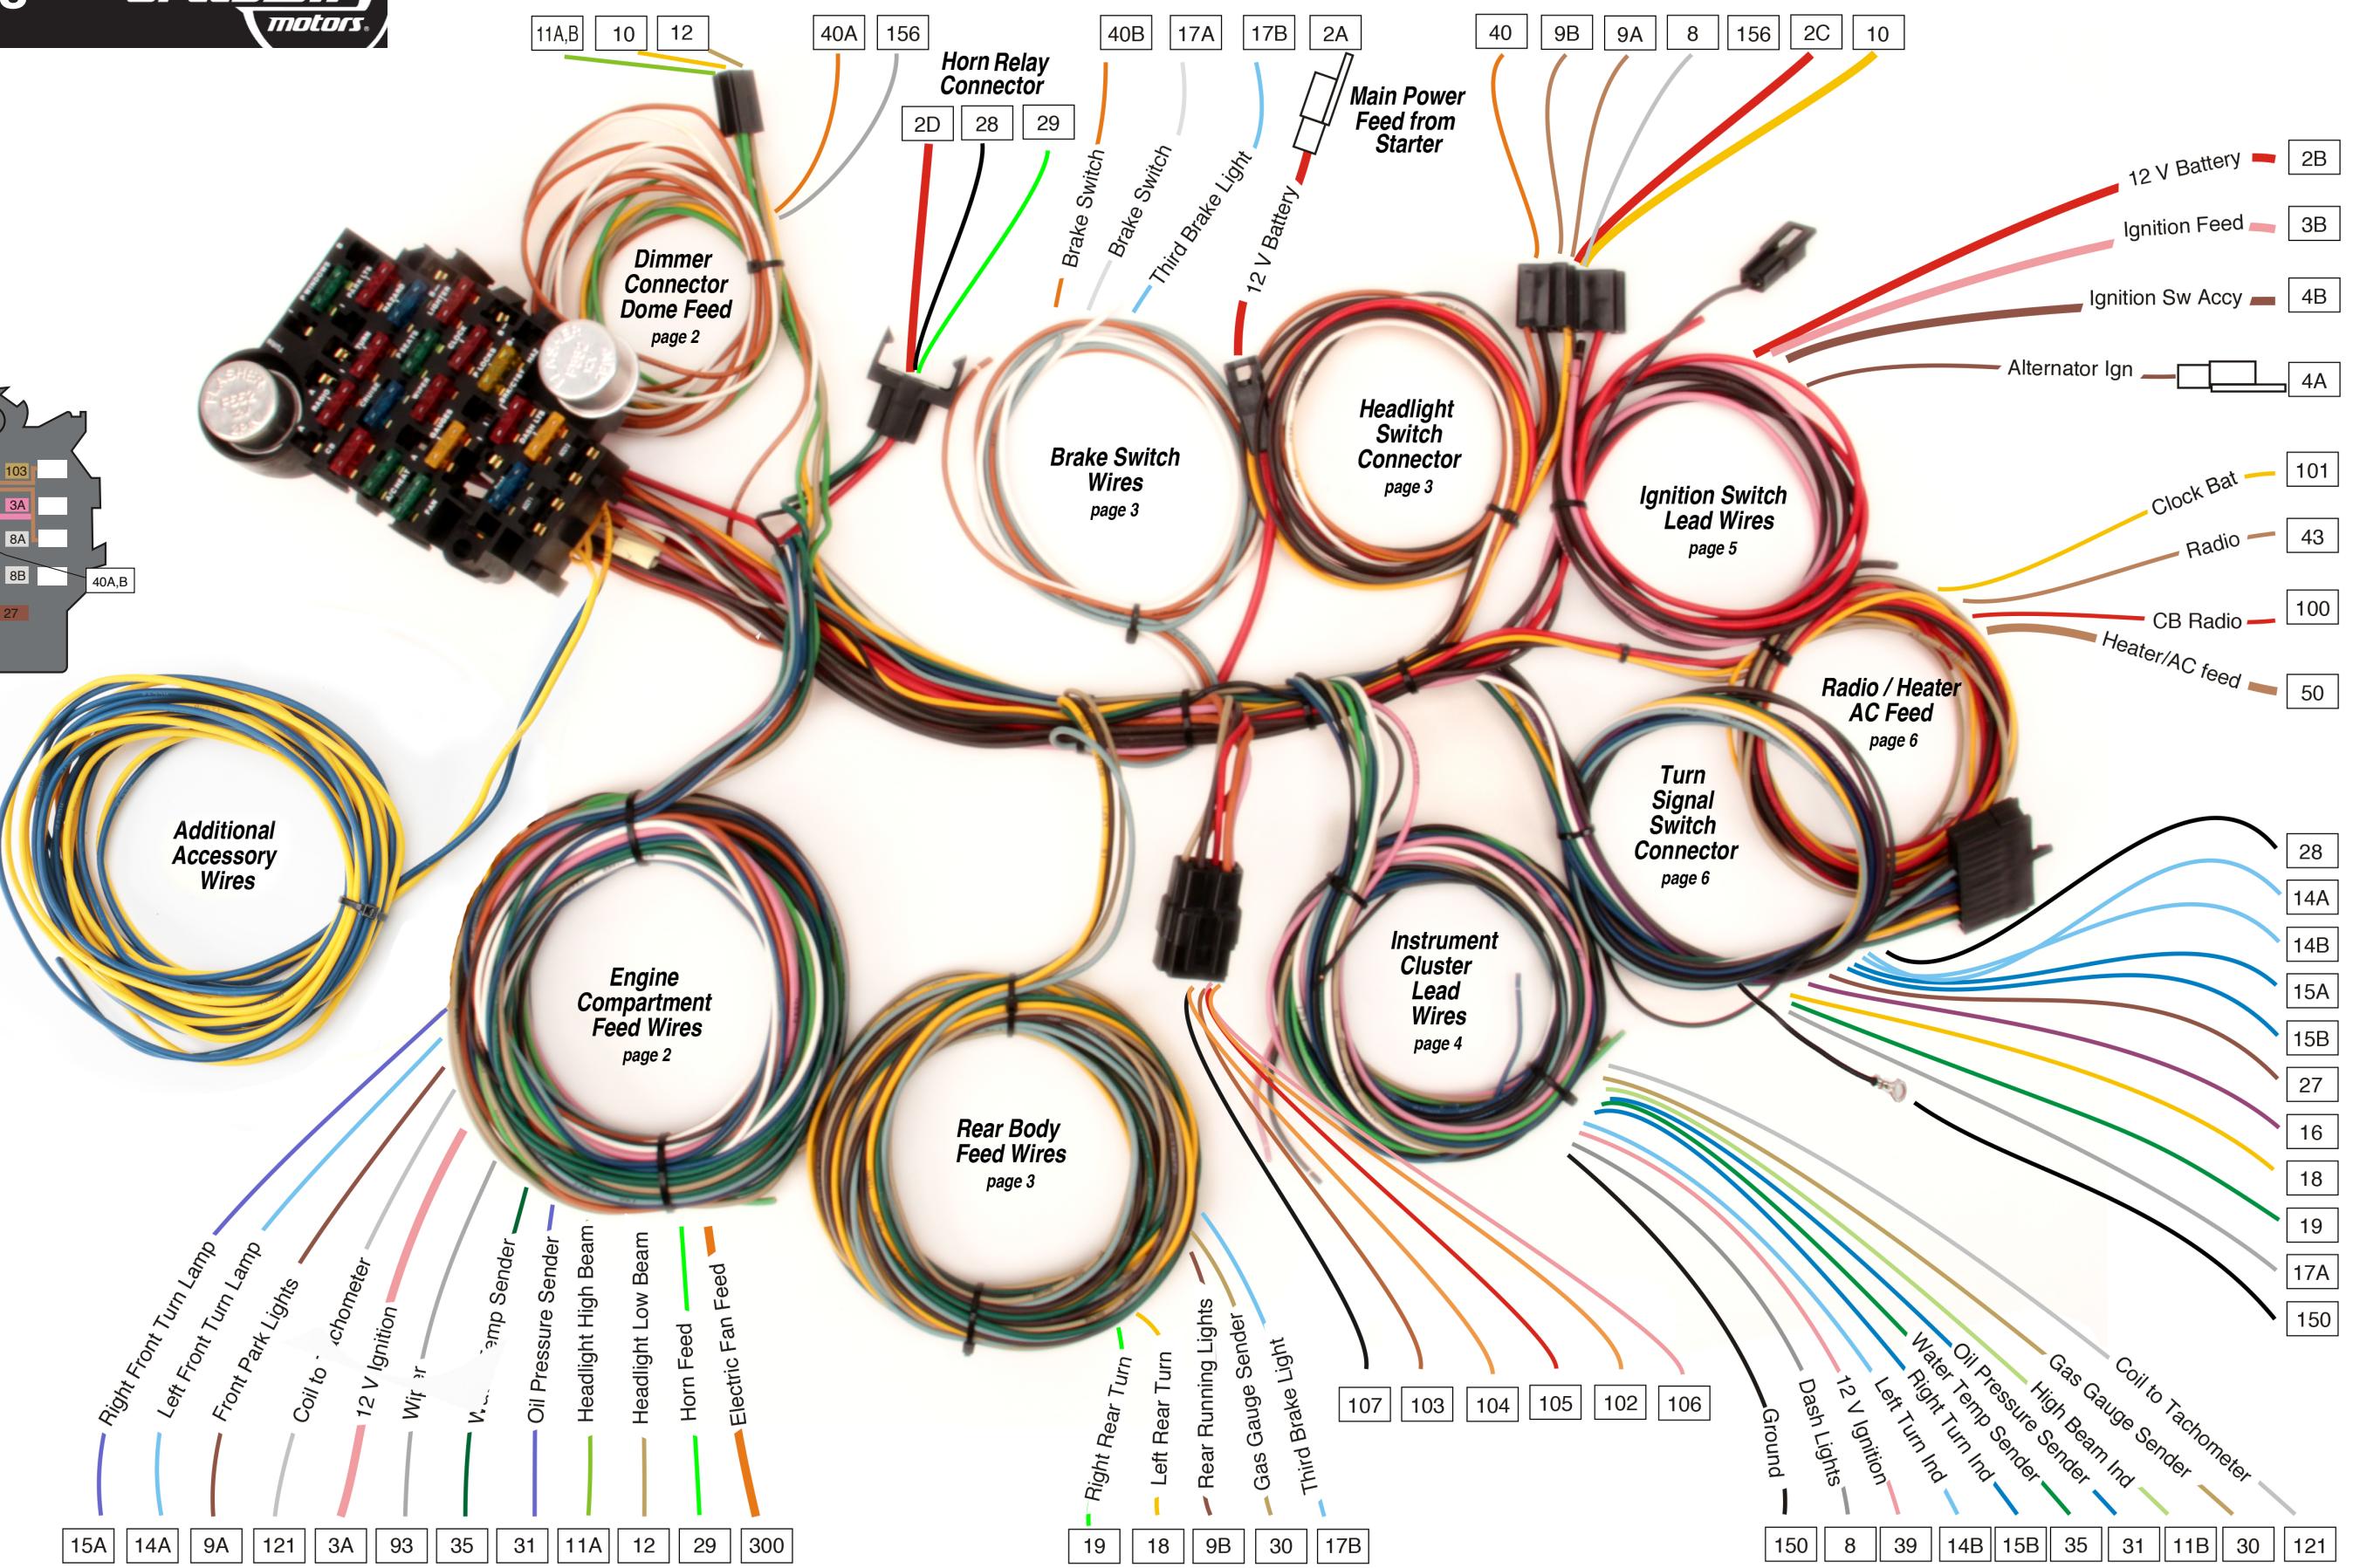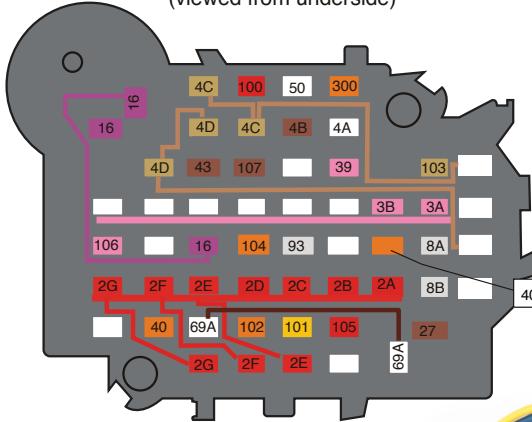

INSTRUCTIONS



© 2021, Speedway Motors, Inc.

22 Circuit Wiring Kit Instructions 910-64022

Front of Vehicle Connections

- Run the dark green horn feed [29] wire to the positive connection on your horn.
- Connect to terminal 86 on a relay. This is the 12-volt fused supply from fuse panel. DO NOT use as direct power for the fan. Run power direct from battery with in-line fuse based on fan specs. (wire/fuse not included)
- Run the light green headlight high beam [11A] and tan headlight low beam [12] to the front of the vehicle. You will have to splice this wire so you can run it to both headlights. Connect these wires along with the headlight ground wires to the connectors as per the diagram on this page.
- Run the dark green water temp sender [35] to the water temperature sender.
- Run the dark blue oil pressure sender wire [31] to the oil pressure sender.
- Run the pink ignition feed [3A] wire to either the battery side of a GM HEI distributor or the ballast resistor on a points style distributor. If you're using an after market ignition modules please follow its instructions for specific directions.
- Run the white wiper feed wire [93] to the wiper motor positive side connection.
- Run the brown park lights [9A] wire to a splice then to both of the front park lights. If you are using a dual filament bulb it should be connected to the low filament.
- Run the white coil-tachometer wire [121] wire to the tach terminal on a GM HEI distributor, the negative side of the coil, or to a tach connector on a after market ignition module.
- Run the dark blue right front turn [15A] to the right front directional lamp. This would be connected to the high side if you're using a dual filament bulb for park/turn.
- Run the light blue left front turn [14A] to the left front directional lamp. This would be connected to the high side if you're using a dual filament bulb for park/turn.

WIRE #	COLOR	PRINTING
11A	Light Green	Headlight High Beam
15A	Dark Blue	Right Front Turn
14A	Light Blue	Left Front Turn
9A	Brown	Park Lights
29	Dark Green	Horn
300	Orange	Electric Fan
35	Dark Green	Water Temp
31	Dark Blue	Oil Pressure
93	White	Wiper
3A	Pink	Ignition
121	White	Tachometer
40A	Orange	Dome
156	Gray	Dome Ground

Fuse Panel

This fuse panel is designed to be mounted under a dash away from the elements. It should not be exposed to the elements.


Horn and Dimmer Plugs

Route the dome light ground wire [156] to the dome light. This wire allows the headlight switch to turn on the dome light.



Insure the dome light feed wire [40A] is routed to the proper location. This system uses a switched ground system for the dome light using the headlight switch and door switches.

Plug the horn relay and dimmer switch into their respective connectors.


Fuse Panel, Engine Compartment

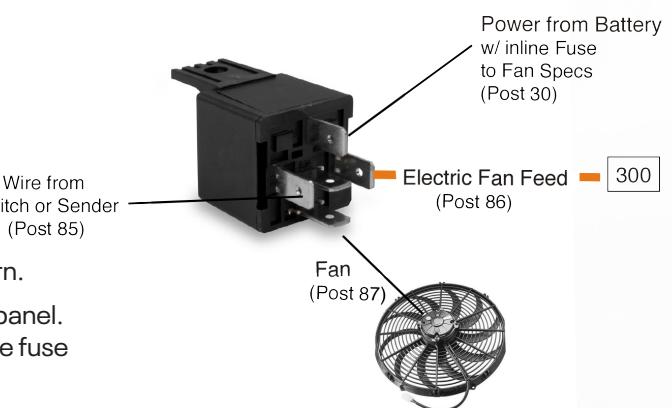

300	Electric Fan Feed
29	Horn Feed
12	Headlight Low Beam
11A	Headlight High Beam
31	Oil Pressure Sender
35	Water Temp Sender
93	Wiper
3A	Coil to Tachometer
121	Front Park Lights
9A	Left Front Turn Lamp
14A	Right Front Turn Lamp
15A	

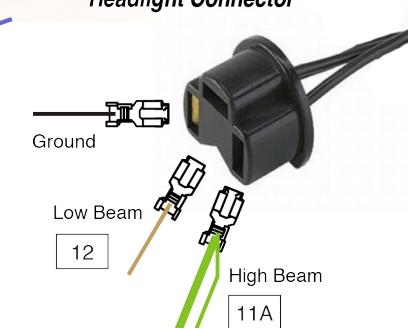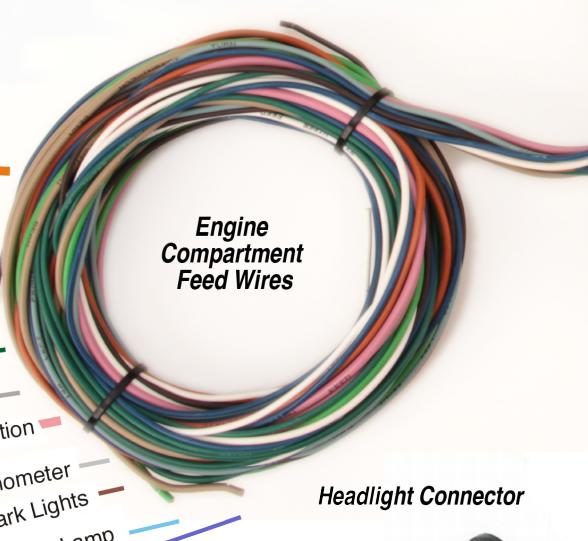

FUSE AMPS	
5	
10	
15	
20	
30	

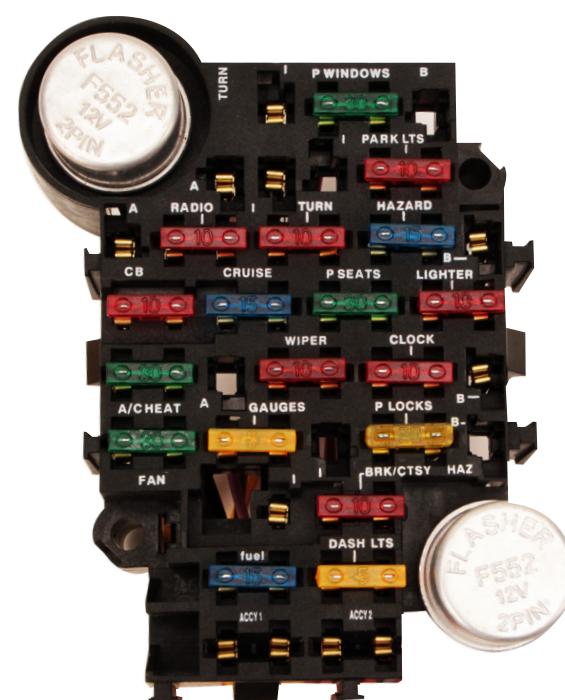

Active fuses based on Power:

Battery Power:
Brake Lights
Power Locks
Clock
Power Seats
Hazard
Parking Lights
Power Windows

Accessory Power:
Radio
CB
AC/Heat
Fan

Ignition Power:
Gauges
Fuel Pump
Wipers
Cruise
Turn Signals

INSTRUCTIONS



© 2021, Speedway Motors, Inc.

Rear, Power, Brakes and Accessory

22 Circuit Wiring Kit Instructions 910-64022

Rear Connections

Run the light blue third brake light wire [17B] to the third brake light positive side. If you are not using a third brake light this wire can be either taped into the harness or removed.

Run the tan gas gauge [30] wire to the sending unit on the fuel tank.

Run the yellow left rear turn signal wire [18] to the left rear directional light. This should be connected to the high side of a dual filament bulb.


Run the dark green right rear turn signal wire [19] to the right rear directional light. This should be connected to the high side of a dual filament bulb.

Run the brown rear running lights [9B] to the rear of the vehicle, it will need to be spliced to run to both lights. This wire should be connected to the low side of a dual filament bulb.

Accessory Wires

The kit is designed with 5 accessory fused circuits. These are all plugged into one plug, the kit includes the spades required to attach into this plug.

ACCESSORY FEED WIRE CONNECTION			
WIRE #	TYPE	COLOR	PRINTING
102	Battery	Orange	12 Volt Battery Fused
103	Ignition	Tan	Fuel Pump
104	Battery	Orange	Power Seats
105	Battery	Red	Power Locks
106	Ignition	Pink	Power Windows
107	Accessory	Brown	Ignition Sw Accy

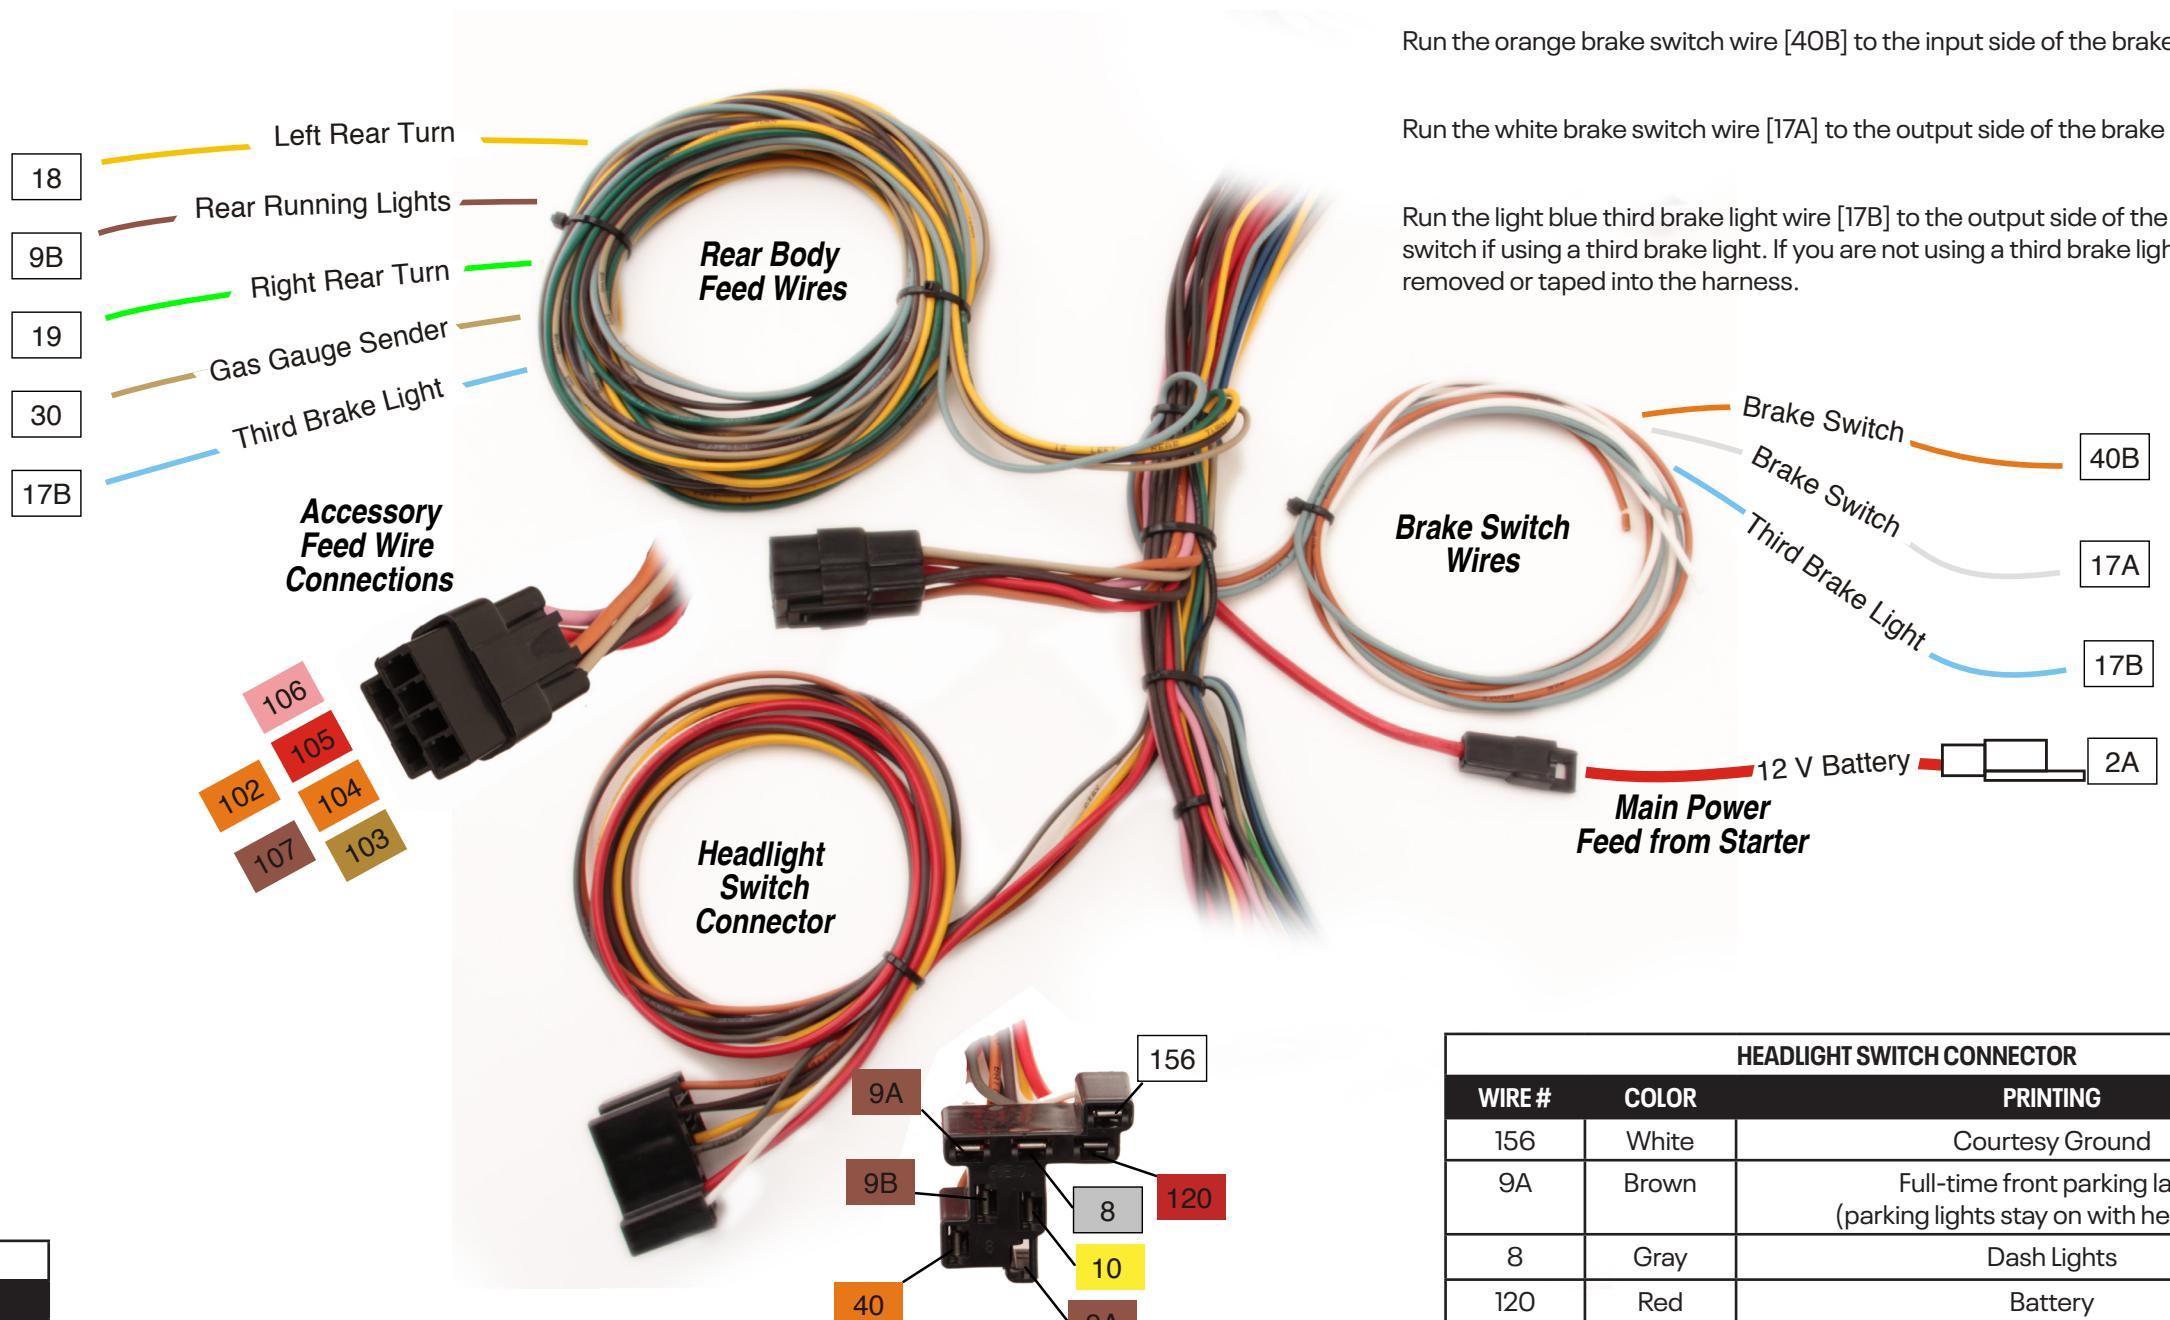


Power and Brake Connections

Connect the main battery wire [2A] to the "bat" stud on a GM starter solenoid or the battery side of a ford starter relay. Use the included fusible link wire marked 12V battery, to perform this task.

Run the orange brake switch wire [40B] to the input side of the brake light switch

Run the white brake switch wire [17A] to the output side of the brake light switch

Run the light blue third brake light wire [17B] to the output side of the brake light switch if using a third brake light. If you are not using a third brake light this wire can be removed or taped into the harness.

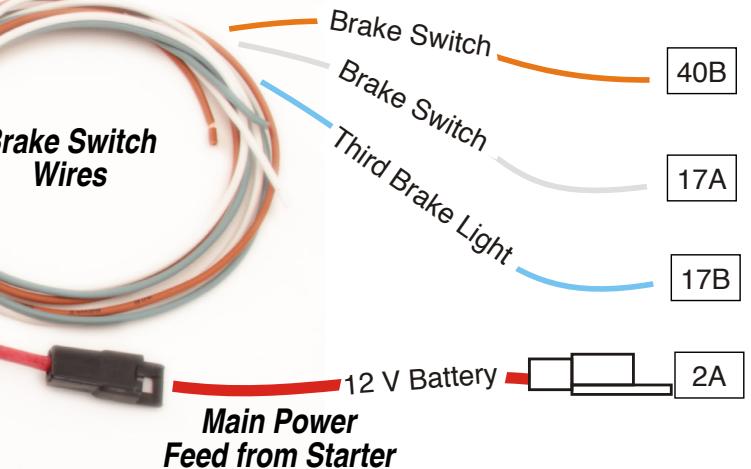

HEADLIGHT SWITCH CONNECTOR		
WIRE #	COLOR	PRINTING
156	White	Courtesy Ground
9A	Brown	Full-time front parking lamp (parking lights stay on with headlights)
8	Gray	Dash Lights
120	Red	Battery
9B	Brown	Rear Running Lights
10	Yellow	Dimmer Switch
40	Orange	Fused Battery
"9A"	Brown	Front Parking Lamp (parking lights off with headlights are on)
Alternate		


INSTRUCTIONS



© 2021, Speedway Motors, Inc.

Instrument Cluster


22 Circuit Wiring
Kit Instructions
910-64022

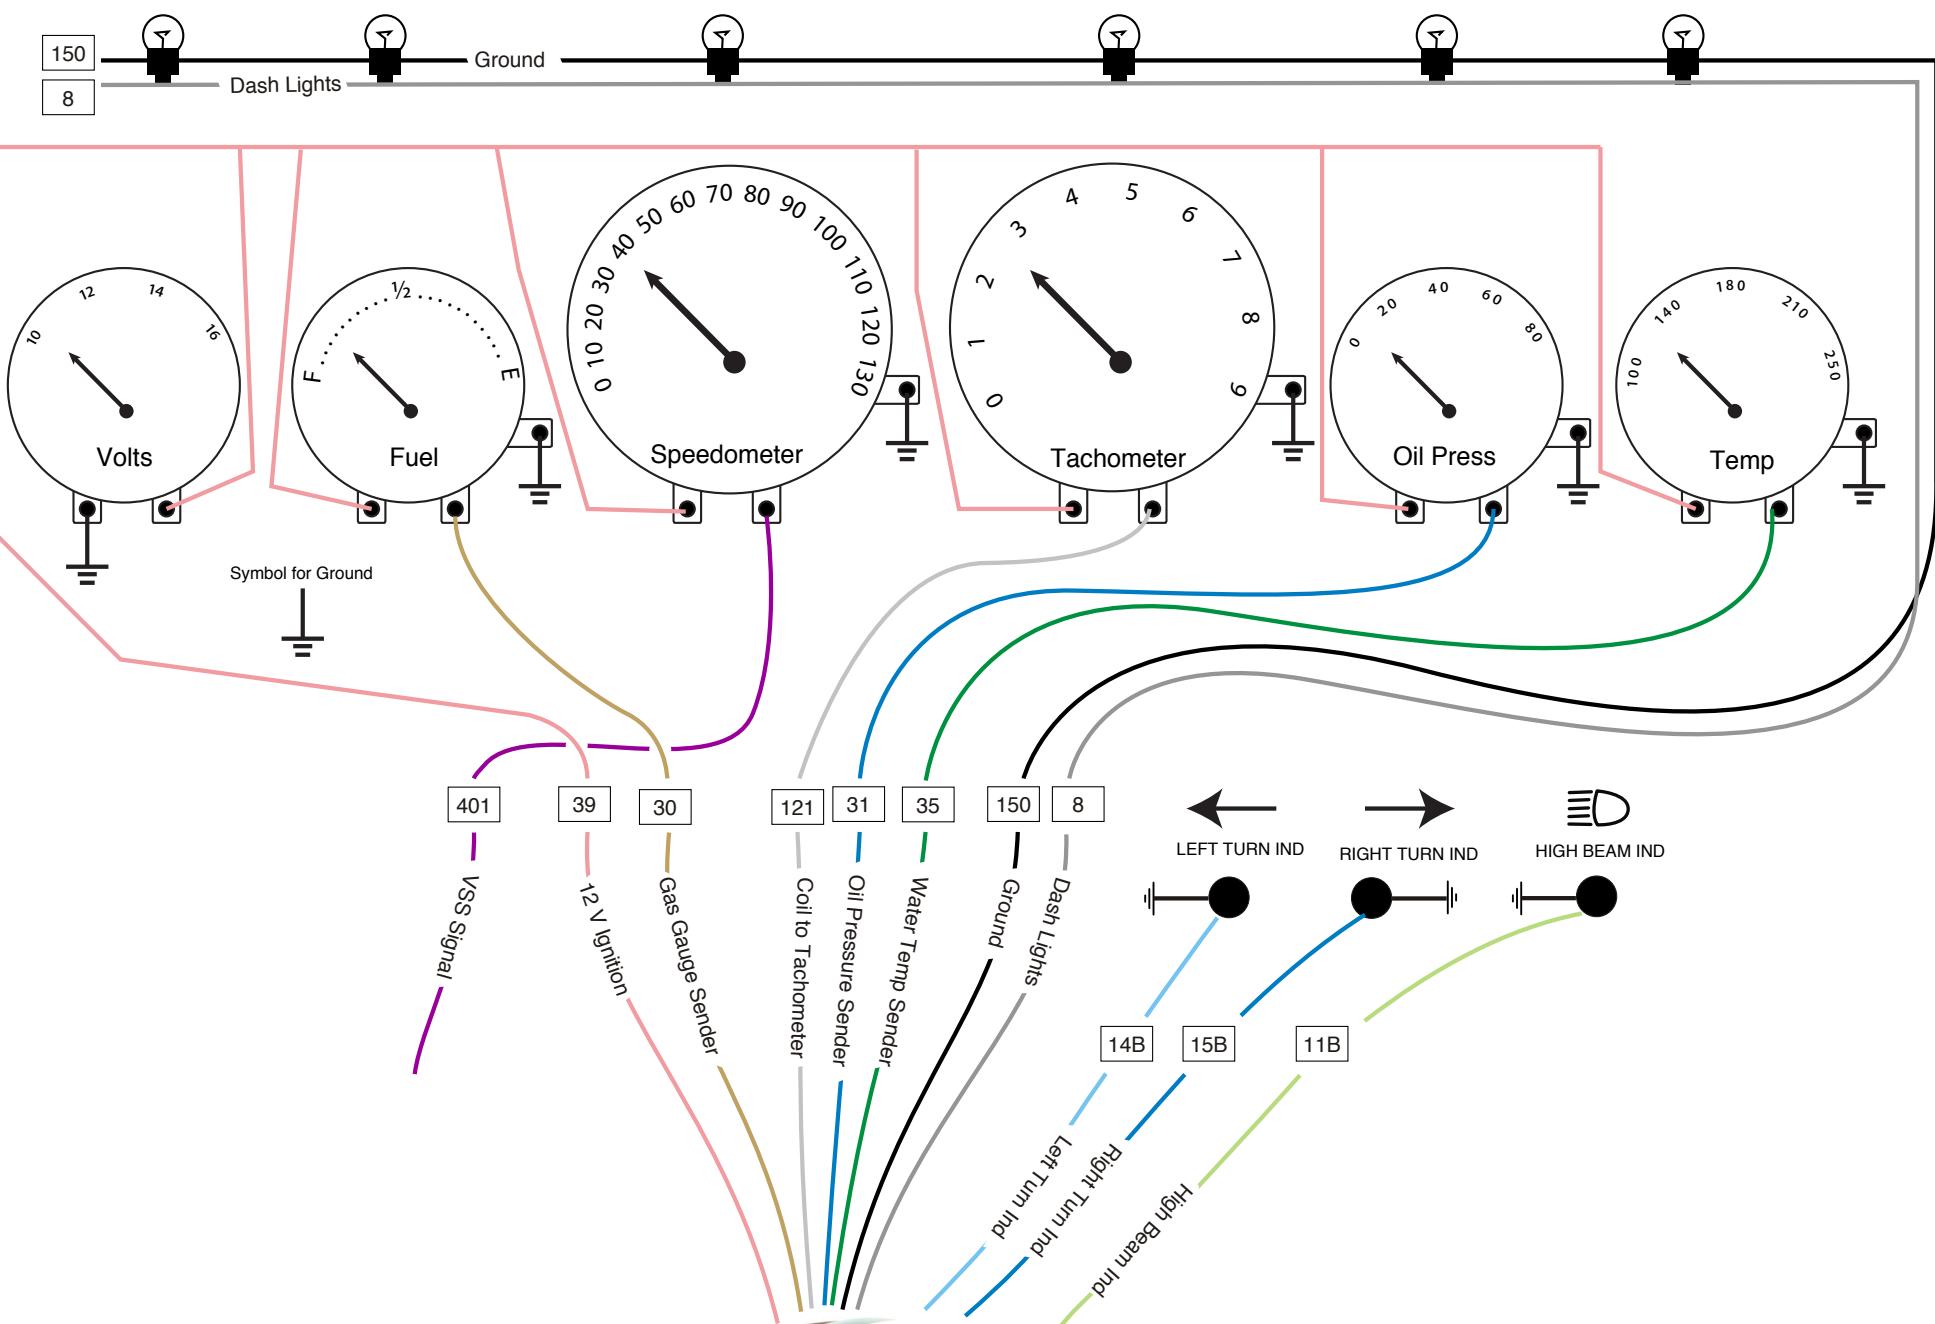

INSTRUMENT CLUSTER WIRING

The diagram above shows a typical electrical gauge wiring system. If you use a mechanical speedometer you will only require the gauge lighting to go to it, same for a mechanical tachometer. Vehicle speed sensor wires are supplied in the sub kit 910-64027-4, for mechanical speedometers these can be ignored. Always follow gauge manufacturers instructions and vehicle speed sensor instructions for specific installation.

WIRE #	COLOR	PRINTING
11B	Light Green	Headlight High Beam
15B	Dark Blue	Right Front Turn
14B	Light Blue	Left Front Turn
35	Dark Green	Water Temp
31	Dark Blue	Oil Pressure
121	White	Tachometer
401	Purple	VSS Signal
39	Pink	12 V Ignition
30	Tan	Gas Gauge Sender
150	Black	Ground
8	Gray	Dash Lights

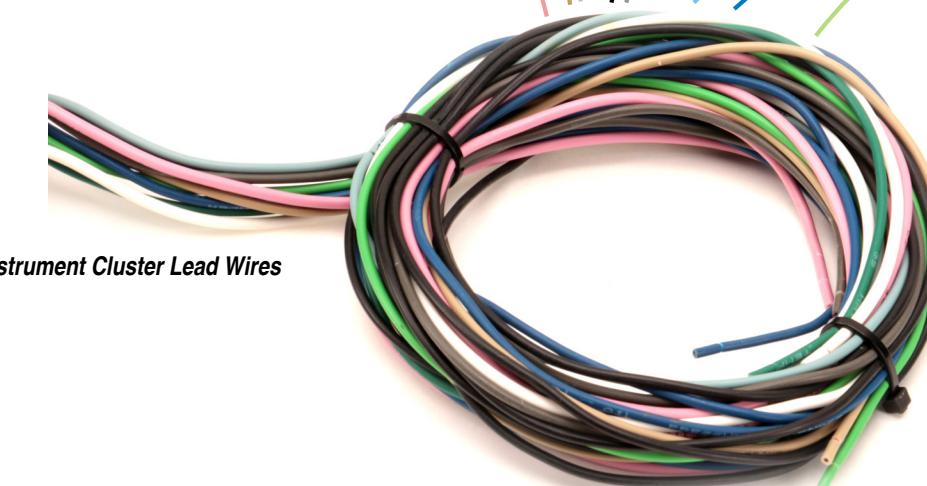

INSTRUCTIONS



Alternator and Starter Connections

© 2021, Speedway Motors, Inc.

22 Circuit Wiring Kit Instructions 910-64022

IGNITION SWITCH WIRING

Run the brown ignition switch accessory [4B] wire to the accessory terminal (ACC) on your ignition switch.

Run the red 12V battery [2B] wire to the battery terminal (BAT) on your ignition switch.

Run the pink ignition feed [3B] wire to the ignition terminal (IGN) on your ignition switch.

WIRE #	COLOR	PRINTING
2B	Red	Battery (BAT)
3B	Pink	Ignition (IGN)
4B	Brown	Accessory (ACC)
4A	Brown	Alternator Ignition
2A	Red	12V Battery

ALTERNATOR AND STARTER WIRING

Run the purple starter solenoid wire to the neutral safety switch to the S terminal on a GM starter solenoid.


Run the purple neutral safety switch wire from the solenoid terminal on the ignition switch to the neutral safety switch. If you are not running a neutral safety switch this wire can be extended and run straight to the S terminal on your starter.

Run the red 12V battery wire with the blue fusible link to the battery stud on your alternator, this wire will then run to the BAT stud on your starter. Use the protective boot included over the stud on your alternator. If you are using a one wire alternator this is the only wire you will connect to your alternator.

Run the brown alternator ignition [4A] wire to its mating terminal on the ignition switch branch of the main harness. Plug the connector pre-installed on this wire into the terminal on your alternator. For a one wire alternator you will not use this plug.

Run the red wire attached to the plug in connector for your alternator to the battery stud on your alternator. Route the wire through the protective boot over the stud. For a one wire alternator you will not use this wire.

Run the red 12V battery wire with the brown fusible link from your starter BAT stud to its mating wire located in the Power and Brake connection branch. You will need to install appropriate connectors to the end once this is cut to the correct length.

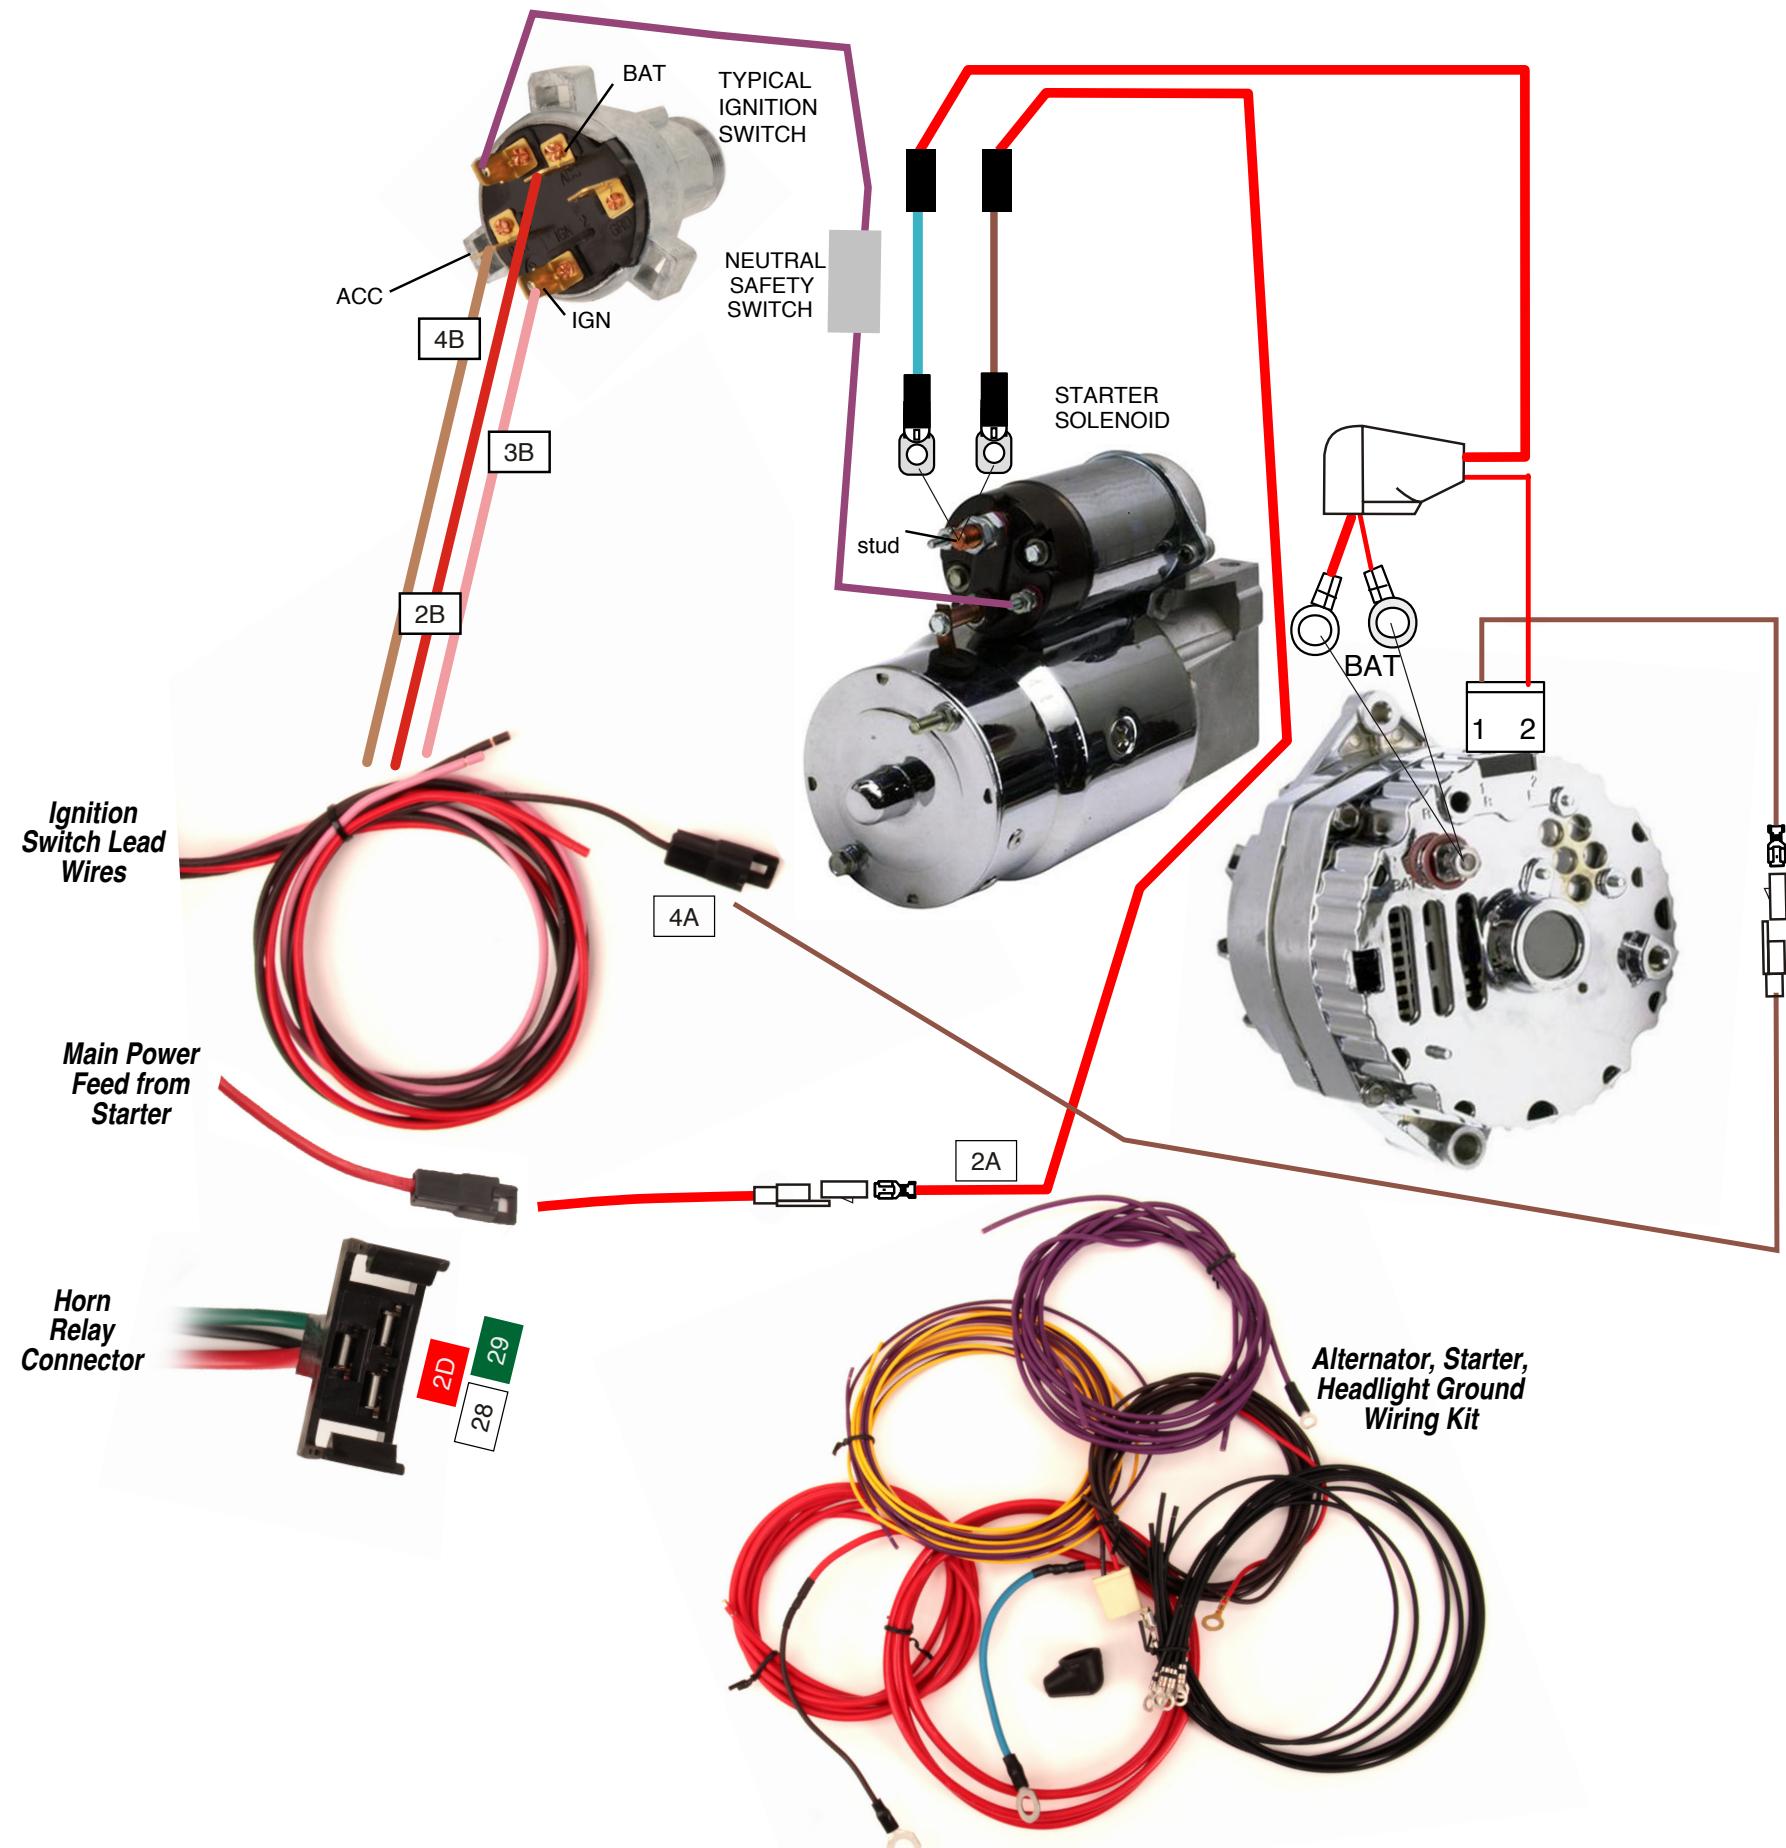

INSTRUCTIONS




© 2021, Speedway Motors, Inc.

22 Circuit Wiring Kit Instructions 910-64022

TURN SIGNAL SWITCH CONNECTIONS


This kit was designed to function with a factory GM style switch and column plug. It plugs into the 3-7/8" plug found on GM columns from 1969-1974. It is found on a majority of after market columns including Speedway's Tilt Columns such as p/n 910-32972

If you are using a later 1975 and on column we have included a connector to convert over to the required style. The columns use the same pin out locations making the swap easy; please follow the wiring table below to install the adapter plug on a column.

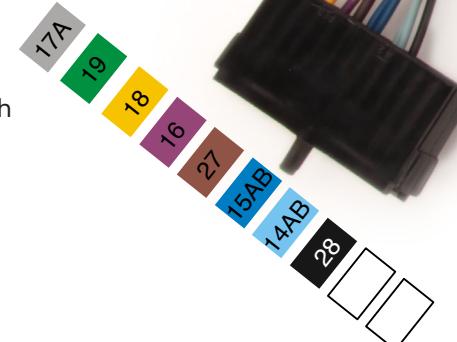

Ground
150

Ignition Switch, Signals, Radio and Heater

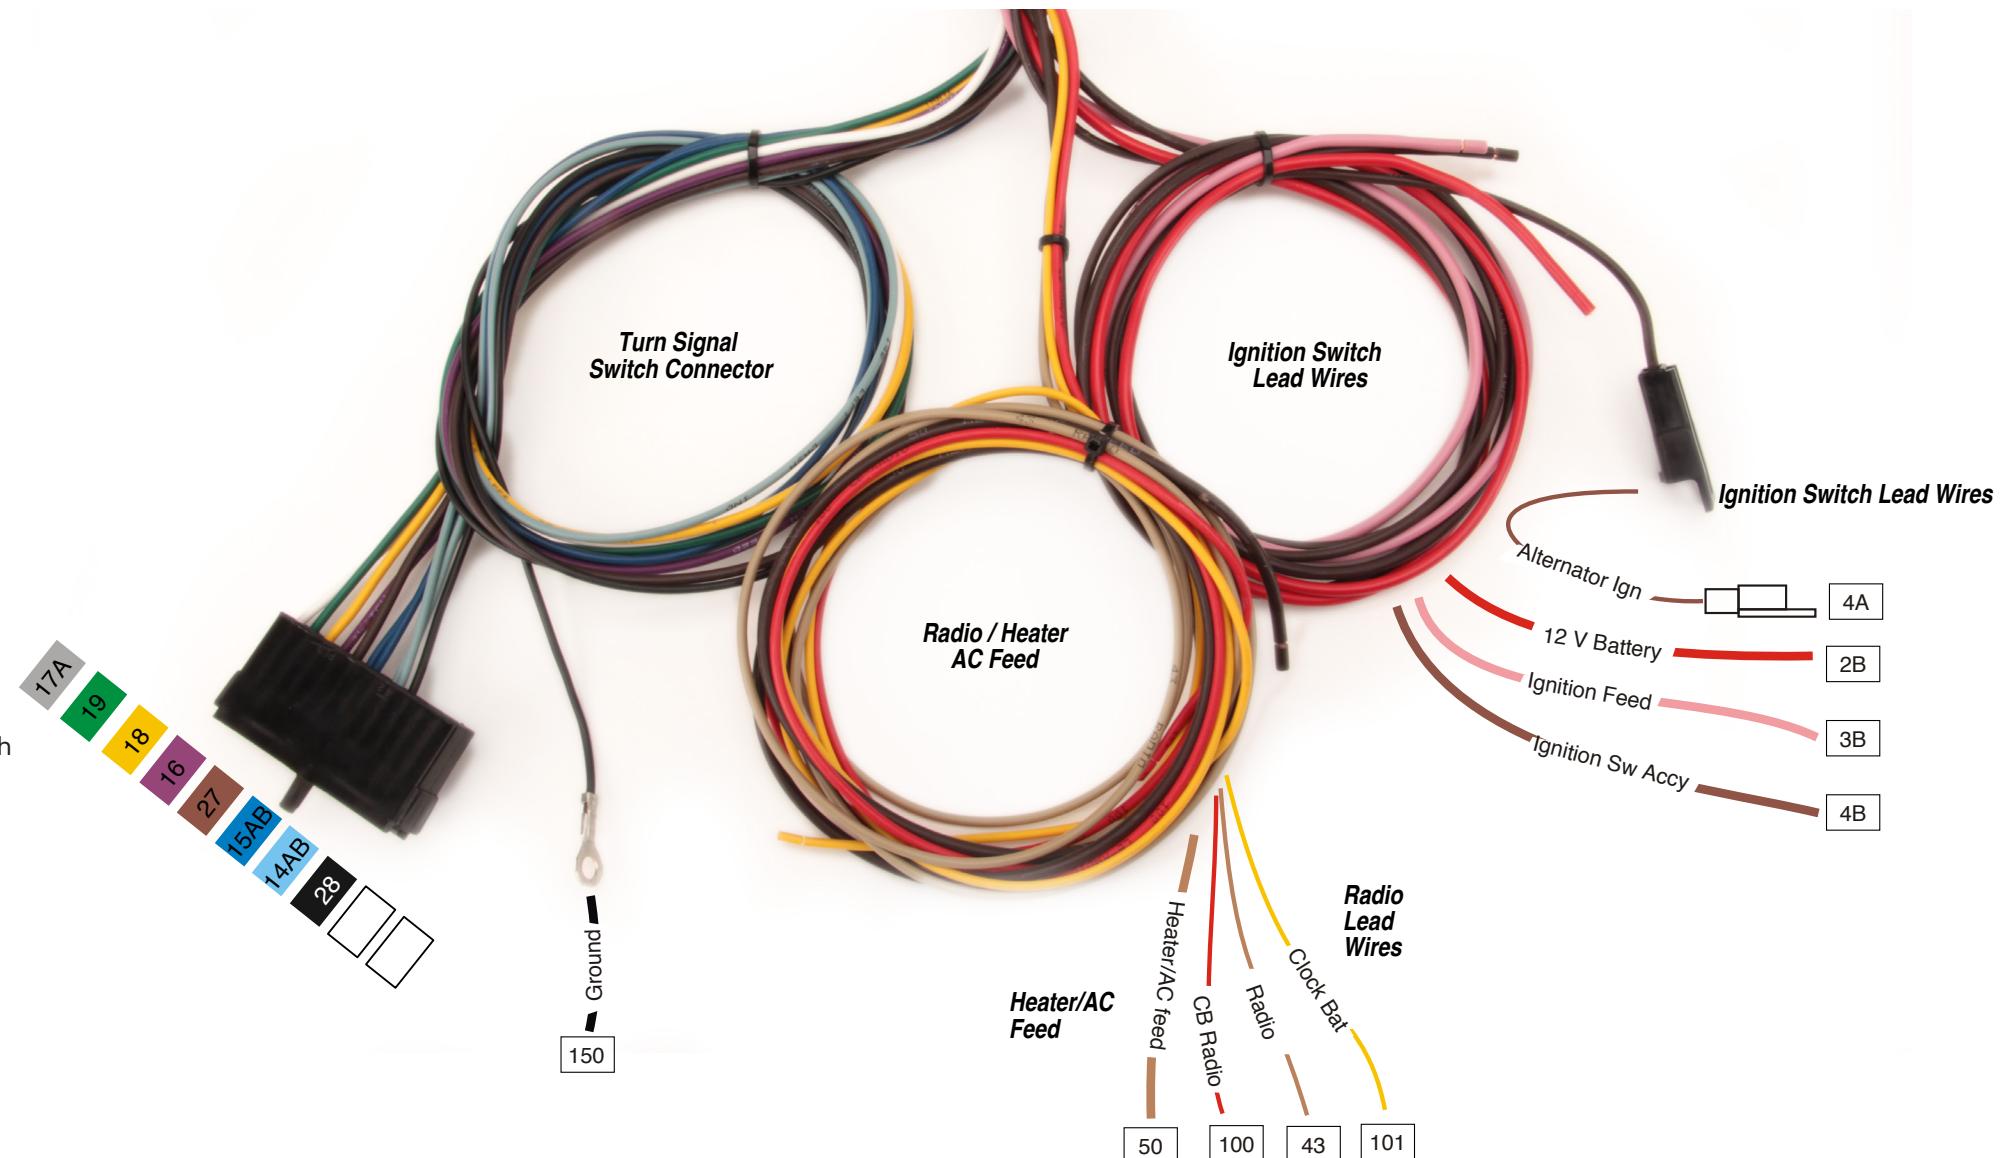

RADIO AND HEATER CONNECTIONS

Run the brown heater/ac wire [50] to a heater/ac control unit. Follow instructions provided by manufacturer for proper connection.

Run the red CB radio wire [100] to a cb radio or any sort of accessory that requires a fused ignition power source.

Run the tan radio wire [43] to the radio main power. Follow instructions provided from radio manufacture for proper connections.

Run the yellow clock-bat wire [101] to a clock or battery feed for the radio. Follow instructions provided by radio manufacturer for proper connection.

INSTRUCTIONS

© 2021, Speedway Motors, Inc.



22 Circuit Wiring Kit Instructions 910-64022

General Purpose Functions


Ignition Switch Connection Kit

GM Column Mount
910-64027-3

COLUMN MOUNTED IGNITION SWITCH [GM STYLE]

Use supplied harness plugs and the appropriate wiring diagram for your switch to determine which wires will go where. GM used multiple style switches with different wiring pin outs; please verify which style you need. Our cavity diagram is a generic one that is common for most GM vehicles.

Once the wires are installed in their appropriate cavity, the white plug will be plugged into the switch first using the black connector to secure it in place. Even if there are no wires in the black pigtail plug in the connector to retain the white one.

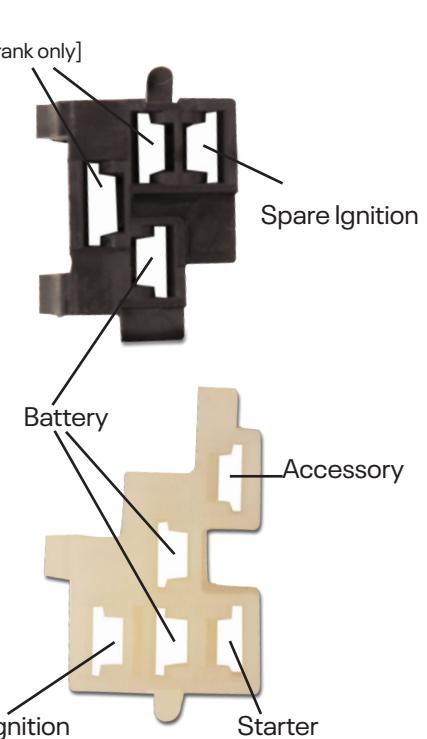


INSTRUCTIONS

© 2019, Speedway Motors, Inc.



Headlight Switch 910-64602

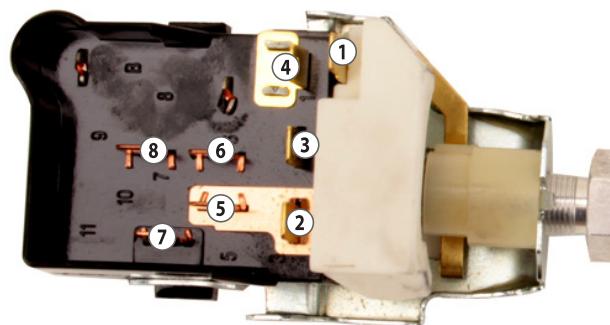

HEADLIGHT SWITCH

This switch must be grounded for the dome light to function.

To install the control knob push it directly into the front of the switch till you hear it click into place.

To remove the control knob, pull the knob to the furthest out position and press the button on top of the switch to pull the rest of the way out.

HEADLIGHT SWITCH CONNECTOR			
CONNECTION	WIRE #	COLOR	PRINTING
1	156	White	Dome Light Ground
2	9A	Brown	Alternate full-time front parking lamp (parking lights stay on with headlights)
3	8	Gray	Dash Panel Lights
4	2C	Red	Battery Feed
5	9B	Brown	Rear Tail Lamp
6	10	Yellow	Headlight Dimmer
7	40	Orange	Fused Battery Feed
8	Optional	Brown	Front Parking Lamp (parking lights off with headlights are on)


Dimmer Switch 910-64069-ZINC

DIMMER SWITCH

The left bottom wire will run to your low beam control circuit [tan wire #12]

The bottom right wires will run your high beam control circuit [green wires #11A and 11B]

The top wire will run to your headlight switch [yellow wire #10]

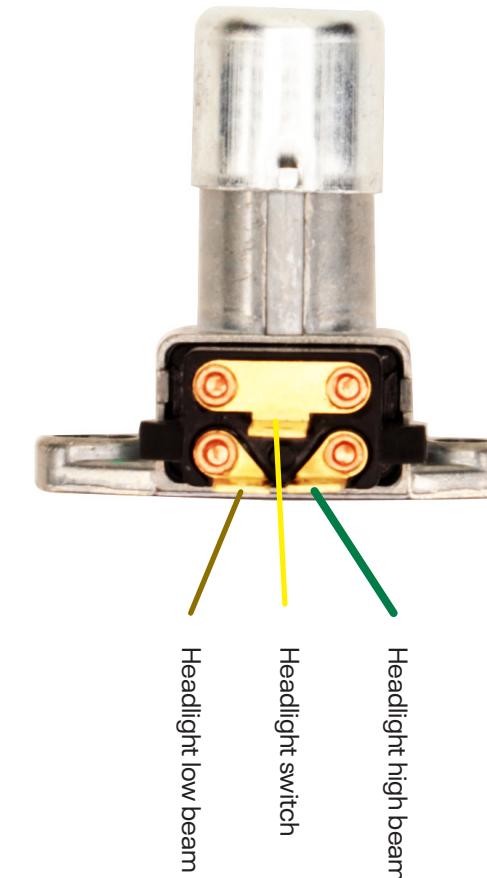

DISCLAIMER In an effort to offer our customers low prices, quick service and great value, Speedway Motors reserves the right to change suppliers, specifications, colors, prices, materials without notice. Prices and policies that were current and in effect at the time of printing are also subject to change without notice. Quantities are limited on some items. Any unauthorized use of this catalog including words, photos or drawings is prohibited. Speedway is not responsible for any typographical errors, printing errors or misinterpretations.

WARRANTY DISCLAIMER Purchasers understand and recognize that racing parts, specialized street rod equipment, and all other parts and services sold by Speedway Motors, Inc. are exposed to many and varied conditions due to the manner in which they are installed and used. Except for certain limited warranties, if any, set forth in Speedway Motors, Inc.'s current catalog with respect to the products and/or parts thereof identified on your invoice, each product, and each part thereof, is sold "as is", and "with all faults" and Speedway Motors, Inc. makes no warranties either expressed or implied, written or oral, regarding such products and services including, without limitation, any warranty of merchantability or fitness for a particular purpose. Without limiting the foregoing, there is no warranty expressed or implied as to whether the goods sold hereby will protect purchasers or ultimate end-users of such products and parts from injury or death. In no event shall Speedway Motors, Inc. be liable for any special, incidental or consequential damages, or any other damages whatsoever arising out of or connected with the use or misuse of the products and each part thereof. Purchasers acknowledge and agree that no person, entity or agent of Speedway Motors, Inc. has any authority to make any statement contrary to this disclaimer and that any warranty statements or representations allegedly made on behalf of Speedway Motors, Inc. by any such person, entity or agent are void. Purchasers are relying solely on their own skill and judgment to select, purchase and use suitable products and assume all responsibility and risk with regard thereto. Some local laws prohibit the use of utility jugs, funnels and barrel pumps for dispensing fuel. Please check your own state for more information, regulations or further direction in your use of the utility jugs, funnels and barrel pump described in Speedway's catalogs or on Speedway Motors websites. Some parts in this catalog are not legal for sale or use in California. Items sold in this catalog are for racing vehicles which may never be used on a highway. The use of manufacturer's names and symbols are for reference purposes only.

DAMAGE CLAIMS Please inspect all packages upon delivery and in the presence of the delivery driver when possible. The driver must note any visible damage and provide procedures for handling damage claims. To allow for a claims process, please retain original box, packing material and damaged merchandise. Contact Speedway Motors for instructions regarding damage claim within 5 days of receipt. Speedway Motors assumes no liability after this period.

SHORTAGES Please check the contents of your delivery to ensure that all parts ordered are received. Refer to your invoice to cross check all items received and

IMPORTANT

inspect all packing materials for contents of small items. Retain original shipping box and packing materials. Orders may be split into multiple boxes which can be delivered on different days. Contact Speedway Motors for instructions regarding shortage claim within 5 days of receipt. Speedway Motors assumes no liability after this 5 day period.

REFUSALS All refused packages will be billed the freight to and from the destination and refused COD orders will be billed a 15% restocking charge plus freight to and from destination.

WARRANTY CLAIMS If the item is used or installed and a warranty claim request is submitted, warranty work is done by the manufacturer and may take up to 30 days for processing. Speedway Motors will be required to follow the manufacturer's warranty instructions to allow for a credit refund or exchange when specified.

RETURNS We want you to be satisfied with your purchase. If you are not satisfied, you may return your new, unused item within 60 days for refund or exchange.

All exchanged or returned merchandise must be in original factory condition with no modifications or alterations. Returned merchandise must include original packaging materials, warranty cards, manuals, instructions, etc. If the returned item requires repackaging, your refund / exchange will be subject to a repackaging charge. Return/ Exchange transactions less than \$99 are excluded from the free shipping offer.

HOW TO RETURN AN ITEM Please re-pack the item in a sturdy box, include a copy of your invoice and completed return form. Returns must be shipped prepaid. CODs are not accepted. Shipping costs for exchanged merchandise will be charged to your credit card.

Items that are returned after 60 days are subject to a 15% restocking charges. Fiberglass items returned will be subject to a 15% restocking charge. We are unable to accept returns on electrical parts, video tapes, DVD's, books, special order or closeout merchandise.

Find the above info on our website:
SpeedwayMotors.com/Info/FAQ

Speedway Motors, Inc.
P.O. Box 81906 • Lincoln, NE 68501
800.979.0122 • SpeedwayMotors.com

