


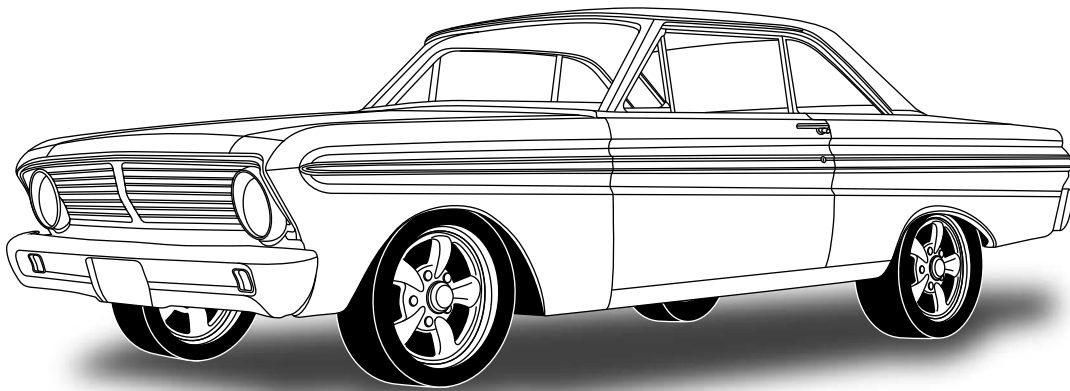

1964-65 Ford Falcon, Ranchero

**Gen 5 Evaporator Kit
(554953)
(554954)**



**18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com**



www.vintageair.com

Table of Contents

Cover.....	1
Table of Contents.....	2
Packing List/Parts Disclaimer.....	3
Information Page.....	4
Wiring Notice.....	5
Engine Compartment Disassembly, Condenser Assembly and Installation, Compressor and Brackets.....	6
Passenger Compartment.....	7
Defrost Duct Installation, Fresh Air Cap Installation.....	8
Evaporator Bracket, Evaporator Hardline & Heater Hose Fitting Installation.....	9
Evaporator Bracket, Evaporator Hardline & Heater Hose Fitting Installation (Cont.).....	10
Firewall Modification, Firewall Cover Installation.....	11
Evaporator Installation.....	12
Drain Hose Installation, Lubricating O-rings, A/C Hose Installation.....	13
Heater Hose & Heater Control Valve Installation, A/C and Heater Hose Routing.....	14
Driver Side Under Dash Louver Installation, Center/Passenger Side Under Dash Louver Installation.....	15
Louver Installation.....	16
Final Steps: Installation Check.....	17
Final Steps: Completing the Install.....	18
Duct Hose Routing.....	19
Quality Crimp Guideline.....	20
Gen 5 Wiring Diagram.....	21
Gen 5 Wiring Connection Instruction.....	22
Operation of Controls.....	23
Troubleshooting Guide.....	24
Troubleshooting Guide (Cont.), Advanced Diagnostics and Troubleshooting Guide.....	25
Packing List.....	26



www.vintageair.com

Packing List: Evaporator Kit (554953)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Super Magnum Evaporator Module
2.	1	784953	Accessory Kit with Conversion Control


**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

1

Gen 5 Super Magnum
Evaporator Module
765200



2

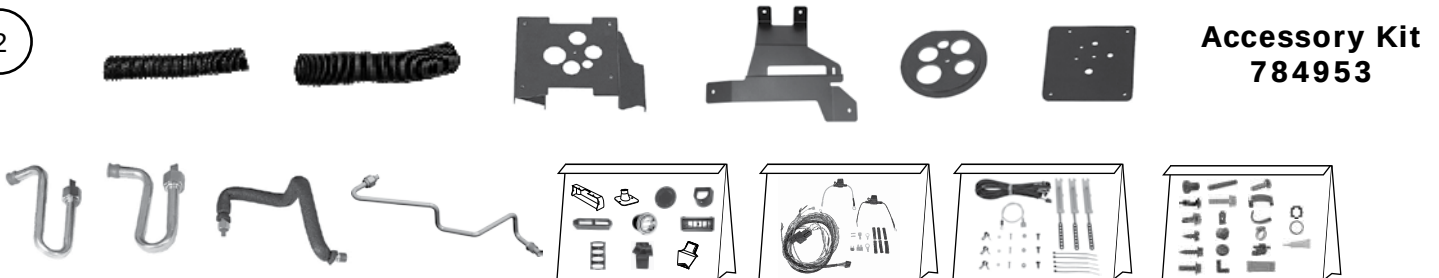

NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.

Packing List: Evaporator Kit (554954)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Super Magnum Evaporator Module
2.	1	784954	Accessory Kit with Deluxe Control


**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

1

Gen 5 Super Magnum
Evaporator Module
765200



2

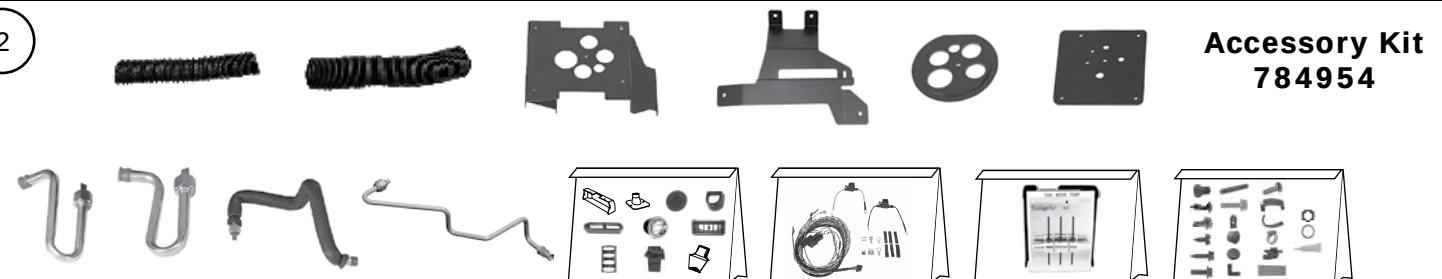

NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.



www.vintageair.com

Important Notice—Please Read

For Maximum System Performance, Vintage Air Recommends the Following:

NOTE: Vintage Air systems are designed to operate with R134a refrigerant only. Use of any other refrigerant could damage your A/C system and/or vehicle, and possibly cause a fire, in addition to potentially voiding the warranties of the A/C system and its components.

Refrigerant Capacities:

Vintage Air System: 1.8 lbs. (28.8 oz.) or 816 grams of **R134a**, charged by weight with a quality charging station or scale. **NOTE: Use of the proper type and amount of refrigerant is critical to system operation and performance.**

Other Systems: Consult manufacturer's guidelines.

Lubricant Capacities:

New Vintage Air-Supplied Sanden Compressor: No additional oil needed (Compressor is shipped with proper oil charge).

All Other Compressors: Consult manufacturer (Some compressors are shipped dry and will need oil added).

Safety Switches

Your Vintage Air system is equipped with a binary pressure safety switch. A binary switch disengages the compressor clutch in cases of extreme low pressure conditions (refrigerant loss) or excessively high head pressure (406 PSI) to prevent compressor damage or hose rupture. A trinary switch combines Hi/Lo pressure protection with an electric fan operation signal at 254 PSI, and should be substituted for use with electric fans. Compressor safety switches are extremely important since an A/C system relies on refrigerant to circulate lubricant.

Service Info:

Protect Your Investment: Prior to assembly, it is critical that the compressor, evaporator, A/C hoses and fittings, hardlines, condenser and receiver/drier remain capped. Removing caps prior to assembly will allow moisture, insects and debris into the components, possibly leading to reduced performance and/or premature failure of your A/C system. This is especially important with the receiver/drier.

Additionally, when caps are removed for assembly, **BE CAREFUL!** Some components are shipped under pressure with dry nitrogen.

Evacuate the System for 35-45 Minutes: Ensure that system components (Drier, compressor, evaporator and condenser) are at a temperature of at least 85°F. On a cool day, the components can be heated with a heat gun **or** by running the engine with the heater on before evacuating. Leak check and charge to specifications.

Bolts Passing Through Cowl and /or Firewall:

To ensure a watertight seal between the passenger compartment and the vehicle exterior, for all bolts passing through the cowl and/or firewall, Vintage Air recommends coating the threads with silicone prior to installation.

Heater Hose (not included with this kit):

Heater hose may be purchased from Vintage Air (Part#31800-VUD) or your local parts retailer. Routing and required length will vary based on installer preference.

Important Wiring Notice—Please Read

Some vehicles may have had some or all of their radio interference capacitors removed. There should be a capacitor found at each of the following locations:

- 1. On the positive terminal of the ignition coil.**
- 2. If there is a generator, on the armature terminal of the generator.**
- 3. If there is a generator, on the battery terminal of the voltage regulator.**

Most alternators have a capacitor installed internally to eliminate what is called “whining” as the engine is revved. If whining is heard in the radio, or just to be extra cautious, a radio interference capacitor can be added to the battery terminal of the alternator.

It is also important that the battery lead is in good shape and that the ground leads are not compromised. There should be a heavy ground from the battery to the engine block, and additional grounds to the body and chassis.

If these precautions are not observed, it is possible for voltage spikes to be present on the battery leads. These spikes come from ignition systems and charging systems, and from switching some of the vehicle’s other systems on and off. Modern computer-operated equipment can be sensitive to voltage spikes on the power leads, which can cause unexpected resets, strange behavior and/or permanent damage.

Vintage Air strives to harden our products against these types of electrical noise, but there is a point where a vehicle’s electrical system can be degraded so much that nothing can help.

Radio interference capacitors should be available at most auto and truck parts suppliers. They typically are cylindrical in shape, a little over an inch long and a little over a half-inch in diameter, and they have a single lead coming from one end of the cylinder with a terminal on the end of the wire, as well as a mounting clip which is screwed into a good ground on the vehicle. The specific value of the capacitance is not too significant in comparison to ignition capacitors that are matched with the coil to reduce pitting of the points.

- Care must be taken, when installing the compressor lead, not to short it to ground. The compressor lead must not be connected to a condenser fan or to any other auxiliary device. Shorting to ground or connecting to a condenser fan or any other auxiliary device may damage wiring or the compressor relay, and/or cause a malfunction.
- When installing ground leads on Gen 5 systems, the blower control ground and ECU ground must be connected directly to the negative battery post.
- For proper system operation, the heater control valve must be connected to the ECU.



www.vintageair.com

Engine Compartment Disassembly

NOTE: Before starting the installation, check the function of the vehicle (horn, lights, etc.) for proper operation, and study the instructions, illustrations, & diagrams.

Perform the Following:

1. Disconnect battery.
2. Remove battery (retain) (See Photo 1, below).
3. Drain radiator.
4. Remove radiator, OEM fan and fan shroud (retain) (See Photo 1, below). **NOTE: If the V-belt pulley system is being used, then 2-groove pulleys will need to be installed on the water pump and crankshaft. Therefore the radiator, fan shroud, and fan will need to be removed but retained.**
5. Remove OEM heater hoses (discard) (See Photo 1, below).
6. Remove OEM blower assembly (discard) (See Photos 1 and 2, below).
7. Remove OEM heater wiring (discard).

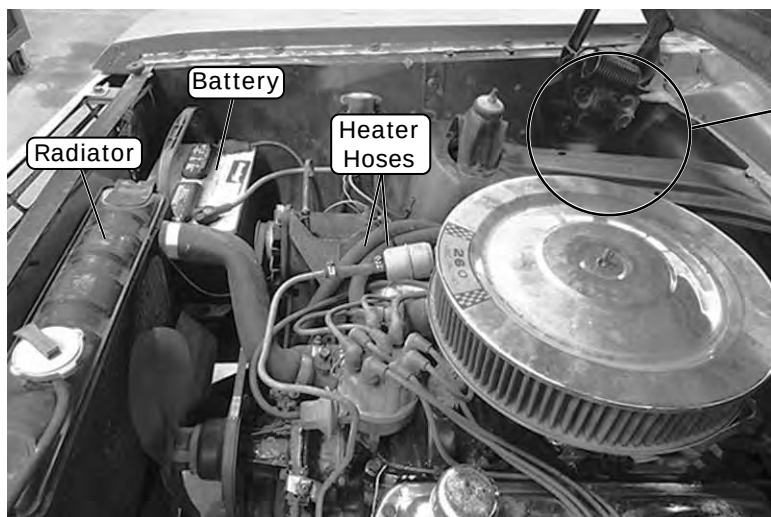


Photo 1

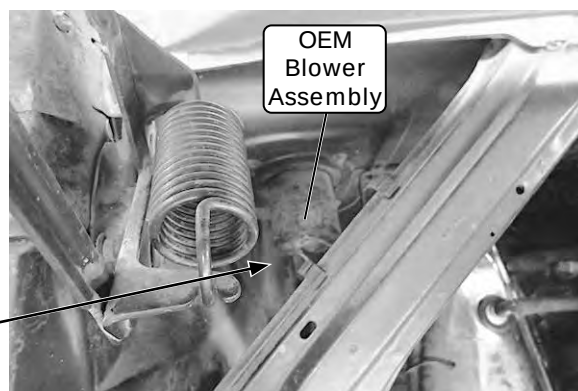


Photo 2

Condenser Assembly and Installation

1. Refer to separate instructions included with the condenser kit to install the condenser.
2. Binary switch installation (Refer to condenser instructions).

Compressor and Brackets

1. Refer to separate instructions included with the bracket kit to install the compressor bracket.

Pulleys

1. Install 2-groove pulleys (if required) on the water pump and crankshaft. **NOTE: The 2-groove V-belt pulleys are not part of the kit, but are available from Vintage Air (Part numbers 730002 and 730003). Refer to compressor bracket kit 131107 for the Small Block Ford.**



www.vintageair.com

Passenger Compartment Disassembly

Perform the Following:

1. Remove glove box door (retain) (See Figure 1, below).
2. Remove glove box (discard) (See Figure 1, below).
3. Remove under-dash A/C evaporator (if equipped) (discard) (See Figure 1, below).
4. Remove OEM heater assembly (discard) (See Figure 2, below).
5. Remove driver-side fresh air assembly with cable (discard) (See Figure 2, below).
6. Remove OEM control panel assembly & radio (retain) (See Figure 2, below).
7. Remove speaker grille (retain) (See Figure 2, below).
8. Remove OEM duct hoses from defrost ducts (discard) (See Figure 2, below).
9. Remove OEM defrost ducts (discard) (See Figure 2, below).

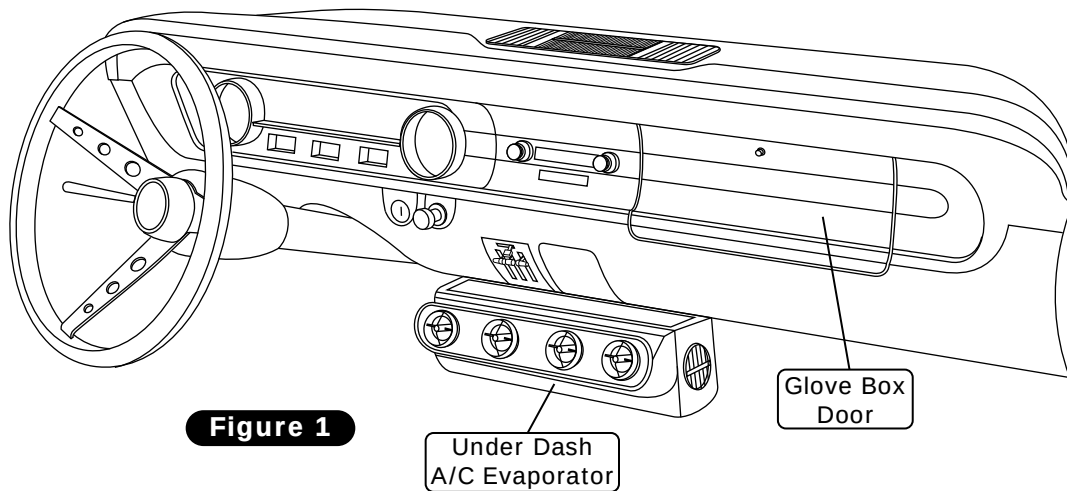


Figure 1

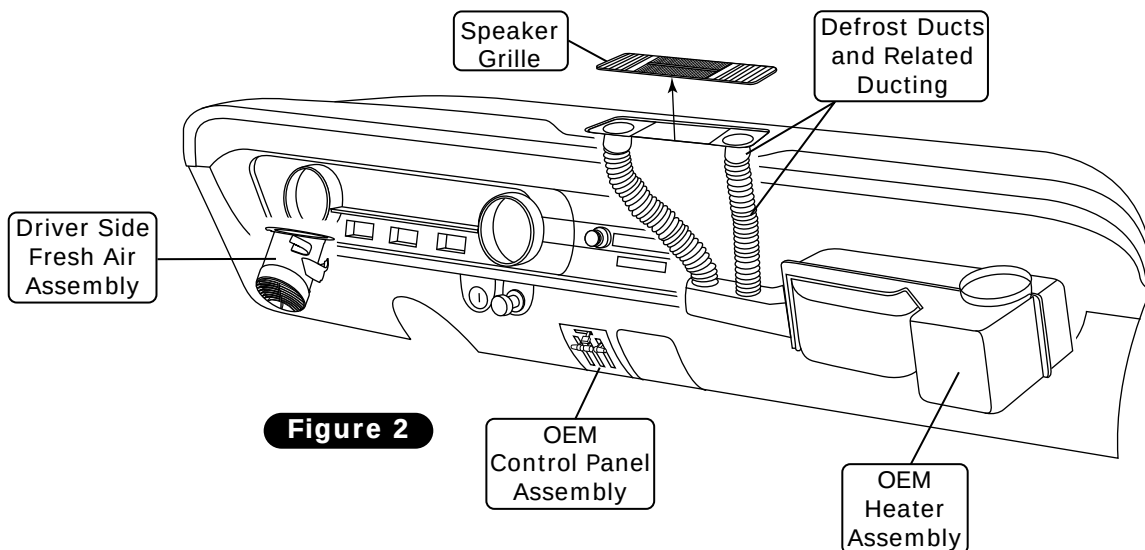


Figure 2



www.vintageair.com

Firewall Modification and Insulation

NOTE: The firewall requires modification for the drain hose to be installed. For proper system operation, Vintage Air recommends using heat-blocking insulation in the area around the evaporator unit (firewall, kick panel, inner cowl, firewall covers). Due to tight clearance for the evaporator unit between the firewall and dash, Vintage Air recommends an insulation thickness of no more than 1/4". Vintage Air recommends using Dynaliner #461501-VIP. To ensure a watertight seal between the passenger compartment and the vehicle exterior, for all bolts passing through the firewall, Vintage Air recommends coating the threads with silicone prior to installation.

Perform the following:

1. Using the bottom-left OEM mounting hole, measure 2 1/2" down and 1 1/2" to the right. Mark and drill a 5/8" hole for the drain tube (See Photos 1 and 2, below). **NOTE: To ensure a tight fit for the drain hose, do not enlarge the drain hole more than 5/8". Install heat-blocking insulation onto the firewall at this time.**
2. From the engine compartment, install (2) 1" plastic plugs into the OEM heater hose exits on the firewall (See Photo 3, below).

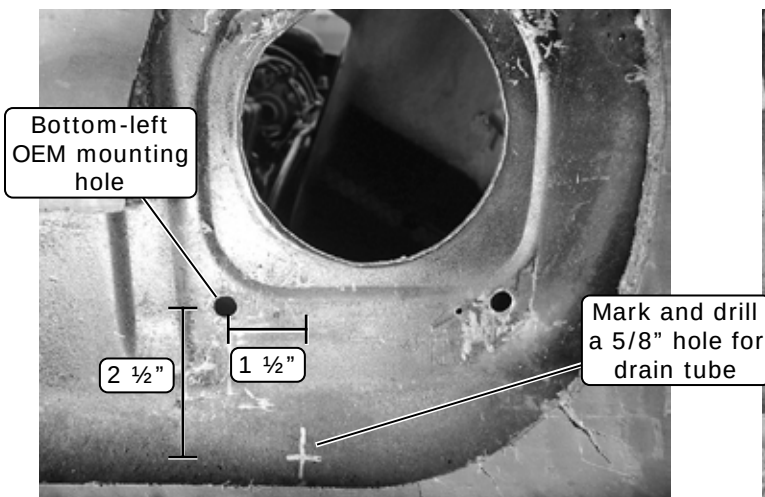


Photo 1



Photo 2

From engine compartment, install (2) 1" plastic plugs into OEM heater hose exits on firewall

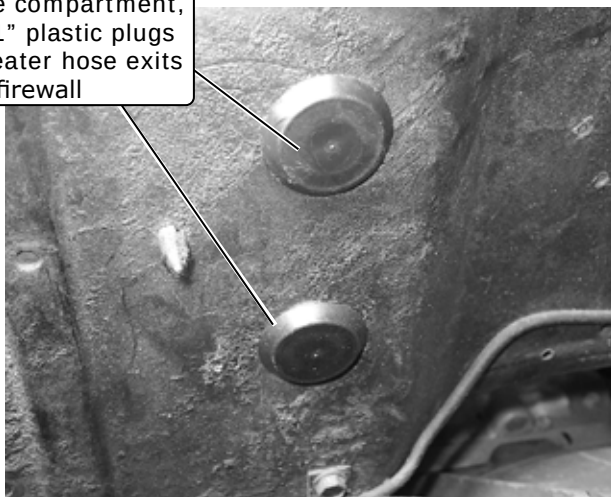


Photo 3



www.vintageair.com

Defrost Duct Installation

1. Install driver and passenger side defrost ducts using (4) U-nuts and (4) #8 x 1/2" pan head screws (See Figure 1, below). **NOTE: Before installing the driver side duct, attach approximately 24" of the 2" duct hose to the defrost duct. Feed the duct hose into the driver side opening on top of dash and finally attach the defrost duct.**
2. Reinstall speaker grille (See Figure 1, below).

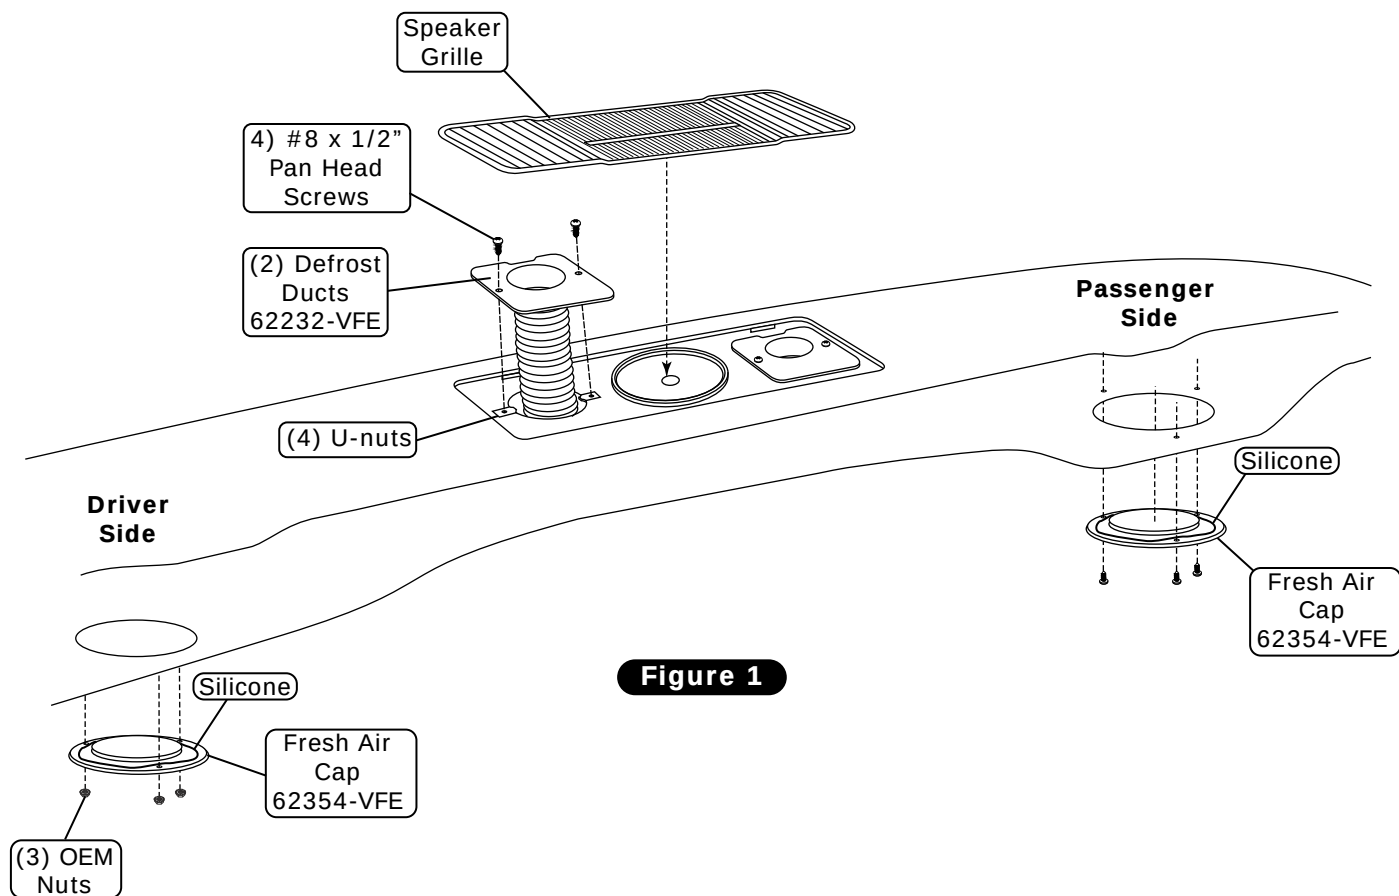


Figure 1

Fresh Air Cap Installation

Passenger Side:

1. Hold the fresh air cap under the dash and mark the (3) mounting holes as shown in Figure 3, above.
2. Drill (3) 1/8" mounting holes under the dash as shown in Figure 3, above.
3. Apply a 1/4" bead of silicone around the back side of the fresh air cap as shown in Figure 3, above.
4. Secure the fresh air cap to the fresh air hole using (3) #10 x 1/2" sheet metal screws as shown in Figure 3, above.

Driver Side:

1. Apply a 1/4" bead of silicone around the back side of the fresh air cap as shown in Figure 3, above.
2. Install the fresh air cap using OEM nuts as shown in Figure 3, above.



www.vintageair.com

Evaporator Preparation

Perform the following on a workbench:

1. Install (3) 1/2" plastic plugs into the back of the evaporator module (See Photos 1, 2, 3 and 4, below).
2. With a properly lubricated #6 O-ring, (See Lubricating O-rings, Page 13), loosely install the #6 liquid hardline onto the #6 fitting on the block valve adapter (See Photo 5, below).
3. With a properly lubricated #10 O-ring, (See Lubricating O-rings, Page 13), loosely install the lower heater hardline onto the lower heater fitting (See Photo 6, below).
4. With a properly lubricated #10 O-ring, (See Lubricating O-rings, Page 13), loosely install the upper heater hardline onto the upper heater fitting (See Photo 7, below).
5. With a properly lubricated #10 O-ring, (See Lubricating O-rings, Page 13), loosely install the #10 suction hardline onto the #10 fitting on the block valve adapter (See Photo 8, below).

Install 1/2" plastic plug into back of evaporator unit

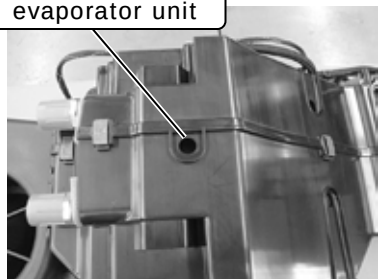


Photo 1

1/2" plastic plug



Photo 2

Install (2) 1/2" plastic plugs

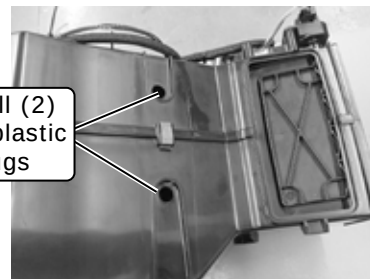


Photo 3

(2) 1/2" plastic plugs

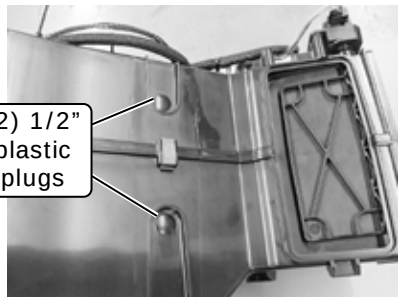


Photo 4

#6 Liquid Hardline 081967

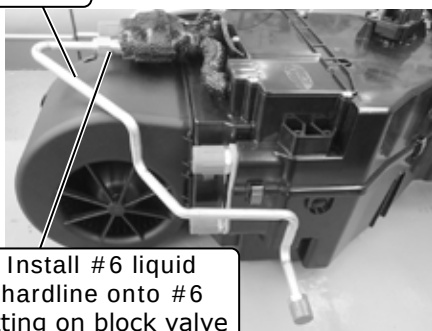


Photo 5

Install #6 liquid hardline onto #6 fitting on block valve

Lower Heater Hardline 081965

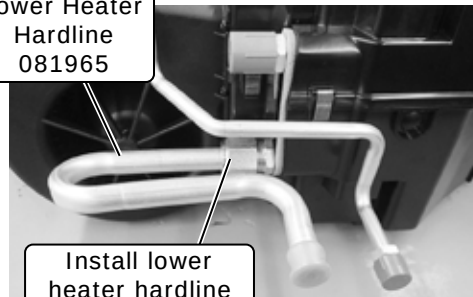


Photo 6

Install lower heater hardline onto lower heater fitting

Upper Heater Hardline 081964

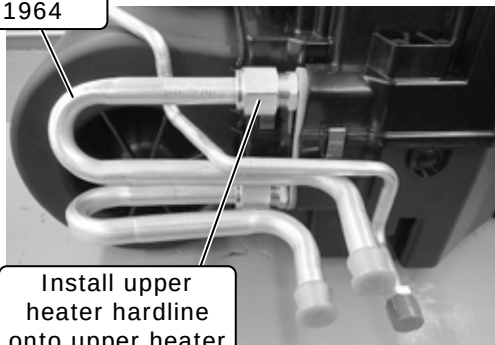


Photo 7

Install upper heater hardline onto upper heater fitting

#10 Suction Hardline 081966

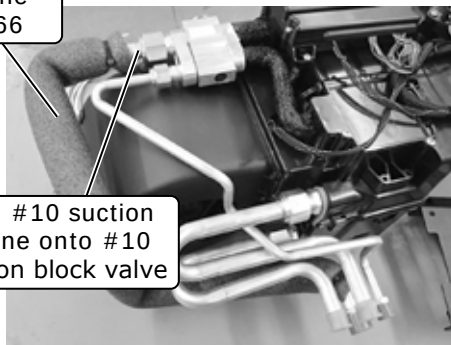


Photo 8

Install #10 suction hardline onto #10 fitting on block valve



www.vintageair.com

Evaporator Preparation (Cont.)

6. Place the evaporator firewall bracket over the evaporator hardlines, and adjust the hardlines so each hardline is centered in the bracket (See Photo 9, below). Remove the firewall bracket, then tighten the hardlines.
7. Wrap all exposed metal at the block fitting adapter of the #10 suction hardline with press tape (See Photos 10 and 11, below).
8. Route the heater control valve connector and wiring through the wiring opening on the firewall bracket (See Photo 12, below).
9. Install the firewall bracket onto the rear of the evaporator case and secure it using (4) #10 x 5/8" screws (See Photos 12, 13, 14 and 15, below).

Install evaporator firewall bracket over evaporator hardlines

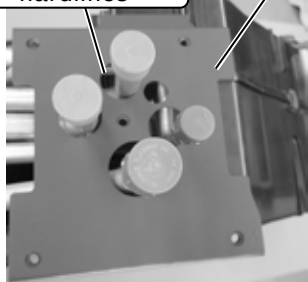


Photo 9

Evaporator Firewall Bracket 641963



Photo 10

Wrap all exposed metal at block fitting of #10 suction hardline with press tape

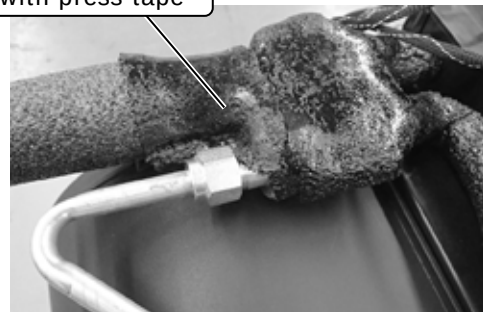


Photo 11

Install firewall bracket onto rear of evaporator case

Route heater control valve connector and wiring through firewall bracket

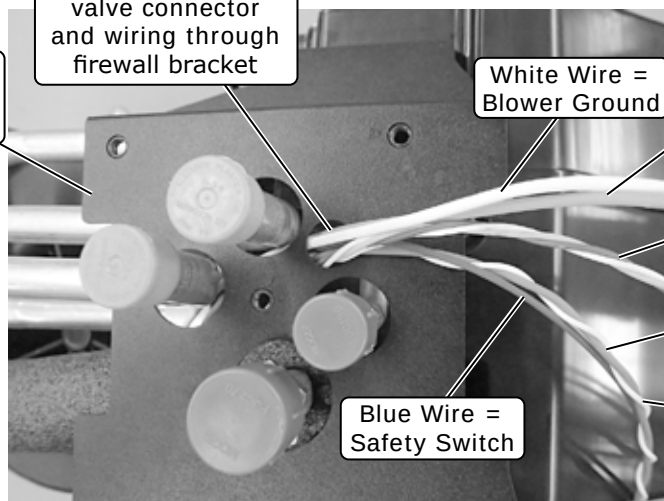


Photo 12

White Wire = Blower Ground

Orange Wire = Blower Power

White, Yellow, Purple Wires = Heater Control Wiring

Red Wire = ECU Power

White Wire = ECU Ground

Blue Wire = Safety Switch

Install firewall bracket onto rear of evaporator case



Photo 13

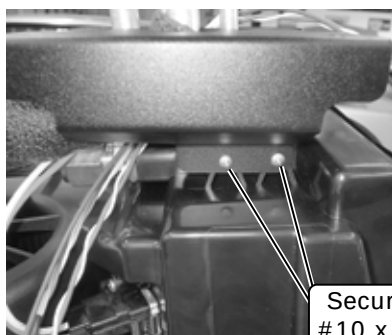


Photo 14

Secure using (4) #10 x 5/8" screws

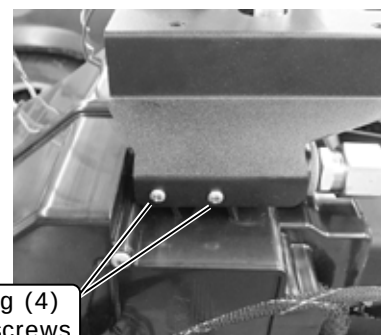










Photo 15



www.vintageair.com

Evaporator Preparation (Cont.)

10. Route the heater control valve connector and wiring through the firewall bracket rubber boot, then install it over the evaporator hardlines (See Photos 16 and 17, below).
11. Install (2) 1/4-20 x 1 1/2" full-length studs into the top mounting holes of the evaporator mounting bracket (See Photo 18, below).
12. Using (2) spring clips, install the floor plenum onto the back of the evaporator module (See Photos 19 and 20, below).
13. Using (4) spring clips, install the dash plenum (See Photos 21, 22 and 23, below).

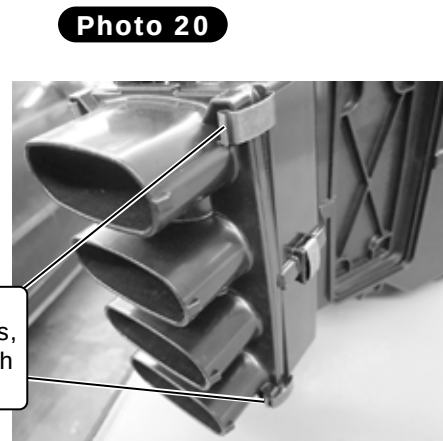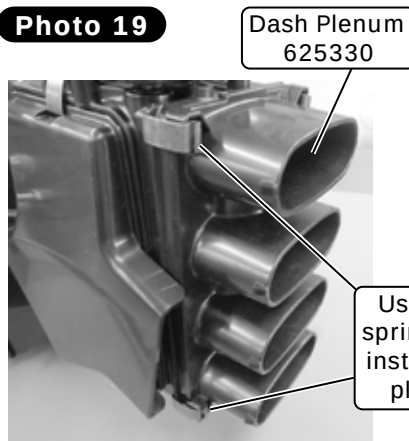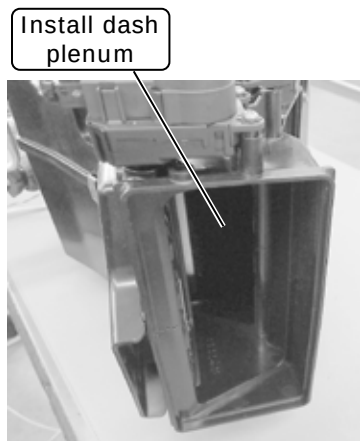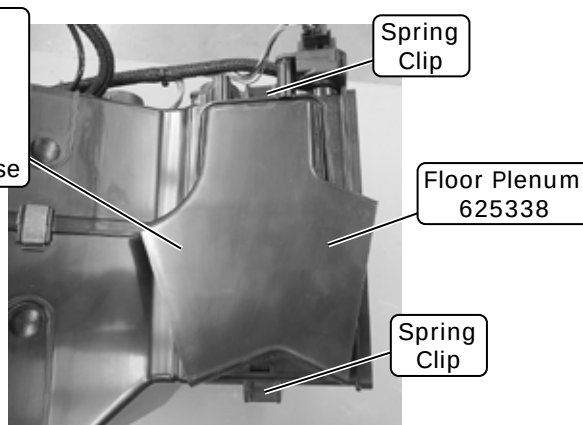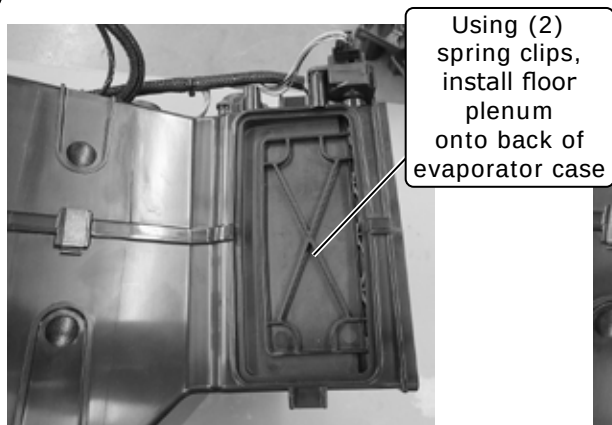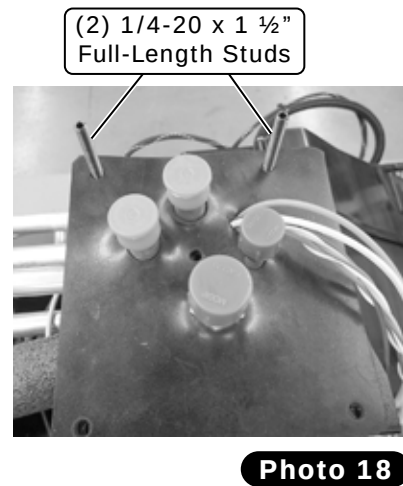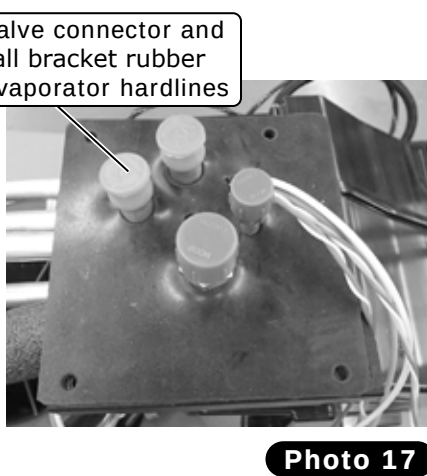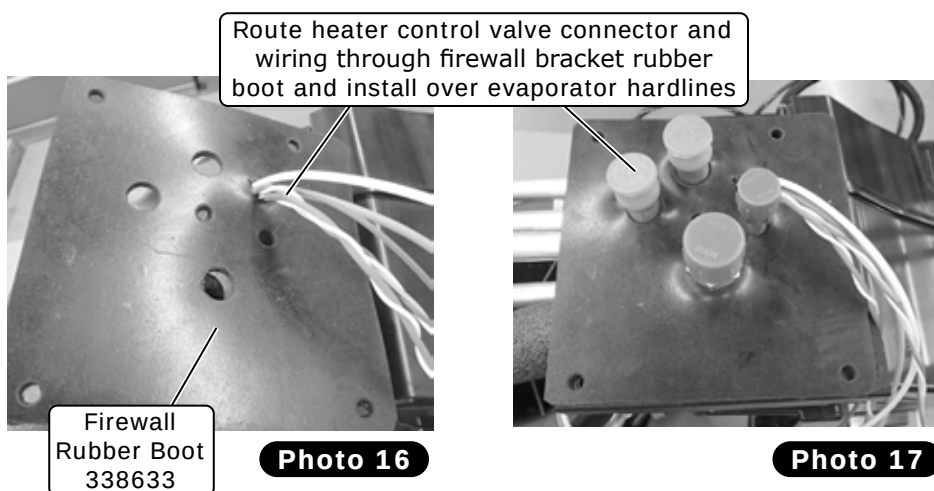



www.vintageair.com

Evaporator Preparation (Final)


14. Using (2) spring clips, install the defrost plenum onto the front of the evaporator module (See Photos 24 and 25, below).

Install defrost plenum onto front of evaporator module



Photo 24


Using (2) spring clips, install defrost plenum

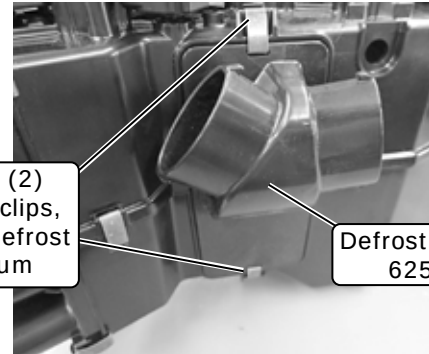


Defrost Plenum 625331

Photo 25


Lubricating O-rings

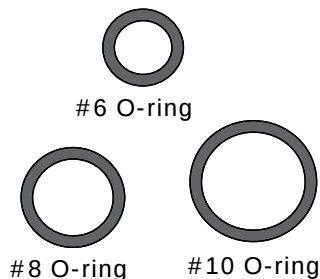


NOTE: Standard torque specifications:
 #6: 11 to 13 ft-lb.
 #8: 15 to 20 ft-lb.
 #10: 21 to 27 ft-lb.

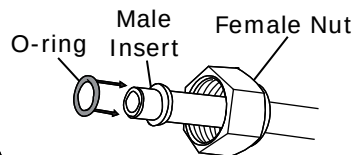

Refrigerant Oil for O-rings

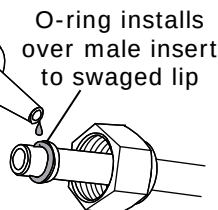

For a proper seal of fittings: Install supplied O-rings as shown and lubricate with refrigerant oil.

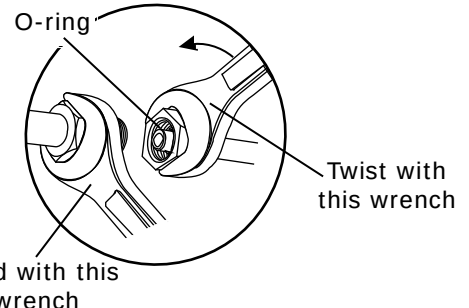

Properly Seated O-ring Land

When installing a hardline or A/C hose fitting onto the evaporator module, ensure the O-ring land is seated properly (See Photo 1, below). An improperly seated O-ring land (See Photo 2, below) can cause a leak. To properly install the fitting, slide the hardline or A/C hose nut back to expose the O-ring land and seat it onto the evaporator module fitting. Then, slide the hardline or A/C hose nut forward and thread it onto the evaporator module fitting, ensuring the O-ring land does not move or lift.

Properly Seated O-ring Land



Photo 1

Improperly Seated O-ring Land



Photo 2


NOTE: Photos shown are for reference only. Fittings may vary depending on kit received.



www.vintageair.com


Evaporator Installation (Passenger Compartment)

1. Place the evaporator unit on the passenger-side floorboard.
2. Route the heater control valve connector and wiring into the engine compartment through the large opening.
3. Lift the evaporator unit into position, using the (2) 1/4-20 x 1 1/2" full-length studs to locate the correct mounting position (See Photo 1, below).
4. Install (2) 1/4-20 well nuts into the front mounting locations (See Photos 2 and 3, below).
5. Using (2) 1/4-20 x 1" serrated flange bolts, install the evaporator dash bracket (See Photo 4, below).
6. Lift unit into position. Using the dash mounting bracket as a guide, mark and drill (2) 3/16" pilot holes into the cowl. Coat (2) #14 x 3/4" sheet metal screws with silicone, and secure the bracket into the cowl (See Photo 5, below).

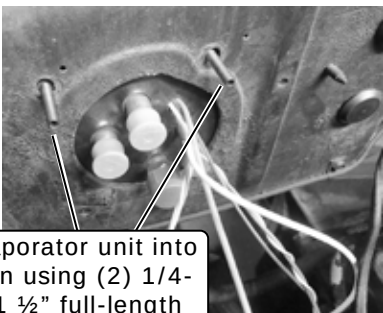


Lift evaporator unit into position using (2) 1/4-20 x 1 1/2" full-length studs to locate correct mounting position

Photo 1

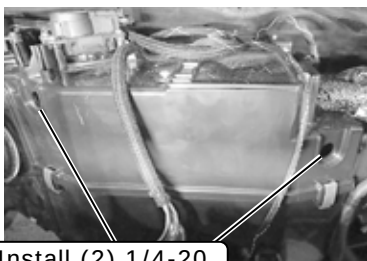


Install (2) 1/4-20 well nuts into front mounting locations

Photo 2

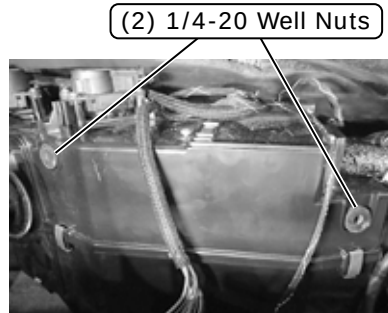

(2) 1/4-20 Well Nuts


Photo 3

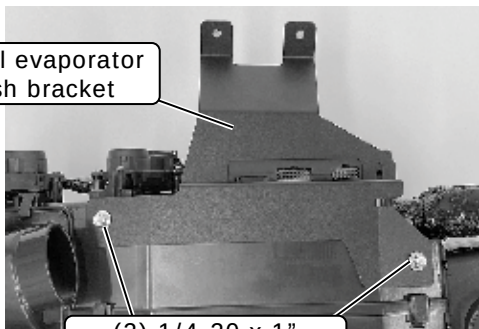

Install evaporator dash bracket

(2) 1/4-20 x 1" Serrated Flange Bolts

Photo 4

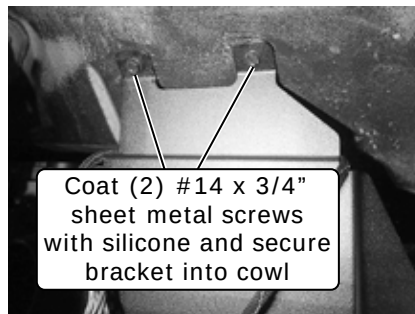


Coat (2) #14 x 3/4" sheet metal screws with silicone and secure bracket into cowl

Photo 5

Evaporator Installation (Engine Compartment)


1. Apply silicone to the mating surface of the firewall cover (See Photo 1, below).
2. Route the heater control valve plug and wiring through the firewall cover, then slide it into position over the hardlines (See Photo 2, below).

Apply silicone to mating surface of firewall cover

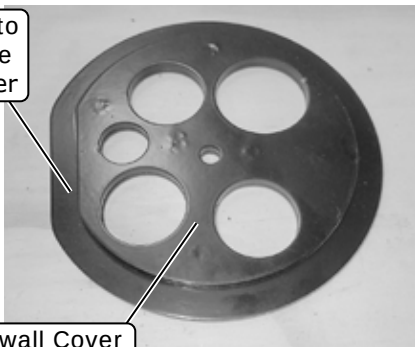

Firewall Cover 641968

Photo 1

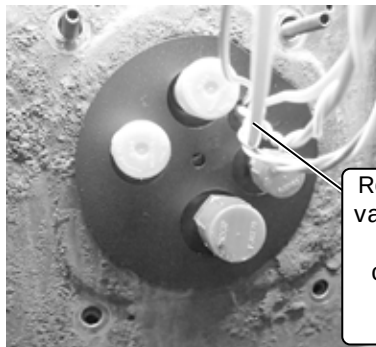

Route heater control valve plug and wiring through firewall cover, then slide it into position over hardlines


Photo 2



www.vintageair.com


Evaporator Installation (Engine Compartment) (Cont.)

- Loosely secure the firewall cover to the evaporator firewall bracket using a 1/4-20 x 3/4" hex washer bolt (See Photo 3, below).
- Loosely install (2) 1/4-20 x 3/4" hex washer bolts into the lower firewall bracket mounting holes on the firewall (See Photo 4, below). Remove the (2) 1/4-20 x 1 1/2" full-length studs and replace them with (2) 1/4-20 x 3/4" hex washer bolts (See Photo 4, below).
- Tighten all mounting hardware at this time.

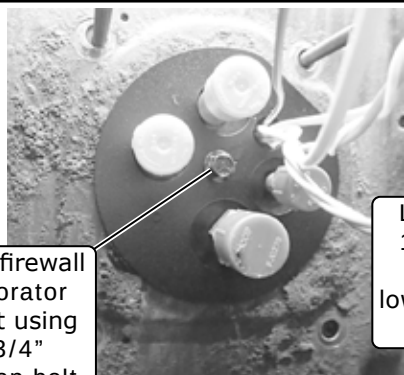

Loosely secure firewall cover to evaporator firewall bracket using a 1/4-20 x 3/4" serrated hex cap bolt

Photo 3

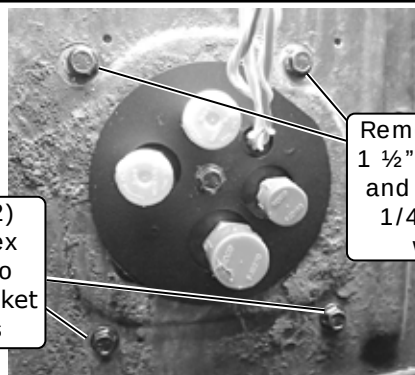

Loosely install (2) 1/4-20 x 3/4" hex washer bolts into lower firewall bracket mounting holes


Remove (2) 1/4-20 x 1 1/2" full-length studs and replace with (2) 1/4-20 x 3/4" hex washer bolts

Photo 4

Drain Hose Installation

- Cut the drain hose approximately 8". Install the drain elbow onto the remaining piece of hose (See Photo 1, below).
- Install the 8" piece of drain hose onto the evaporator drain at the bottom of the module, then route it through the 5/8" drain hole in the firewall (See Photo 2, below).
- In the engine compartment, connect the drain elbow to the drain hose (See Photo 3, below). **NOTE: Route the drain hose away from the exhaust.**

Drain Hose
31050-VUD

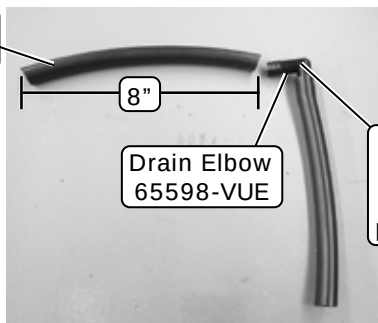

Drain Elbow
65598-VUE


Install drain elbow onto remaining piece of hose

Photo 1



Install 8" piece of drain hose onto evaporator drain at bottom of unit and route through 5/8" drain hole in firewall

Photo 2

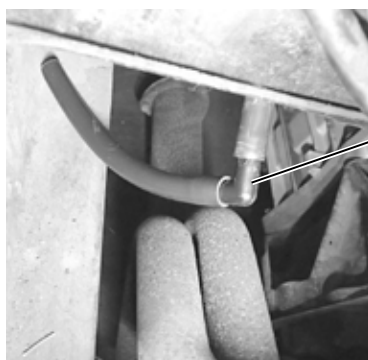

Connect drain elbow to drain hose

Photo 3



www.vintageair.com

A/C Hose Installation

Standard Hose Kit:

1. Locate the #8 compressor A/C hose. Lubricate (2) #8 O-rings (See Lubricating O-rings, Page 13), and connect the 135° fitting to the #8 discharge port on the compressor. Route the straight female fitting with service port to the #8 condenser hardline coming through the radiator core support (See Figure 1, Page 19). Tighten each fitting connection as shown in Lubricating O-rings, Page 13.
2. Locate the #10 compressor A/C hose. Lubricate (2) #10 O-rings (See Lubricating O-rings, Page 13), and connect the 90° female fitting with service port to the #10 suction port on the compressor. Route the 90° female fitting to the #10 evaporator hardline coming through the firewall (See Figure 1, Page 18, & Figure 1, Page 19). Tighten each fitting connection as shown in Lubricating O-rings, Page 13.
3. Locate the #6 evaporator/drier hose. Lubricate (2) #6 O-rings (See Lubricating O-rings, Page 13), and connect the 45° female fitting to the drier. Route the 90° female fitting to the #6 evaporator hardline coming through the firewall (See Page 17). Tighten each fitting connection as shown in Lubricating O-rings, Page 13.
4. Use (6) tie wraps to secure the #6 A/C hose to the brace as shown in Photo 4, Page 18.

Modified Hose Kit:

1. Refer to separate instructions included with modified hose kit.



www.vintageair.com

Heater Hose & Heater Control Valve Installation

NOTE: Vintage Air systems use 5/8" heater connections. On engines equipped with 3/4" hose nipples, these will need to be removed and replaced with 5/8" nipples (not supplied). For water pumps with a cast-in 3/4" heater outlet, a 3/4" x 5/8" reducer fitting (not supplied) or molded hose will need to be installed in the heater hose.

1. Route a length of heater hose from the lower heater hardline to the water pump fitting, then secure it using (2) hose clamps.
2. Cut a length of heater hose approximately 4" to 5" from the firewall cover, then install it onto the upper heater hardline. Install the heater control valve and secure it with (2) hose clamps. **NOTE: Ensure proper flow direction through the heater control valve. The flow direction follows the molded arrow on the valve (See Figure 1, below).**
3. Install another length of heater hose from the heater control valve to the intake, then secure it with (2) hose clamps.
4. Plug the heater control valve connector into the heater control valve connector wiring harness.

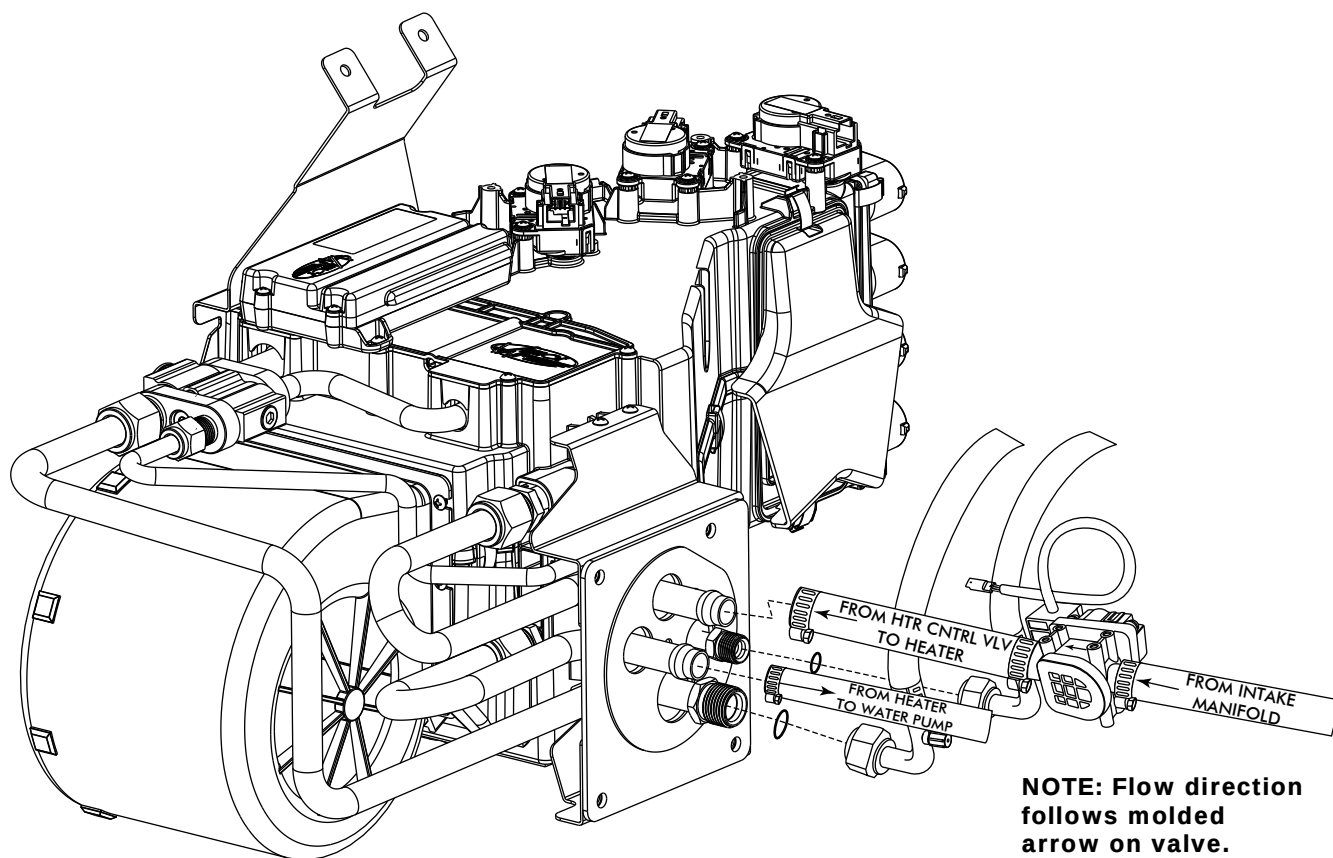


Figure 1



www.vintageair.com

A/C and Heater Hose Routing

**NOTE: Vintage Air Systems Require
(2) 5/8" Hose Nipples (Not Supplied).**

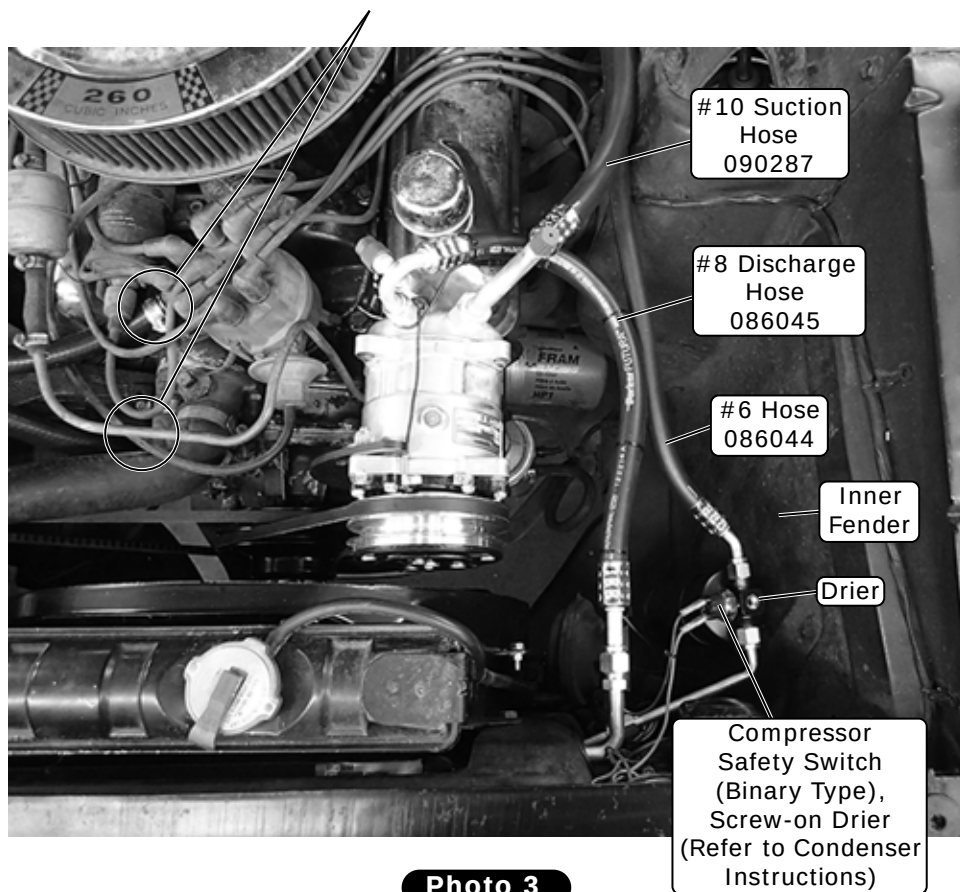


Photo 3

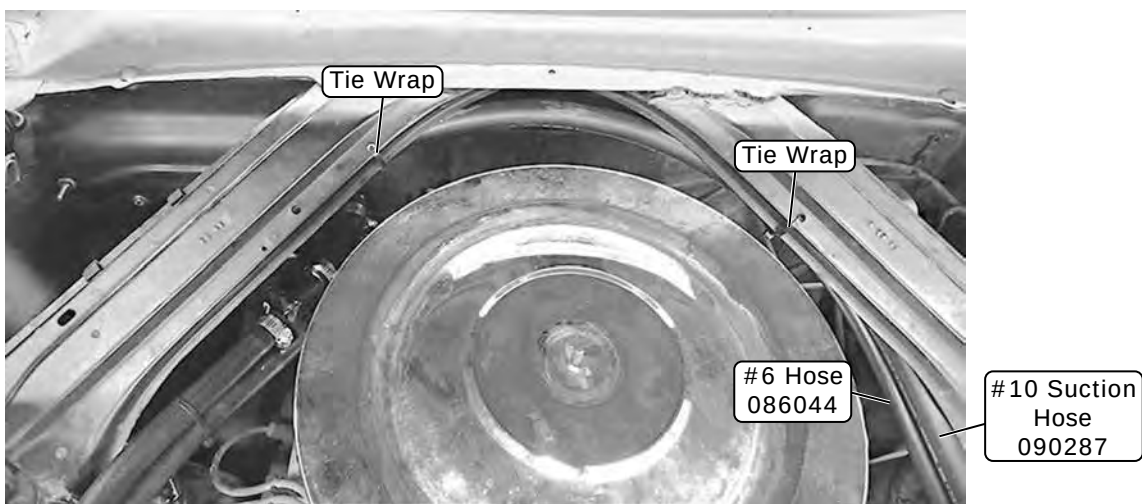


Photo 4



www.vintageair.com

Passenger Compartment Wiring

1. Select a suitable location for the main relay, and secure it using a #10 x 1/2" sheet metal screw. Select a suitable ground location for the white ground wire eyelet from the heater control valve harness, and secure it using a #12 x 1/2" self-tapping screw (See Photo 1, below).
2. Route the violet power wire to a switched 12v power source on the fuse panel (See Photo 2, below).
NOTE: This requires a male fuse extension (not supplied).
3. Connect the tan wire to the factory dash lights to enable control panel backlighting (if applicable).
4. Connect the BSC wiring to the main harness (See Photo 3, below).
5. Connect the main harness to the ECU (See Photo 4, below).

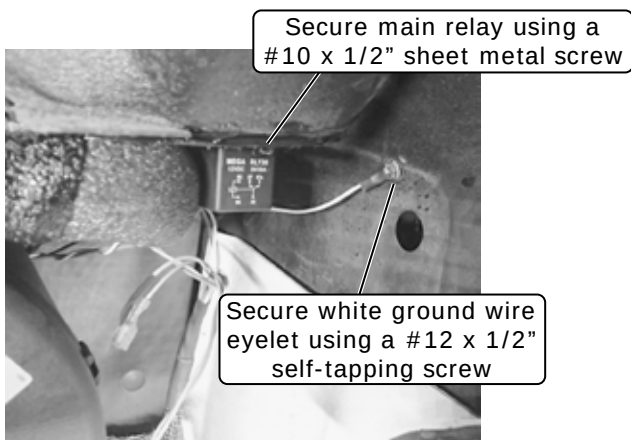


Photo 1

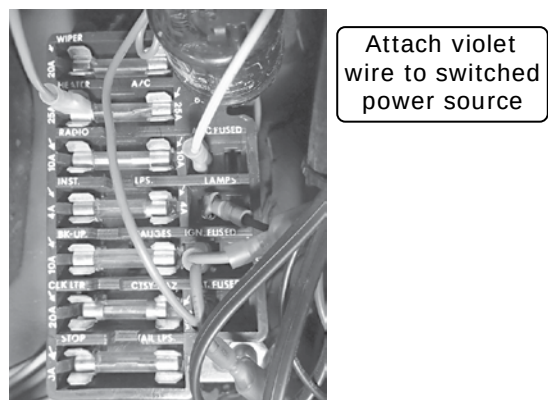


Photo 2

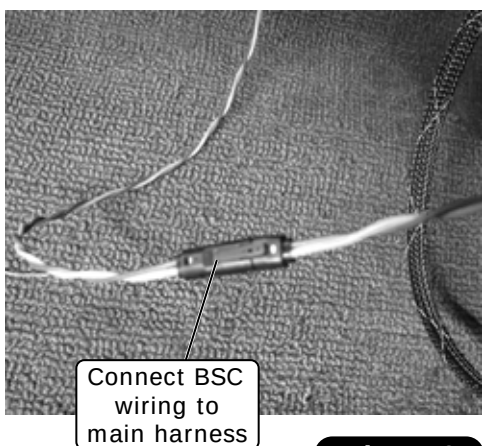


Photo 3

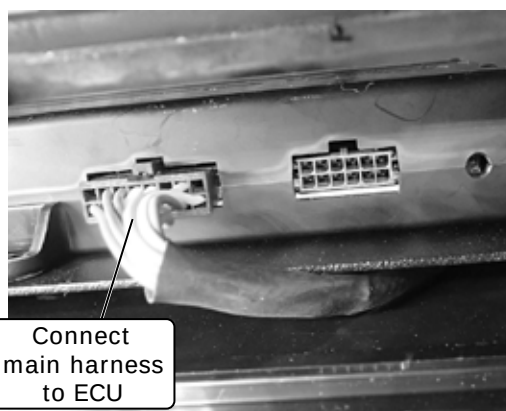


Photo 4




www.vintageair.com

Engine Compartment Wiring

1. Route power and ground wires toward the battery.
2. Install the supplied heat shrink over the 12 AWG orange fuse holder assembly wire, and crimp it to the 12 AWG orange wire from the main wiring harness (See Photo 1, below and Quality Crimp Guidelines, Page 27).
3. Install the supplied heat shrink over the 16 AWG black fuse holder assembly wire, and crimp it to the 16 AWG red wire from the main wiring harness (See Photo 2, below and Quality Crimp Guidelines, Page 26).
4. Install fuses into the holders (See Photo 3, below).
5. Install the supplied heat shrink over the white ground wires, then crimp on the supplied eyelets (See Photos 4 and 5, below and Quality Crimp Guidelines, Page 28)
6. Connect the ground wiring eyelets to the negative battery terminal connector (See Photo 6, below).
7. Connect the positive wiring eyelets to the positive battery terminal connector (See Photo 7, below).

NOTE: Do not connect power until installation is completed.

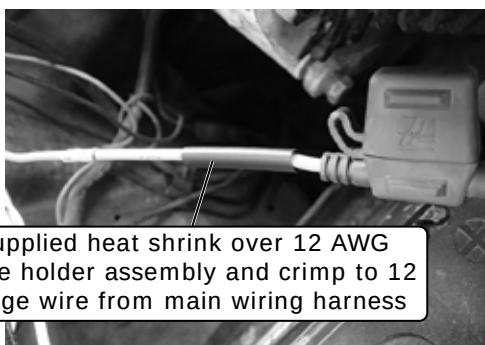


Install supplied heat shrink over 12 AWG orange fuse holder assembly and crimp to 12 AWG orange wire from main wiring harness

Photo 1

Install supplied heat shrink over 16 AWG black fuse holder assembly wire and crimp to 16 AWG red wire from main wiring harness



Photo 2

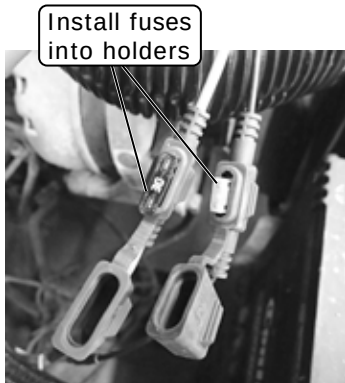

Install fuses into holders

Photo 3



Install supplied heat shrink over white ground wires and crimp on supplied eyelets

Photo 4


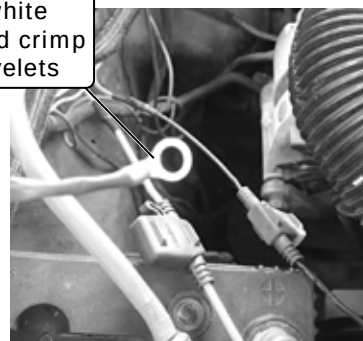


Photo 5



Connect ground wiring eyelets to negative battery terminal connector

Photo 6

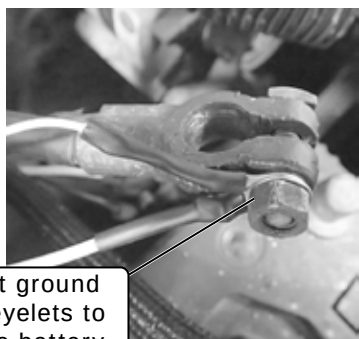

NOTE: Do not connect power until installation is completed.

Connect positive wiring eyelets to positive battery terminal connector

Photo 7



www.vintageair.com

Center Louver Installation

1. Drill (2) 1/8" holes, and install the center louver bezel under the dash using (2) #8 x 1/2" pan head screws as shown in Figure 1, below.
2. Insert the louvers into the center louver bezel as shown in Figure 1, below. **NOTE: It may be helpful to attach the duct hoses to the louvers (See Pages 23 and 25?) before inserting the louvers into the bezel.**

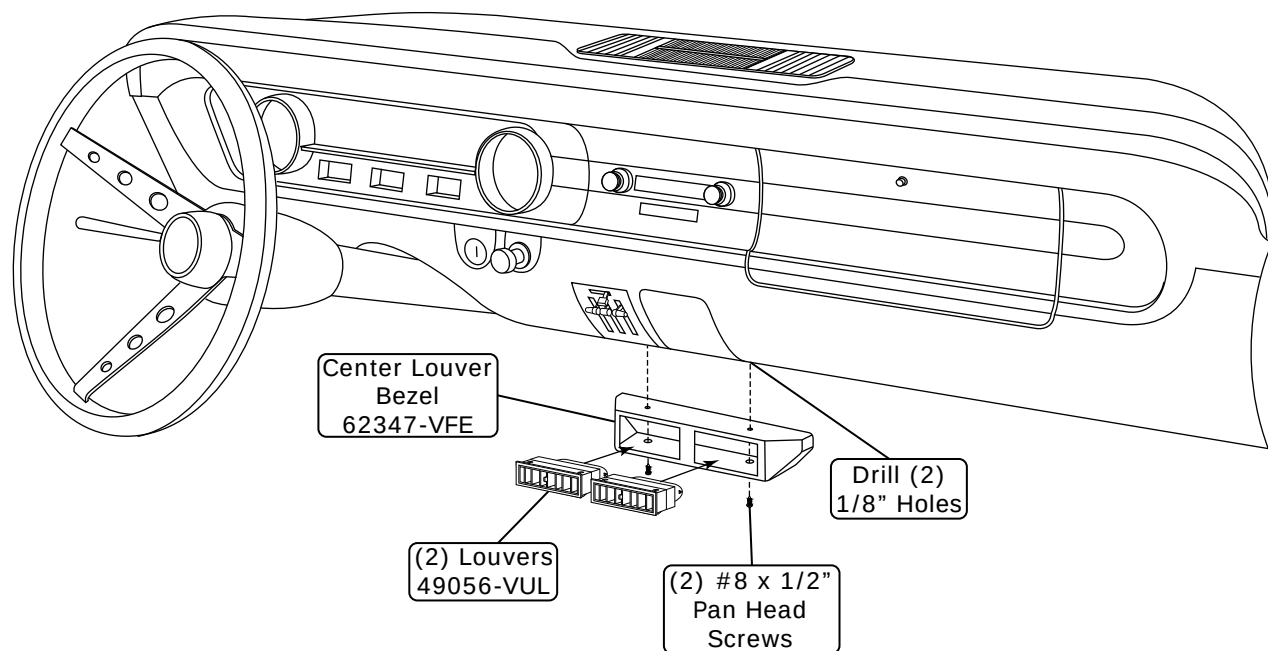


Figure 1



www.vintageair.com

Driver and Passenger-Side Under Dash Louver Installation

1. Drill (2) 1/8" holes, and install the driver-side louver housing under the dash using (2) #8 x 1/2" pan head screws as shown in Figure 1, below.
2. Drill (2) 1/8" holes, and install the passenger-side louver housing under the dash using (2) #8 x 1/2" pan head screws as shown in Figure 1, below.
3. Install the louvers into the driver and passenger-side louver housings as shown in Figure 1, below. **NOTE: It may be helpful to attach the duct hoses to the hose adapters (See Pages 18 and 19?) before installing the louvers into the housings.**

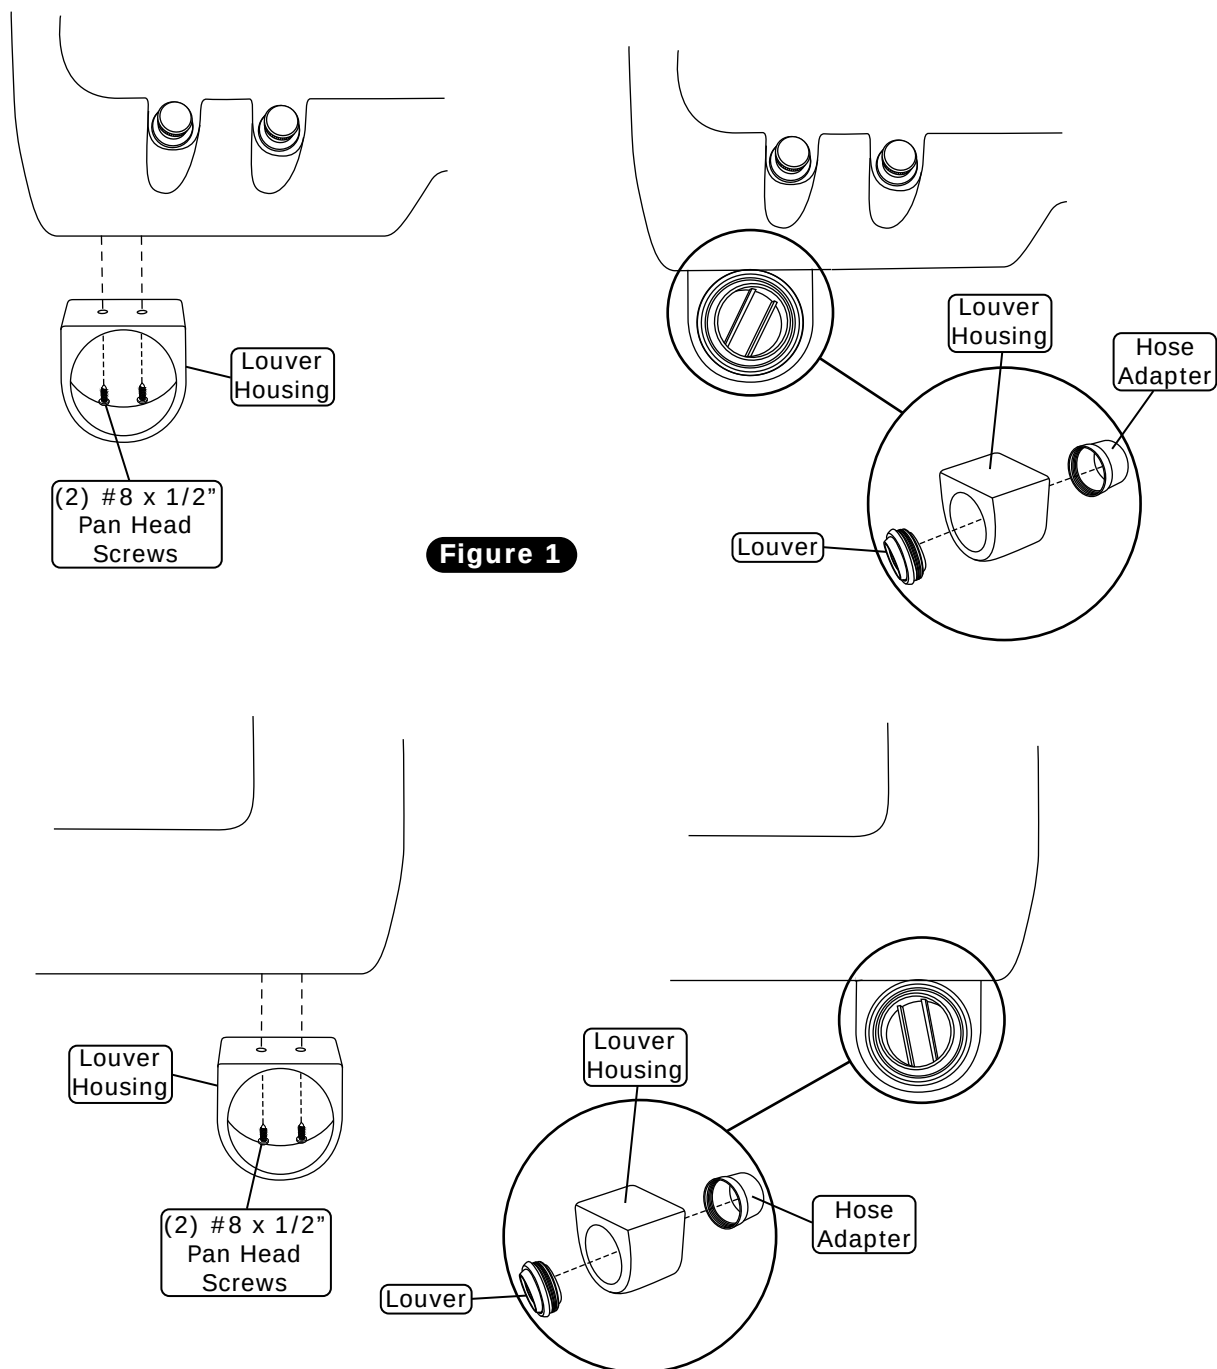


Figure 1



www.vintageair.com

Duct Hose Routing

NOTE: For the system to function optimally, the duct hoses must be routed as directly as possible, taking care to avoid kinks, sharp bends and unnecessary length. Vintage Air supplies duct hoses in continuous lengths that will need to be cut to size depending on application. Before cutting, familiarize yourself with the installation instructions and verify the routing will work with your application. For custom hose routing, additional hose may be needed and can be purchased from Vintage Air.


1. Stretch the duct hose until there is no slack, measure, mark and cut hose to size (See Photo 1, below).

Stretch, measure,
mark and cut
hose to size



Photo 1

NOTE: While looking through the glove box and speaker holes, turn the wipers on and check for clearance through the full range of motion.

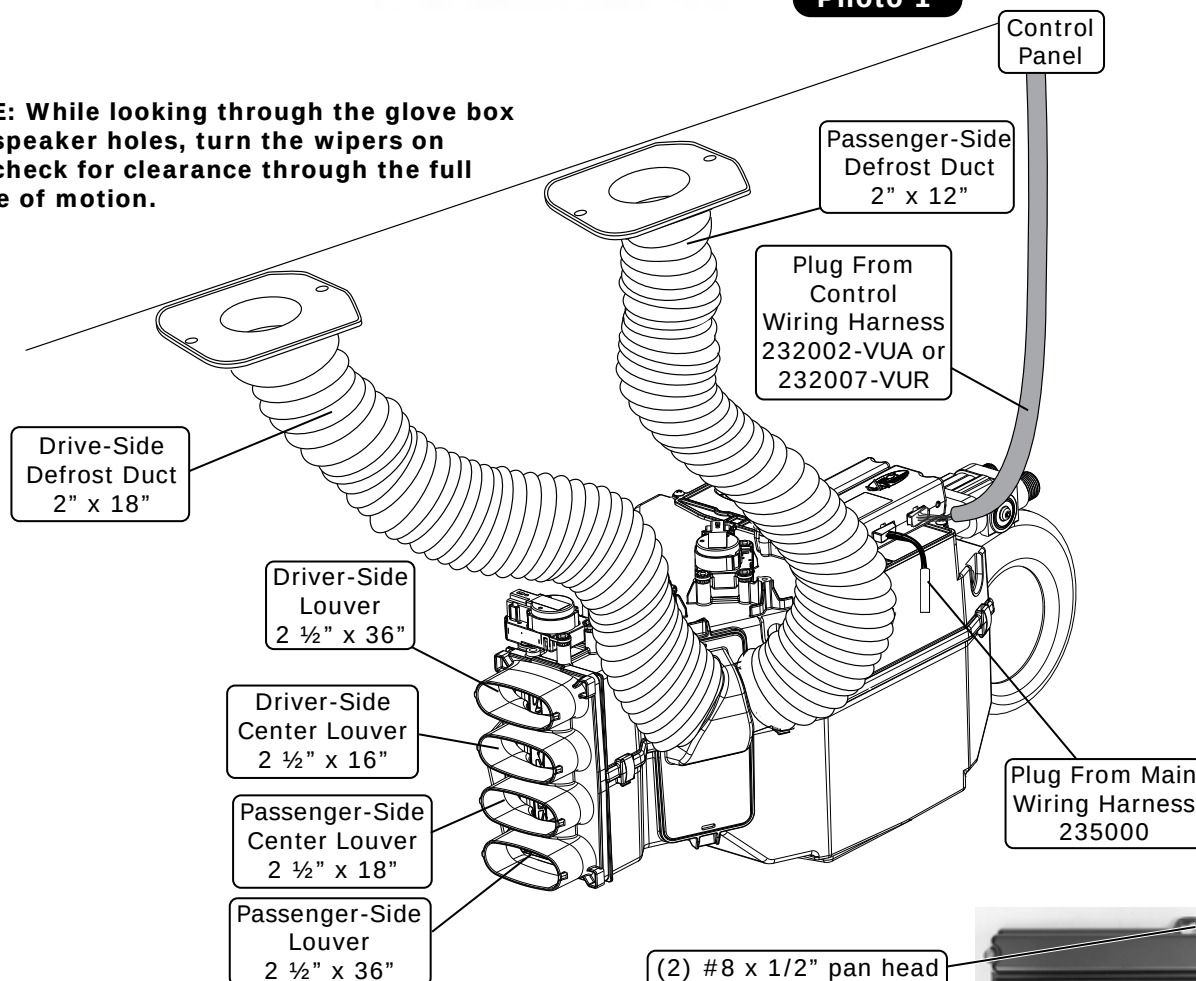

(2) #8 x 1/2" pan head
screws to relocate ECU
if needed

NOTE: ECU must be placed away from water and humidity, and also be accessible for servicing. If relocating, connectors must be positioned towards the bottom.



Position connectors
towards bottom



www.vintageair.com

Final Steps: Installation Check



Installation Check	
ITEM TO CHECK	Procedure
☐ ECU	If no blinking is observed after 1 minute of turning the ignition on, go to the next check. If repetitive blinking is observed, go to the Advanced Diagnostics Section to diagnose.
☐ Blower speed control	Set the blower speed control to OFF, <u>confirm that the blower is off</u>. Position the blower speed control to LOW then MEDIUM and then HIGH. <u>At each setting confirm that the blower speed increases</u>, do this by feeling for the amount of air coming from the unit and hearing the blower speed increase.
☐ Mode control	Set the MODE control to the DASH position. <u>Confirm that air is being blown at the dash vents.</u> Set the MODE control to the FLOOR position. <u>Confirm that air is being blown at the floor vents.</u> Set the MODE control to the DEFROST position. <u>Confirm that all air is being blown from the defrost vents</u>
☐ Temperature control	If heater lines are installed: Set the MODE control to the DASH position. Set the TEMP control to the MAX HEAT position. <u>Confirm that HOT air is coming from the dash vents.</u> If system is charged: Set the TEMP control to the MAX COOL position. <u>Confirm that COLD air is coming from the dash vents.</u> Also <u>confirm that the compressor "clicks" on</u> when adjusting the TEMP control from the MAX HEAT position to the MAX COOL position.
☐ AC Indicator (If applicable)	While the MODE control is set to the DASH position, and the TEMP control is set to the MAX COOL/MIN HEAT position, <u>confirm that the blue AC Indicator light is on</u>.
☐ Backlight (If applicable)	If your control panel has backlight capabilities and has been wired, turn the dash lamp on and <u>confirm that the AC panel's legend is lit</u>.
☐ Fittings	Verify AC and Heater fittings are all tight.



www.vintageair.com

Final Steps: Completing the Install

1. Install duct hoses as shown in Duct Hose Routing, Page 23. **NOTE: After installing duct hoses, while looking through the glove box opening, turn on the wipers, and check for clearance through the full range of motion.**
2. Install control panel assembly. Refer to control panel instructions.
3. Plug the wiring harnesses into the ECU module on the sub case. Wire according to wiring diagrams on Pages 27 & 28.
4. Install (4) #8 U-nuts onto new glove box (See Figure 1, below).
5. Lay the glove box with the opening face down, and insert it to the right. After it's in, roll the open end to face outward, and pull the glove box into position. Secure using (4) #8 x 1/2" pan head screws (See Figure 2, below).
6. Reinstall glove box door and glove box door strap (See Figure 2, below).
7. Reinstall all previously removed items.
8. Fill radiator with at least a 50/50 mixture of approved antifreeze and distilled water. It is the owner's responsibility to keep the freeze protection at the proper level for the climate in which the vehicle is operated. Failure to follow antifreeze recommendations will cause heater core to corrode prematurely and possibly burst in A/C mode and/or freezing weather, voiding your warranty.
9. Double check all fittings, brackets and belts for tightness.
10. Vintage Air recommends that all A/C systems be serviced by a licensed automotive A/C technician.
11. Evacuate the system for a minimum of 45 minutes prior to charging, and perform a leak check prior to servicing.
12. Charge the system to the capacities stated on Page 4 of this instruction manual.
13. See Operation of Controls procedures on Page 29 or 30.

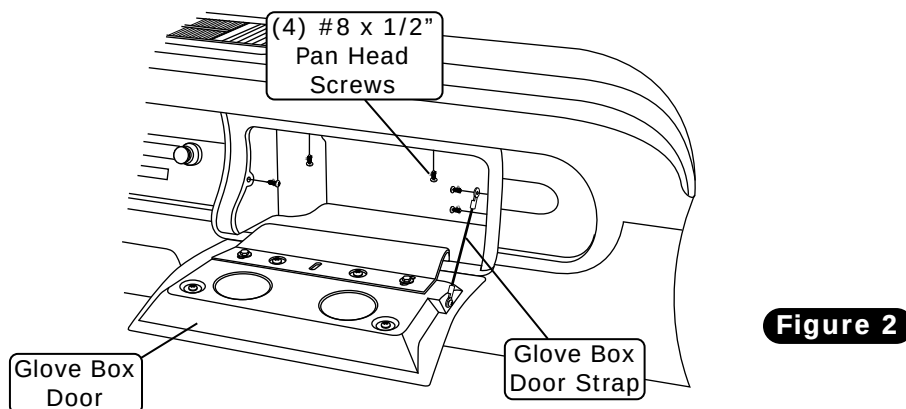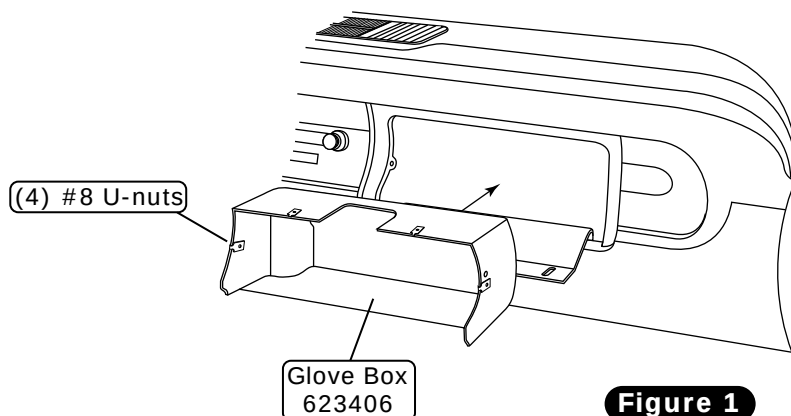



www.vintageair.com

Quality Crimp Guideline

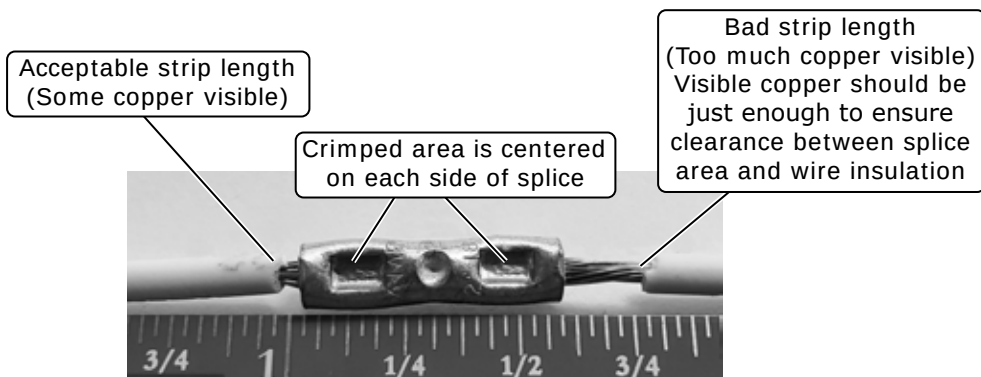


Photo 1

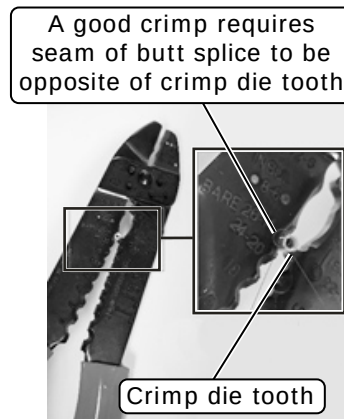


Photo 2

Good Ring Terminal Crimp Bad Ring Terminal Crimp

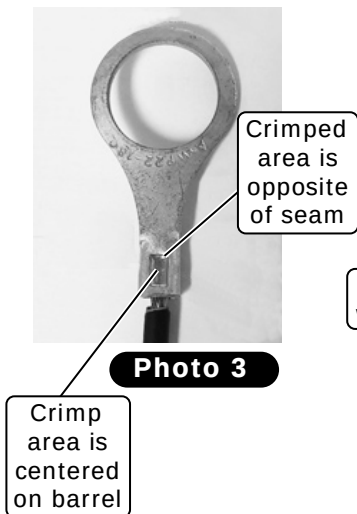


Photo 3

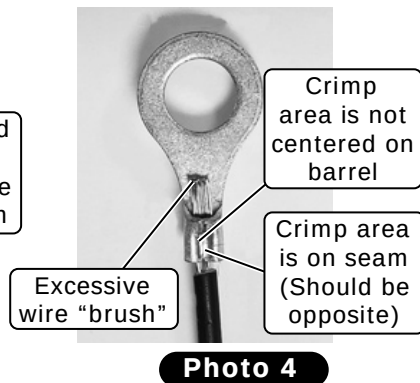


Photo 4

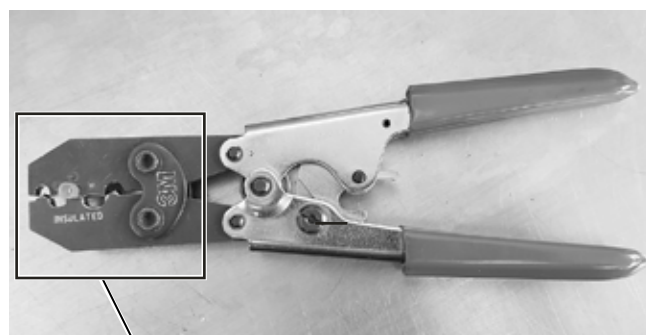


Photo 5

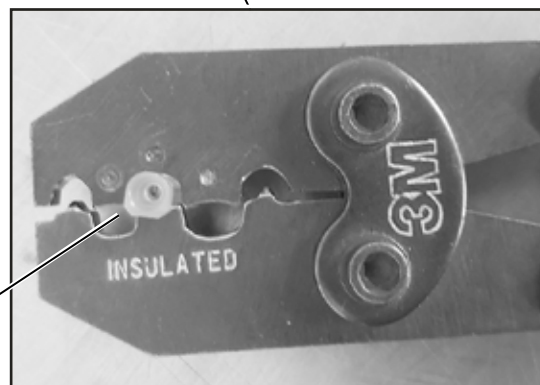



Photo 5a

Use a ratcheting crimp tool for insulated barrel terminals when crimping the provided female insulated terminal. Ensure terminal is inserted in appropriate position before crimping.



www.vintageair.com

Gen 5 Wiring Diagram

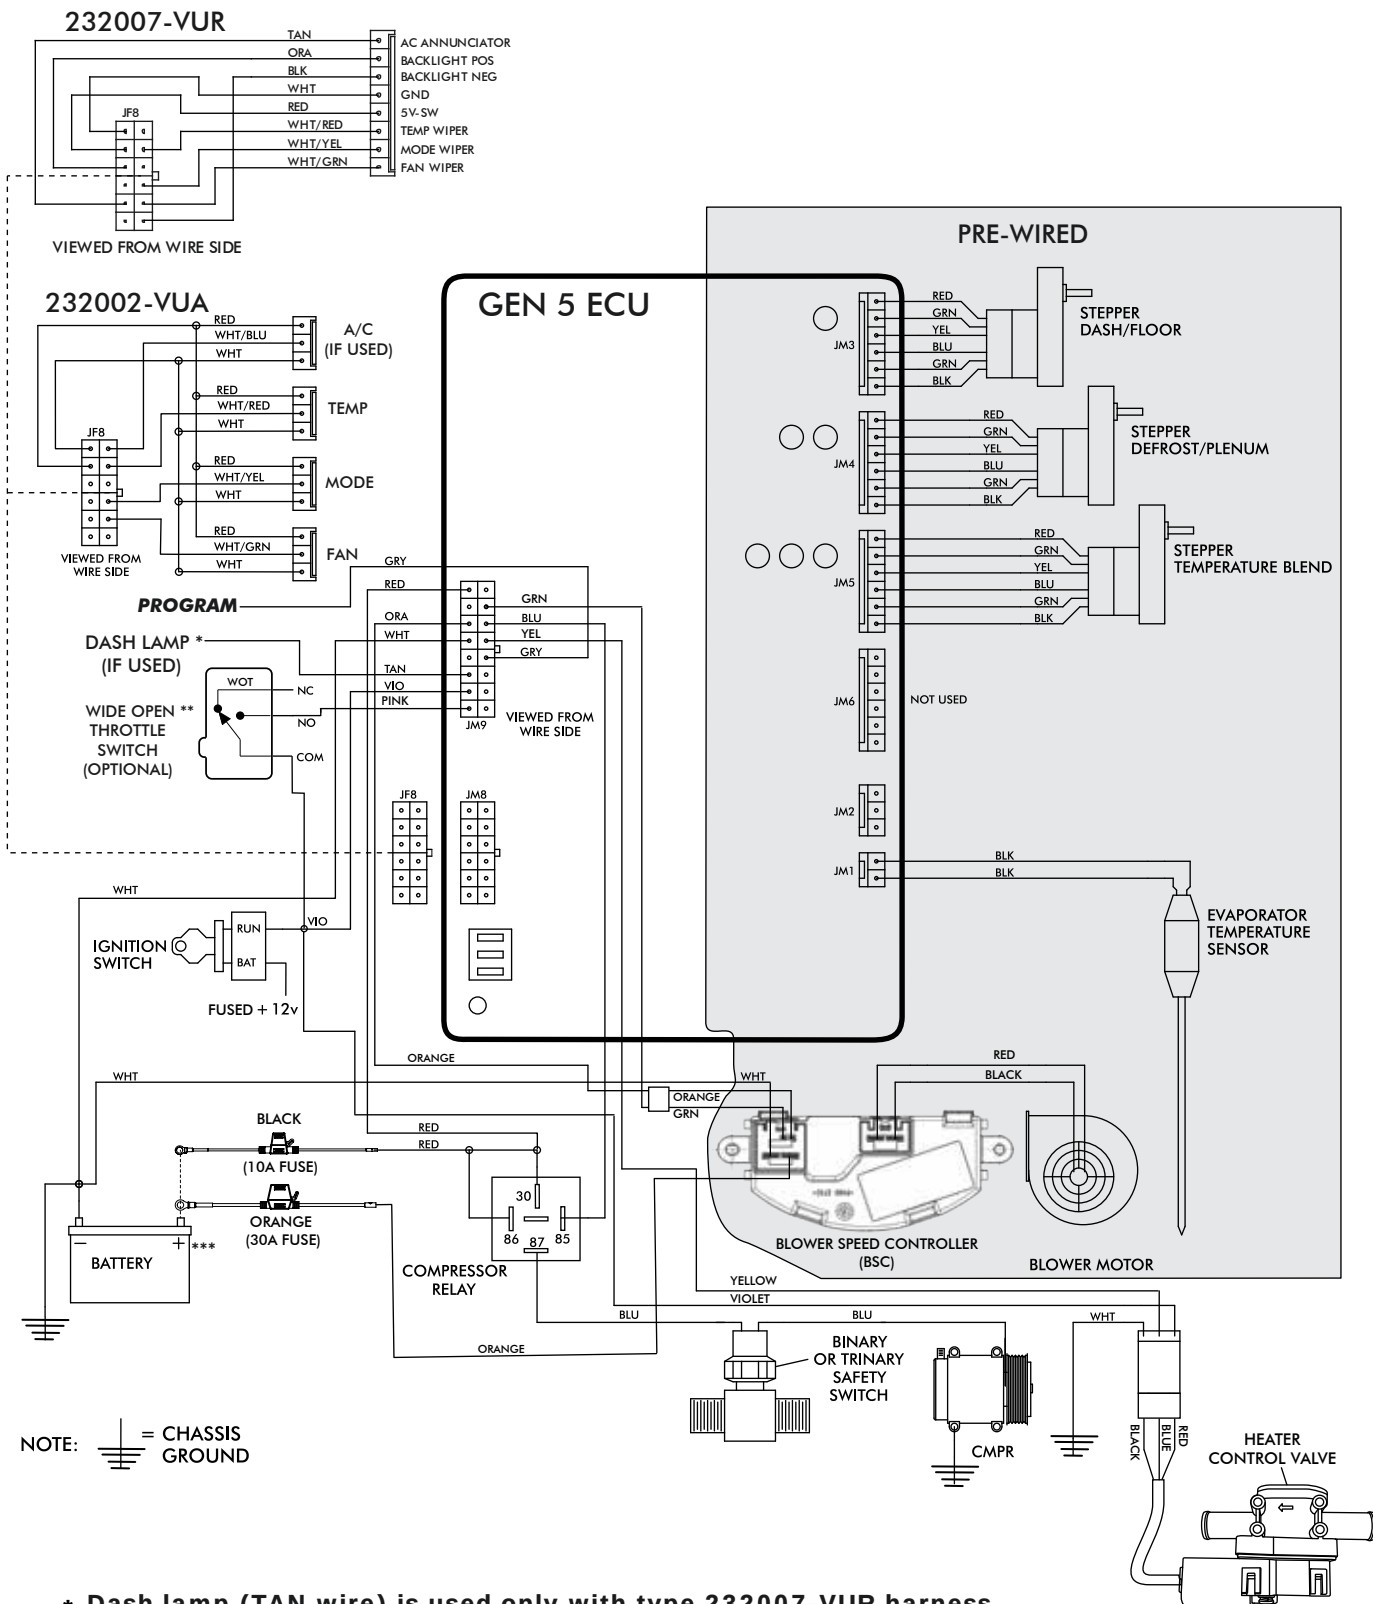

* Dash lamp (TAN wire) is used only with type 232007-VUR harness.

** Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.


*** Install fuse assemblies at or as near to the battery as possible.



www.vintageair.com

Gen 5 Wiring Instructions

WIRING HARNESS (231505) ↓

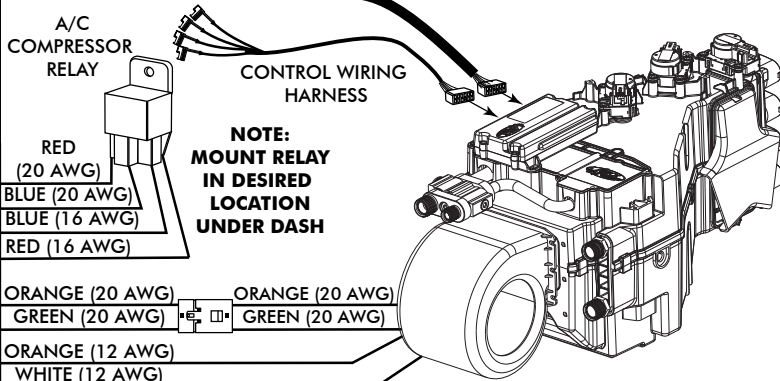

Ignition Switch:

Using provided butt splice (PN 226004), connect the 20 AWG violet wire to a 5A fused and switched 12V source such as Key On.


Wide Open Throttle Switch (Optional):

If a wide open throttle switch is required, connect the 20 AWG pink wire to a normally open switch that, when closed, connects a fused and switched 12V source to the pink wire. See Gen 5 wiring diagram for an example.

Dash Light (Optional):


If using a Vintage Air control panel with back light, connect the 20 AWG tan wire to the vehicle's dash back light 0-12V using provided butt splice (PN 226004).

WIRING HARNESS (232020)

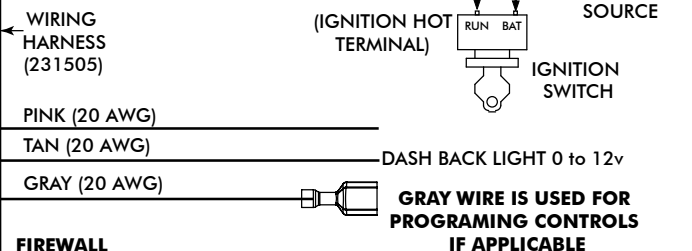

FIREWALL

FIREWALL

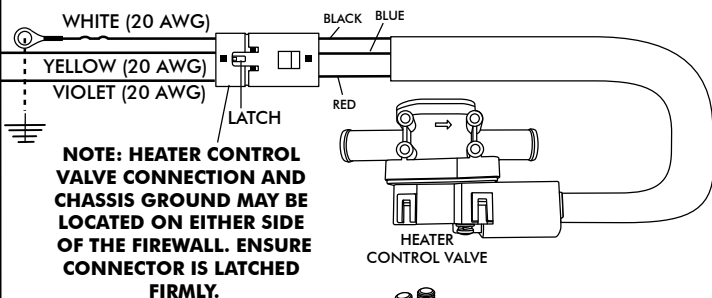


Heater Control Valve:

Connect the Violet/Yellow/White twisted branch with 3 position connector into the heater control valve connector. Ensure that the mating latch is fully seated.

Binary / Trinary & Compressor:

Binary Switch: Terminate provided insulated female terminal (PN 23172-VUW) to the blue 16 AWG wire. Connect as shown.

Trinary Switch: Connect according to trinary switch wiring diagram.




WHITE (12 AWG)

WHITE (20 AWG)

ORANGE (12 AWG)

RED (16 AWG)

NOTE: CONNECT WHITE WIRES DIRECTLY TO (-) BATTERY TERMINAL

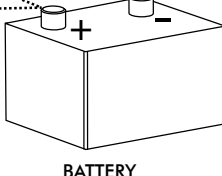

Battery Connections:

ECU Ground: Terminate provided ring terminal (PN 226110) to 20 AWG white wire from the 231505 wire assembly and install at battery.

ECU PWR: Terminate provided fuse assembly with black leads (PN 233012) to the 16 AWG red wire from the 231505 wire assembly. Install provided 10A Red Mini Fuse (PN 226118). Install at battery.

Blower Speed Controller (BSC) Ground:

Terminate provided ring terminal (PN 226111) to 12 AWG white wire from the 232020 wire assembly and install at battery.

Blower Speed Controller (BSC) PWR:

Terminate provided fuse assembly with orange leads (PN 233008) to the 12 AWG orange wire from the 232020 wire assembly. Install provided 30A Green ATO/ATC Fuse (PN 226125). Install at battery.



www.vintageair.com

Operation of Controls (Standard Control)

On Gen IV or Gen 5 systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle in and out of heat and A/C operations, to indicate the change. **NOTE: For proper control panel function, refer to the control panel instructions for calibration procedure.**

Blower Speed


This lever/knob controls blower speed, from OFF to HI.

Mode Control

This lever/knob controls the mode positions, from DASH to FLOOR to DEFROST, with a blend in between.

Temperature Control

This lever/knob controls the temperature, from HOT to COLD.

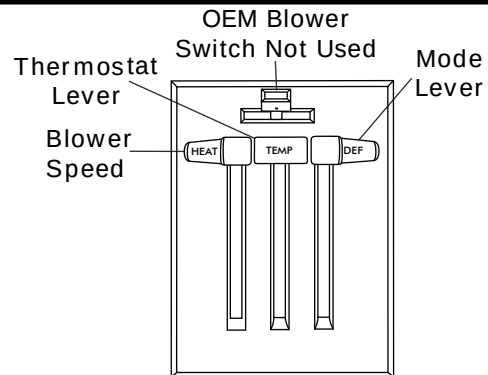

A/C Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (DASH position recommended).

Temperature Control

For A/C operation, adjust to coldest position to engage compressor (Adjust between HOT and COLD to reach desired temperature).

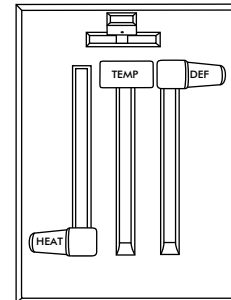

Heat Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (FLOOR position recommended).

Temperature Control

For maximum heating, adjust to hottest position (Adjust between HOT and COLD to reach desired temperature).

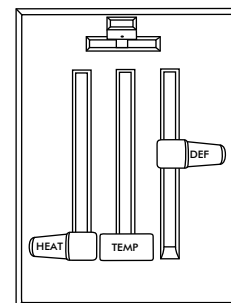

Defrost / De-fog Operation

Blower Speed


Adjust to desired speed.

Temperature Control

Adjust to desired temperature.

Mode Control

Adjust to DEFROST position for maximum defrost, or between FLOOR and DEFROST positions for a bi-level blend (Compressor is automatically engaged).

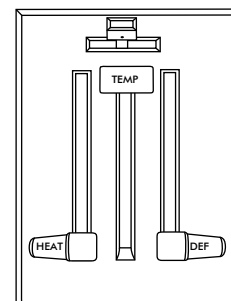



www.vintageair.com

Operation of Controls (Deluxe Control)

On Gen IV and Gen 5 systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle in and out of heat and A/C operations, to indicate the change. **NOTE: For proper control panel function, refer to the control panel instructions for calibration procedure.**

Blower Speed


This lever/knob controls blower speed, from OFF to HI.

Mode Control

This lever/knob controls the mode positions, from DASH to FLOOR to DEFROST, with a blend in between.

Temperature Control

This lever/knob controls the temperature, from HOT to COLD.

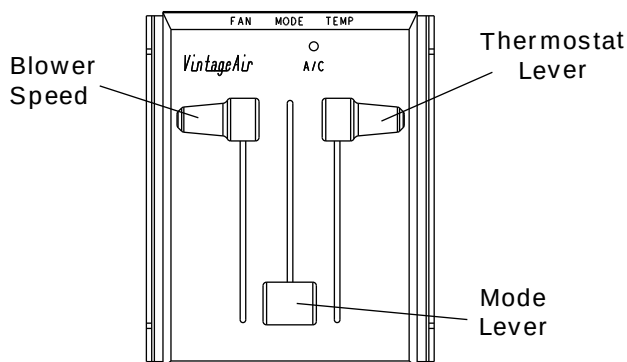

A/C Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (DASH position recommended).

Temperature Control

For A/C operation, adjust to coldest position to engage compressor (Adjust between HOT and COLD to reach desired temperature).

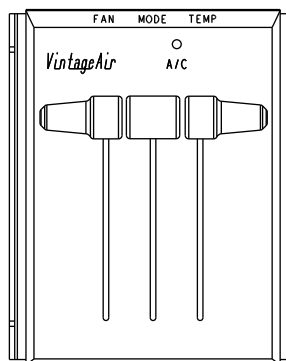

Heat Operation

Blower Speed


Adjust to desired speed.

Mode Control

Adjust to desired mode position (FLOOR position recommended).

Temperature Control

For maximum heating, adjust to hottest position (Adjust between HOT and COLD to reach desired temperature).

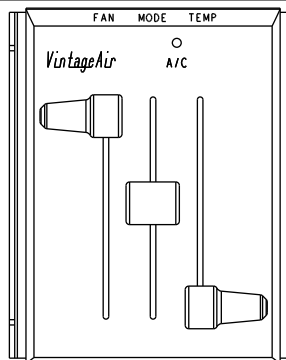

Defrost / De-fog Operation

Blower Speed


Adjust to desired speed.

Temperature Control

Adjust to desired temperature.

Mode Control

Adjust to DEFROST position for maximum defrost, or between FLOOR and DEFROST positions for a bi-level blend (Compressor is automatically engaged).

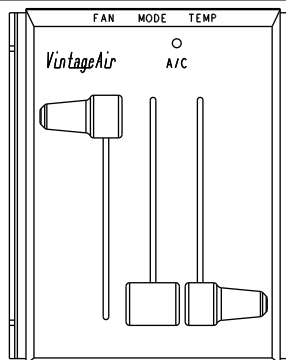



www.vintageair.com

Troubleshooting Guide

This printed troubleshooting guide is our basic guide that covers common installation problems. To see our advanced diagnostics and troubleshooting guide, please refer to the following page for instructions on how to download the complete guide.

WARNING: While troubleshooting the system, never probe connector terminals from the front mating side, only back probe.

WARNING: While troubleshooting the system, never use automotive check lights.

Symptom	Condition	Checks	Actions	Notes
1. Blower stays on high speed with ignition on.	No other functions work. All other functions work.	Check for damaged pins or wires in the control panel wire assembly and mating header at ECU. Check for a bad ECU GND. Check for damaged pins or wires in the control panel wire assembly and mating header at ECU. Check if Blower power fuse is blown. Check for a bad ECU GND.	If found damaged, replace wire assembly or ECU. If found damaged, replace wire assembly or ECU. Replace fuse. Repair connection.	If fuse continues to blow, there is a serious problem in the wiring. Check all wiring and ensure the wire is not damaged and shorting out along its route.
2. Compressor will not turn on (All other functions work).	System is not charged. System is charged.	System must be charged for compressor to engage. Check for faulty A/C potentiometer or associated wiring (not applicable to 3-pot controls). Check for disconnected or faulty thermistor.	Charge system. Check continuity to ground on white control head wire. Check for 5V on red control head wire. Check 2-pin connector at ECU housing.	Danger: Never bypass safety switch with engine running. Serious injury can result. To check for proper pot function, check voltage at white/red wire. Voltage should be between 0V and 5V, and will vary with pot lever position. Disconnected or faulty thermistor will cause compressor to be disabled.
3. Compressor will not turn off (All other functions work).		Check for faulty A/C potentiometer or associated wiring. Check for faulty A/C relay.	Repair or replace pot/control wiring. Replace relay.	Red wire at A/C pot should have approximately 5V with ignition on. White wire will have continuity to chassis ground. White/Red wire should vary between 0V and 5V when lever is moved up or down.



www.vintageair.com

Troubleshooting Guide (Cont.)

Symptom	Condition	Checks	Actions	Notes
4. System will not turn on, or runs intermittently.	Works when engine is not running; shuts off when engine is started	Noise interference from either ignition or alternator.	Install capacitors on ignition coil and alternator. Ensure good ground at all points. Relocate coil and associated wiring away from ECU and ECU wiring. Check for burned or loose plug wires.	Ignition noise (radiated or conducted) will cause the system to shut down due to high voltage spikes. If this is suspected, check with a quality oscilloscope. Spikes greater than 16V will shut down the ECU. Install a radio capacitor at the positive post of the ignition coil (see radio capacitor installation bulletin). A faulty alternator or worn out battery can also result in this condition.
	Will not turn on under any conditions.	Verify connections on power lead, ignition lead, and both white ground wires.	Check for power at ECU, and confirm ignition is being applied to ECU properly.	
		Verify battery voltage is greater than 10 volts and less than 16 while engine is running.	Verify proper meter function by checking the condition of a known good battery.	
5. Loss of mode door function.	No mode change at all.	Check for damaged mode switch or potentiometer and associated wiring.		
6. Blower turns on and off rapidly.	Battery voltage is at least 12V.	Check for at least 12V at circuit breaker.	Ensure all system grounds and power connections are clean and tight.	System shuts off blower at 10V. Poor connections or weak battery can cause shutdown at up to 11V.
	Battery voltage is less than 12V.	Check for faulty battery or alternator.	Charge battery.	
7. Erratic functions of blower, mode, temp., etc.		Check for damaged switch or pot and associated wiring.	Repair or replace.	

Advanced Diagnostics and Troubleshooting Guide

If after referencing the Troubleshooting Guide, the issue is not resolved, move to The Advanced Diagnostics and Troubleshooting Guide that covers the following:

- **ECU Diagnostics Codes**
 1. **ECU Blink Sequence**
 2. **Firmware Version Number**
 3. **ECU Model Number**
 4. **ECU Start-Up Blink Sequence**
 5. **Diagnostic Codes**
- **Complete Advanced Troubleshooting Guidelines**

Access the latest version of the Advanced Diagnostics and Troubleshooting Guide by scanning the following QR code on your mobile device:



You can also access the guide by typing the following address into your web browser:

https://www.vintageair.com/instructions_pdf/905000.pdf



www.vintageair.com

Packing List: Evaporator Kit (554953)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Super Magnum Evaporator Module
2.	1	784953	Accessory Kit with Conversion Control

Checked By: _____
Packed By: _____
Date: _____


1

**Gen 5 Super Magnum
Evaporator Module
765200**



2

**Accessory Kit
784953**

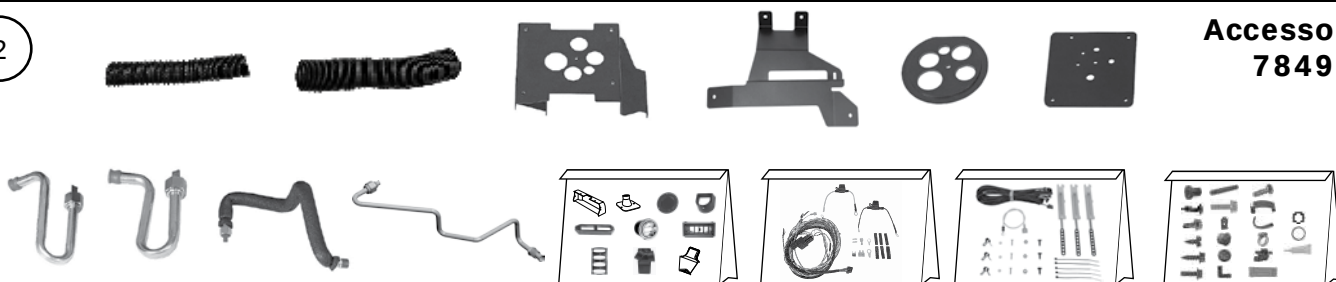

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**

Packing List: Evaporator Kit (554954)

No.	Qty.	Part No.	Description
1.	1	765200	Gen 5 Super Magnum Evaporator Module
2.	1	784954	Accessory Kit with Deluxe Control

Checked By: _____
Packed By: _____
Date: _____


1

**Gen 5 Super Magnum
Evaporator Module
765200**



2

**Accessory Kit
784954**

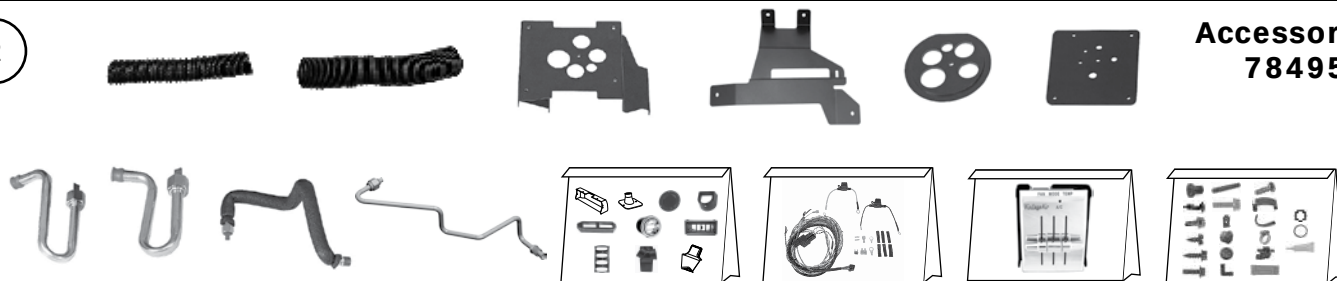

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**