

PATRIOT™

Exhaust Products

Corporate Office: PerTronix Inc. 440 E. Arrow Highway, San Dimas, California 91773 * Phone 909.599.5955 * FAX 909.599.6424 *
www.patriotexhaust.com

HEADER INSTALLATION INSTRUCTIONS H8062

1967-1969 CHEVY Camaro - 68-74 Nova/Chevy II 396-502 Big Block (Std. Deck Height Only)

NOTE: Vehicles MUST have Original Style Big Block motor stands and motor mounts for Headers to fit properly. They are no longer available from G.M., but reproductions are available from most of the Camaro & Nova specialty suppliers. If the motor is mounted on Small Block frame mounts, you will notice possible steering box and Idler Arm fit problems.



This product is Legal for use on 1974 Non-Catalyst equipped vehicles and is considered a "Replacement Part" per California Air Resources Board regulations, as long as ALL emissions sensitive components are retained, including EGR, A.I.R., Heat Risers etc. Failure to retain any of these components, or use on 1975 or newer Catalyst equipped vehicles, would render this product Illegal for Street or Off Highway use and may only be used for Closed Course Competition.

PerTronix® thanks you for choosing **PATRIOT Exhaust Products**, the best value for the dollar of any brand in the industry. Please read and understand these instructions completely prior to starting work.

Check to make sure you received the proper parts for your application. The header number will be stamped on the engine flange. If you are unsure you have received the proper parts call before you start work.

Be sure to work safe! Whenever you work under the vehicle be sure that it is located on level, solid ground and is supported by adequate safety stands! **Remember: Hot asphalt will not support most jack stands!**

Many factors affect the installation of headers, some of which are broken or aftermarket motor mounts, accidents that impact the configuration of the frame, and/or the installation of different engines or aftermarket cylinder heads. Most installations require some welding. If you are uncomfortable with welding operations, we recommend that you contact a professional exhaust system specialist to install your new headers.

Attention Customers breaking in new engines: Due to the extreme heat generated during the break-in process, the appearance of the ceramic coating may be altered in certain areas. The protection characteristics and thermal barrier properties of the coating is never compromised. It is recommended that a cast iron manifold or old set of headers be used for this process.

Notice: The coating of these headers can be marred or scratched during installation. If the header needs to be returned and is damaged, you will be charged for recoat.

DISASSEMBLY

1. Disconnect the negative battery cable from the battery.

2. If a car lift is not available, raise the vehicle 2 feet or higher and support it with adequate safety stands. Make sure the vehicle is on a flat solid surface and is stable.
3. Apply penetrating oil to all nuts and bolts to be removed.
4. Remove and mark all spark plug wires and then remove all spark plugs.
5. Remove the Oil filter, Clutch Linkage, Column shift auto trans linkage, Oil dipstick Tube, and Air Conditioning Compressor.
6. Disconnect the head pipes from the exhaust manifolds and remove the manifolds
7. Remove the gaskets and any gasket material or any carbon deposits that remain on the head surface. The use of a gasket removal agent will ease the removal of any gasket material. Use care not to get debris into ports or spark plug holes.
8. At this point it may be necessary to cut the head pipes to allow room to install the headers. If you are installing a new exhaust system you may cut the head pipes any where you choose, but if you are using the existing exhaust you need to cut the head pipes in the proper location so that they will be able to be welded to the reducers supplied with your headers.

INSTALLATION

1. Place a jack under the oil pan, with a block of wood to prevent damage to the pan. Loosen the rear transmission mount bolts. Remove the Driver's side motor mount bolt and nut.
2. Raise the left side of the engine approximately 1 1/2" – 2".
3. Power steering cars MAY require removal of the center drag link depending on how high you have lifted the car, for a better angle to slip the header between the steering box and the motor.
4. Starting from below, work the driver's side header up into position. Start a bolt on each end of the header to hold in place. Do not fully tighten at this time.
5. Lower the engine back into position and replace the mount bolt and nut and fully tighten them. Retighten the transmission bolts.
6. With the header still loose, work the clutch or automatic shifter cross shaft between the L3 and L4 tubes and into position.
7. Reinstall and fully tighten all linkages and the oil filter.
8. Slip the exhaust gasket in to place and start all the header bolts by hand.
9. Tighten all the bolts evenly starting from the center and working outward..
10. From below, work the passenger side header into position. Start a bolt on each end of the header to hold in place. Do not fully tighten at this time.
11. Slip the exhaust gasket in to place and start all the header bolts by hand.
12. Tighten all the bolts evenly starting from the center working outward.
13. Air Conditioned car will require the modification to the bracket as shown in Illustration A.
14. Install the oil dipstick tube.
15. Install the reducers using the supplied bolts, washers, nuts and gaskets.
16. Weld the exhaust system to the reducers.
17. Install the spark plugs and connect the wires to the proper plug.
18. Check to make sure that all the wiring, fuel lines, transmission cooler lines, brake lines, hoses, etc. are clear of the headers or any exhaust components and reroute or relocate those components as necessary.

19. Check the oil level.
20. Connect the battery cable.

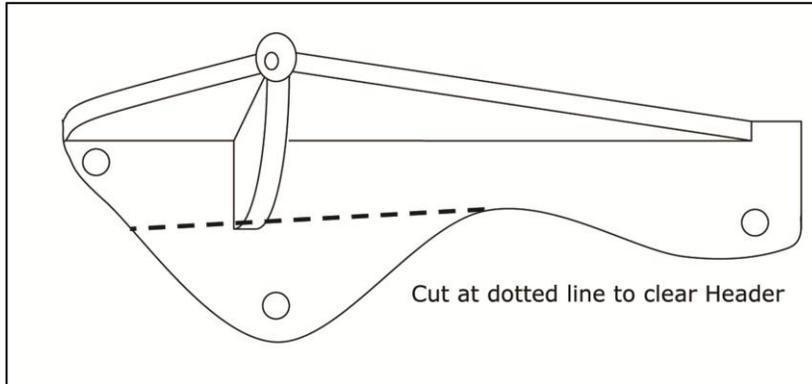


Illustration A; Air conditioning Bracket.

IMPORTANT CHECK LIST

- Be sure that all brake lines and fuel lines are clear of headers and/or connector pipes.
- All spark plug wires, battery cables, or other electrical components should be clear of headers and/or connector pipes.
- If dipstick tube was removed, make sure it is installed properly and that the dipstick has been replaced.
- Double-check the tightness of all bolts including brackets and accessories.

START THE ENGINE

Start the engine and allow it to warm up to operating temperature. Check for any unusual noises or exhaust leaks. If every thing is OK, stop the engine and tighten all bolts while the engine is still warm. **NOTE:** Check the bolts periodically to make sure they have not loosened. Re-tighten after the first 500 miles and then again at 1000 miles

PARTS LIST

<u>Qty</u>	<u>Description</u>		
1	Left Side Header	1	Right Side Header
2	Header Gaskets	2	3 1/2" Reducers
2	Collector Gaskets	16	3/8"-16 X 3/4" Header Bolts
6	3/8"-16 X 1" Bolts	6	3/8"-16 Hex Nut

WARNING:

This product can expose you to chemicals including Lead, Nickel, Cadmium and Chromium which are known to the State of California to cause cancer and birth defects or other reproductive harm. **For more information go to www.P65Warnings.ca.gov**