

INSTRUCTIONS

© 2026, Speedway Motors, Inc.

SPEEDWAY
motors®


136-132 - LevelSet™ 1973-87 C10 Rear Axle Flip Kit, OE Shocks, 5in Drop

Kit Contents

Qty	Part #	Description	Item #
2	136132.1	Axle Seat	1
2	136132.2	Tie Plate	2
2	136132.3	Shock Drop Mount	3
2	136132.4	Shock Drop Spacer	4
4	136132.5	Axle U-Bolt	5

Hardware

Qty	Description	Item #
2	Hex Cap Screw 12mm-1.75 x 30mm long	H1
2	Washer 1/2	H2
2	Lock Nut 12mm X 1.75	H3
4	Hex Cap Screw 14mm-2.00 x 80mm long	H4
4	Washer 9/16	H5
4	Lock Nut 14mm X 2.00	H6
8	Washer 5/8	H7
8	Lock Nut 5/8-18	H8

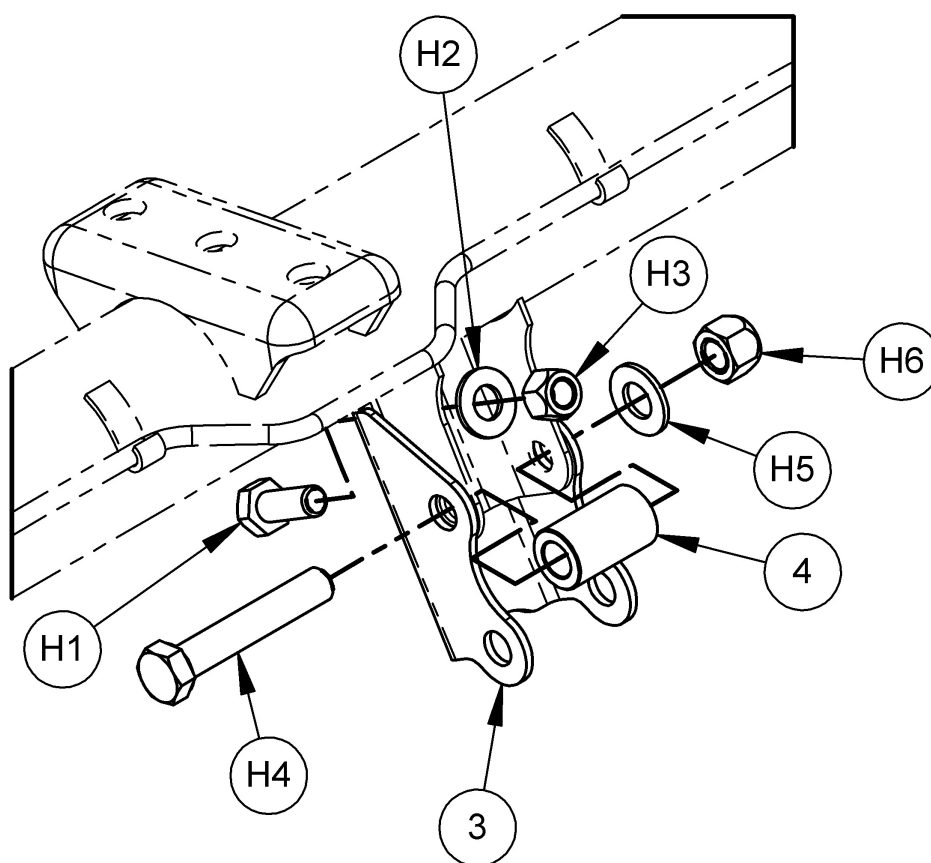

INSTRUCTIONS

© 2026, Speedway Motors, Inc.

SPEEDWAY
motors®

1. Safely raise the rear of the vehicle using a lift or a floor jack with properly rated jack stands.

IMPORTANT: Place the support points under the chassis/frame so the rear axle hangs freely and the suspension is at full extension.

2. Remove both rear wheels to improve access to the suspension components.
3. Position a floor jack or additional jack stands beneath the rear axle to prevent it from shifting when the leaf springs are removed.
4. Remove the rear shock lower-mounting hardware.
5. Attach the shock drop mount (Item 3) to the factory axle shock mount. Position the spacer (Item 4) between the mounting flanges and secure the rear mounting location using the 14 mm-2.00 x 80 mm bolt, washer, and lock nut. Next, install the 12 mm-1.75 x 30 mm bolt, washer, and lock nut through the front mounting hole. Tighten all hardware securely.

6. Reattach the rear shocks to the lower mounting holes using the 14 mm-2.00 x 80 mm bolt, washer, and lock nut.


7. Repeat for the opposite side.

8. Remove the axle U-bolts from one side of the vehicle.

NOTE: Severely corroded U-bolts may need to be cut off for removal.

9. Remove the front and rear leaf spring mounting hardware.

10. Remove the leaf spring assembly from the vehicle.

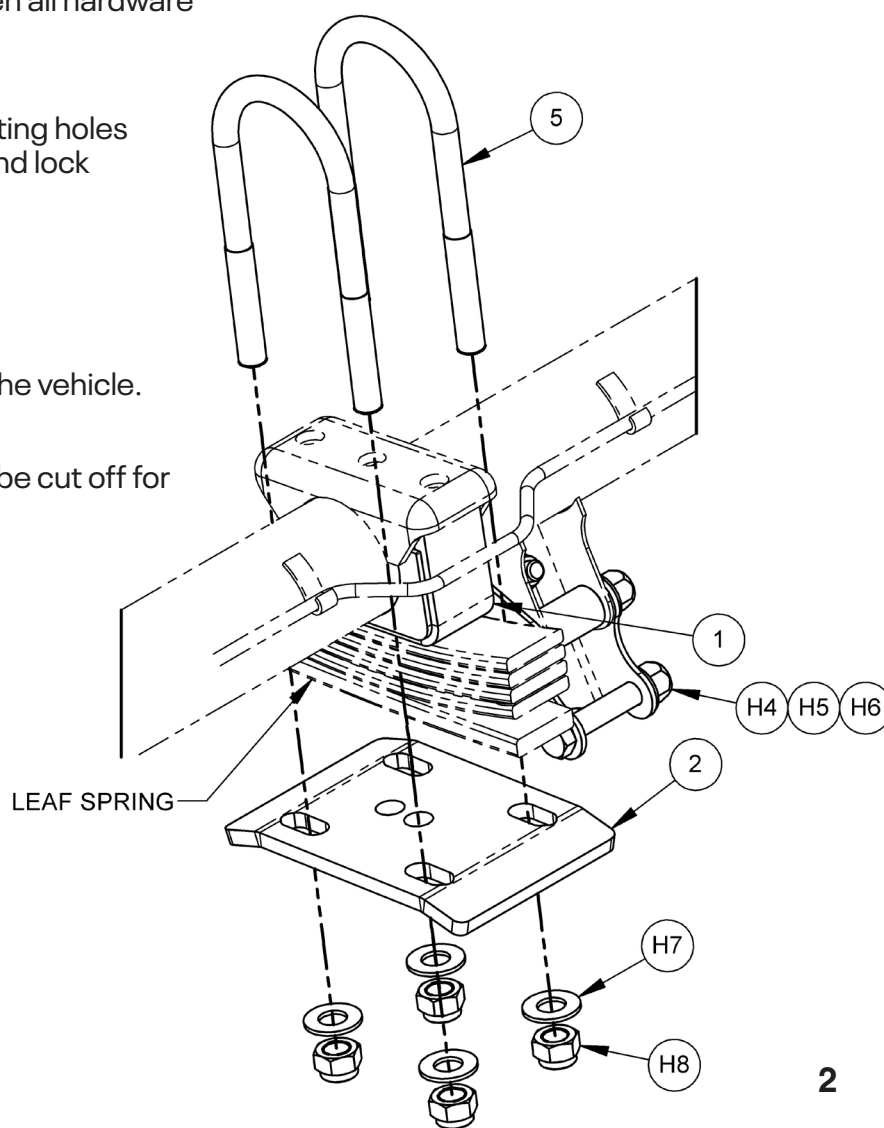

INSTRUCTIONS

© 2026, Speedway Motors, Inc.



11. Position the new leaf spring underneath the axle and install it in the factory mounting locations.
12. Reinstall the factory front and rear spring bolts.
13. Repeat steps 8 through 12 on the opposite side.
14. Place the supplied U-shaped axle seat saddle (Item 1) on top of the leaf spring.
15. Ensure the spring center pin engages the locating hole in the saddle.
16. The locating hole is offset toward the front of the vehicle. Verify that the saddle is oriented correctly to maintain proper axle placement within the wheel opening.
17. Slowly lower the axle until it fully seats into the axle seat.
18. Install the supplied U-bolts and lower tie plate.
19. Verify that the forward-most hole in the plate engages the leaf spring center pin.
20. Gradually tighten the U-bolt nuts in a crisscross pattern to evenly clamp the assembly together.
21. Reinstall the rear wheels.
22. Repeat steps 14 through 21 on the other side of the vehicle.
23. Remove all support equipment and carefully lower the vehicle to the ground.
24. Perform a final inspection to confirm that all hardware is installed correctly and tightened.

NOTE: After the first several hundred miles of driving, reinspect the suspension system and verify that all hardware remains properly seated and tightened. Periodic inspection of suspension components and hardware is recommended as part of routine vehicle maintenance.

Need Help with This Product?
Talk to one of our Tech Support Agents:
Mon–Fri, 8am – 5pm (CST)

U.S.: 800.979.0122
Canada: 855.313.9180
International: 1.402.323.3200