

# INSTRUCTIONS

© 2025, Speedway Motors, Inc.

**SPEEDWAY**  
motors®

## 475-7950 - Toe Plates

### 1. Prepare the Vehicle

Work on level ground. Set caster and camber first. Make sure wheels run true and tires have no bulges. Point the wheels straight ahead with the full weight of the vehicle on them.

### 2. Place the Toe Plates

Lean one plate against each front wheel. The folded lip faces outward and the plates must sit flat against the wheel and tire.

### 3. Measure Toe

Measure the distance between the plates at the front using the slots with the included tape measure. Measure again at the rear of the plates, again using the provided slots and tape measure.


### 4. Read the Results

Subtract one measurement from the other.

- Front wider than rear = Toe-out
- Front narrower than rear = Toe-in

### 5. Adjust and Recheck

Adjust tie rods as needed and remeasure after rolling the vehicle to settle the suspension.

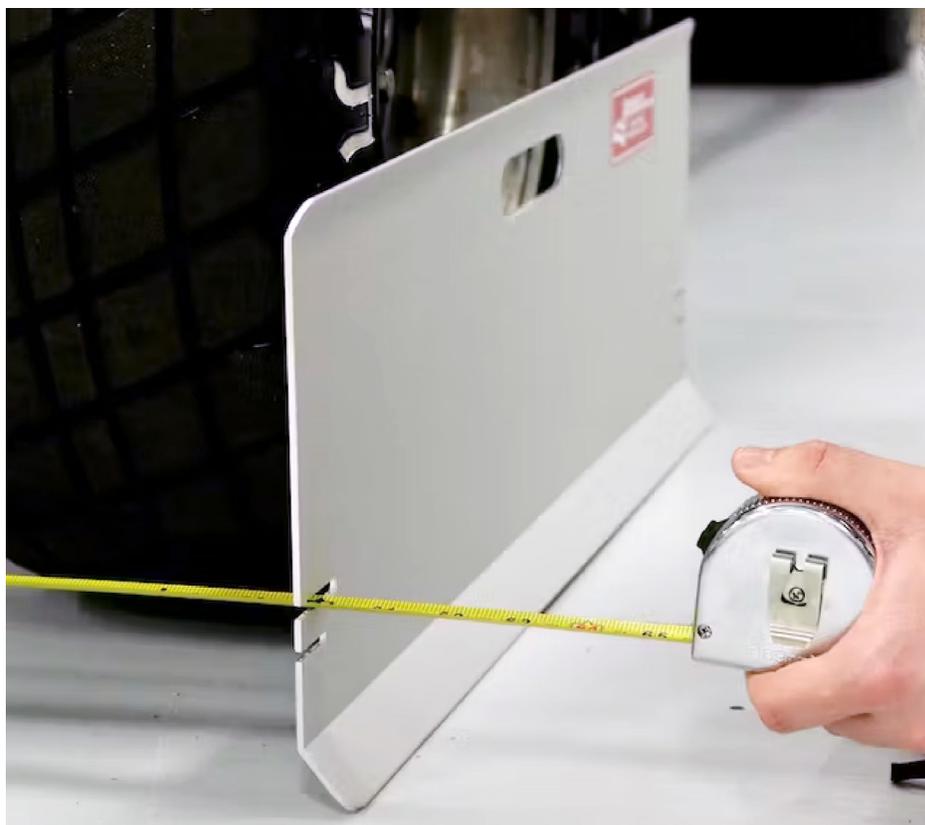

### Need Help with This Product?

Talk to one of our Tech Support Agents:

Mon-Fri, 8am - 5pm (CST)

**U.S.:** 800.979.0122

**Canada:** 855.313.9180

**International:** 1.402.323.3200