

INSTRUCTIONS

© 2024, Speedway Motors, Inc.

SPEEDWAY
motors®

560-5159 - Carb Adapter

This adapter is a two-way adapter. The holes have been tapped for 5/16 x 18 coarse thread studs on both the 3-bolt flange and the 4-bolt flange. Prior to installing the adapter, the holes on the intake manifold side of the adapter must be drilled out to 11/32" to allow hardware to pass through freely.

- A.** If it is to be use to install 3-bolt carbs, such as the '97 Stromberg, onto manifolds designed for 4-bolt carbs, install carb studs in the 3-bolt flange and drill out the holes in the 4-bolt flange.
- B.** If it is to be used to install 4-bolt carbs, such as the 2GC Rochester, onto manifolds designed for 3-bolt carbs, install carb studs in the 4-bolt flange and drill out the holes in the 3-bolt flange.

Illustration A:

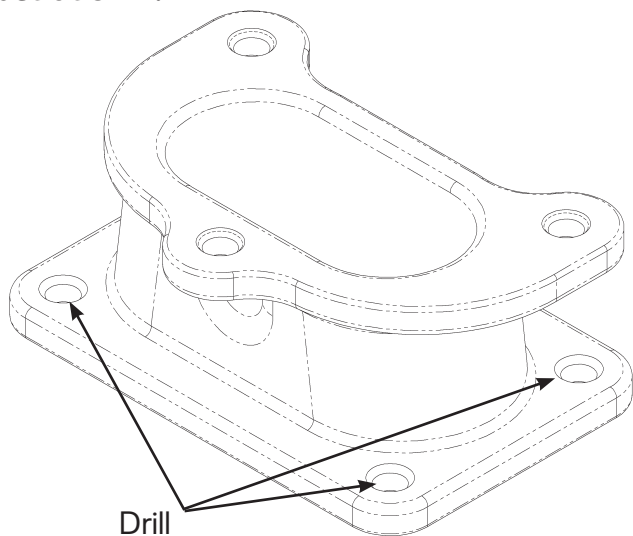


Illustration B:

