




1964-69 Ford 260-302

with **Passenger Side Water Pump Inlet
Alternator Bracket Kit
(131112)**

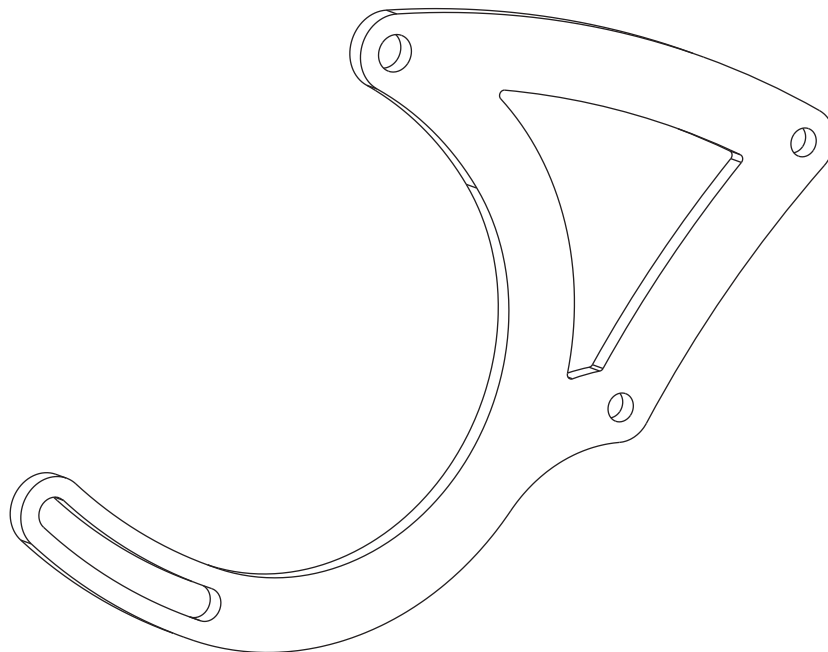

18865 Goll St. San Antonio, TX 78266
Phone: 210-654-7171
Fax: 210-654-3113
www.vintageair.com



www.vintageair.com

Table of Contents

Cover.....	1
Table of Contents.....	2
Packing List/Parts Disclaimer.....	3
Alternator Bracket Installation.....	4
Alternator Bracket Installation (Cont.).....	5
Belt Routing.....	6
Packing List.....	7





www.vintageair.com

Packing List: Alternator Bracket Kit (131112)

No.	Qty.	Part No.	Description
1.	1	131000	Bracket, Alternator
2.	1	191043	Hardware Kit

**** Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

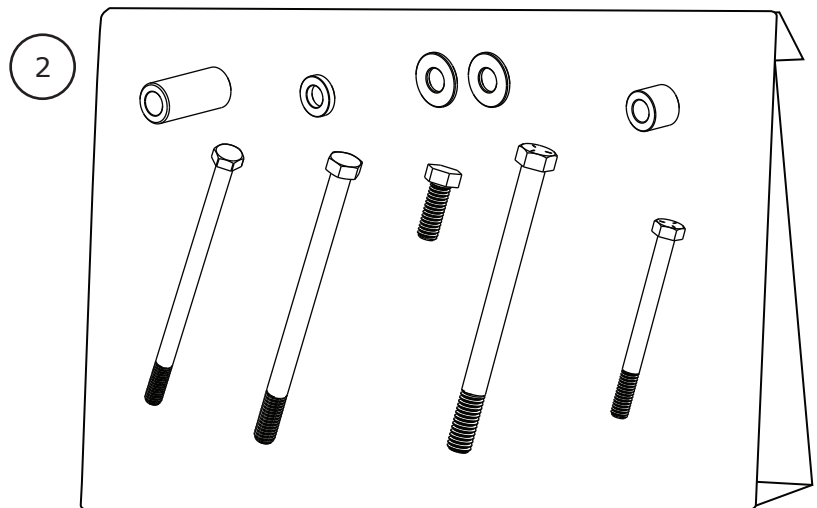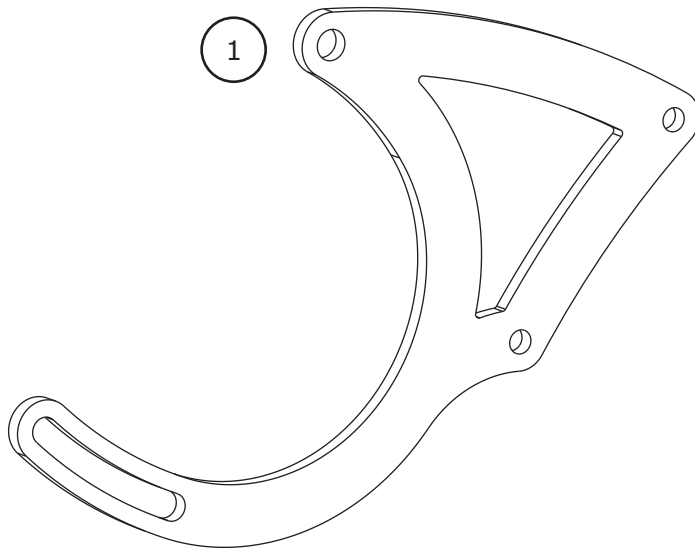

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**

Alternator Bracket Installation

1. Assemble the alternator bracket to the alternator as shown in Photos 1-3, below.
 - A. Place (1) 3/8" flat washer on each side of the alternator bracket tensioning slot, and loosely install the 3/8 x 1" bolt through the washers and tensioning slot into the alternator (See Photos 1 and 2, below).
 - B. Depending on the cylinder head, insert either the 3/8-16 x 5 1/2" bolt or 7/16-14 x 5 1/2" Bolt through the alternator pivot hole with 3" boss as shown in Photos 1 and 3, below. Install the 1.625" spacer onto the end of the bolt. **NOTE: Some Small Block Ford cylinder heads are equipped with 3/8" bolt holes, while others have 7/16" holes.**
 - C. As shown in Photos 1 and 3, below, insert the 5/16-18 x 3 1/2" bolt through the right-most hole in the alternator bracket, and install the .625" spacer onto the end of the bolt.
 - D. As shown in Photos 1 and 3, below, insert the 5/16-18 x 5 1/2" bolt through the remaining hole in the alternator bracket, and install the .150" spacer onto the end of the bolt.

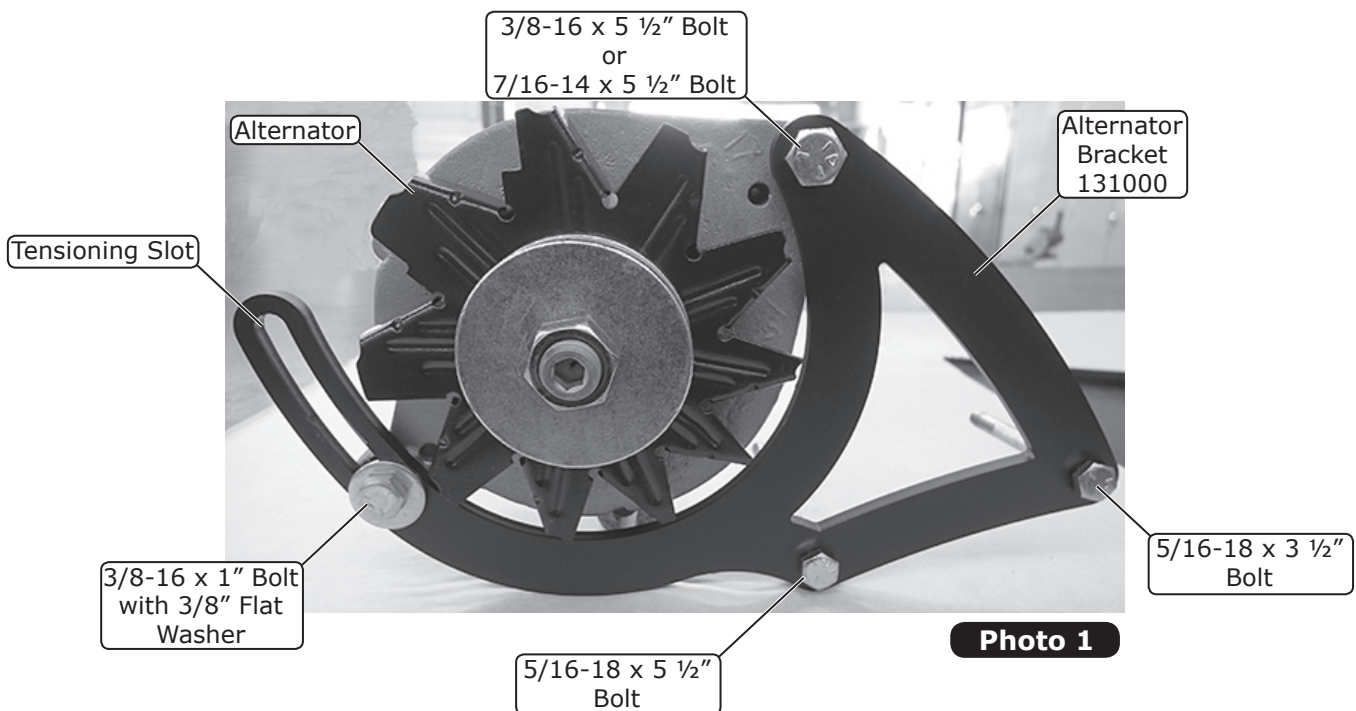


Photo 1

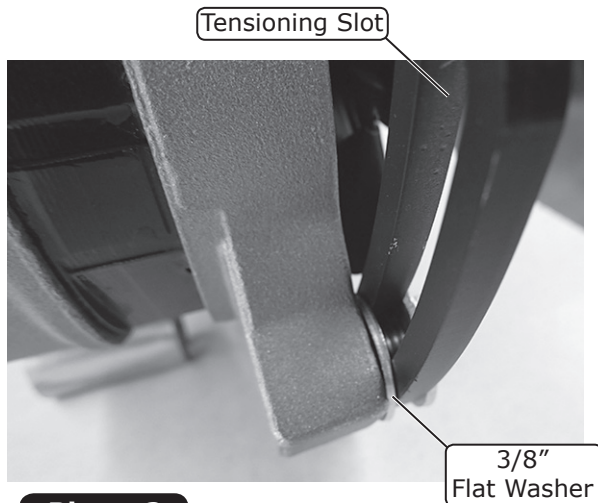


Photo 2

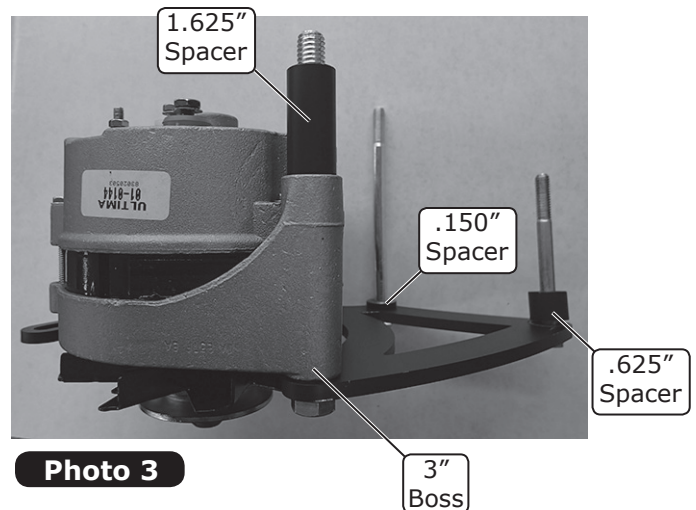


Photo 3

NOTE: Before tightening bolts, assemble the bracket loosely to engine. This will ensure proper alignment of the bracket.

www.vintageair.com

Alternator Bracket Installation (Cont.)

1. Loosely attach the alternator bracket assembly to the engine (See Photos 4 and 5, below).

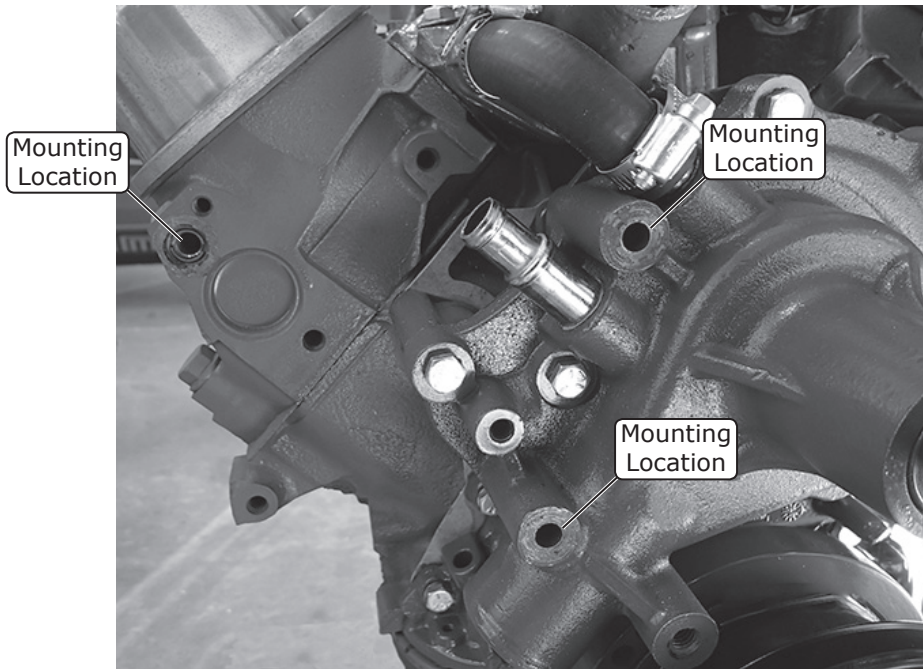


Photo 4

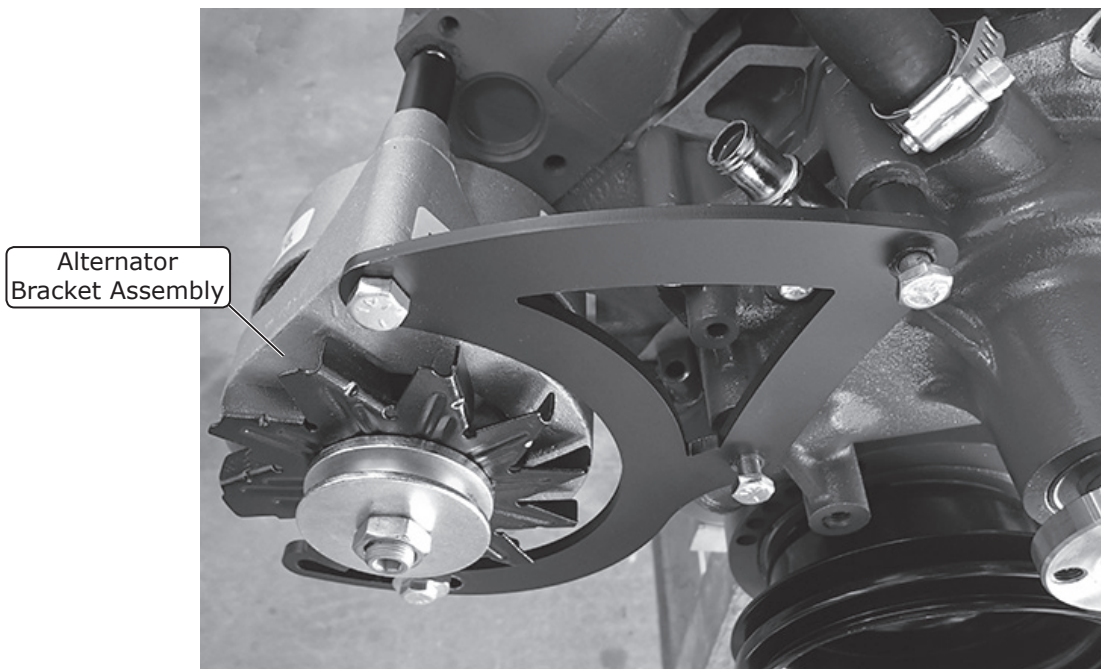


Photo 5

Belt Routing

1. Route belt as shown below. Vintage Air recommends using only Dayco, Gates or Goodyear brand reinforced V-belts with this alternator bracket kit. A belt length of 39 ½" is recommended. **NOTE: This can vary with the diameter of your water pump and crankshaft pulleys.**
2. Tension the belt and tighten all bolts. **NOTE: Check for proper belt alignment.**

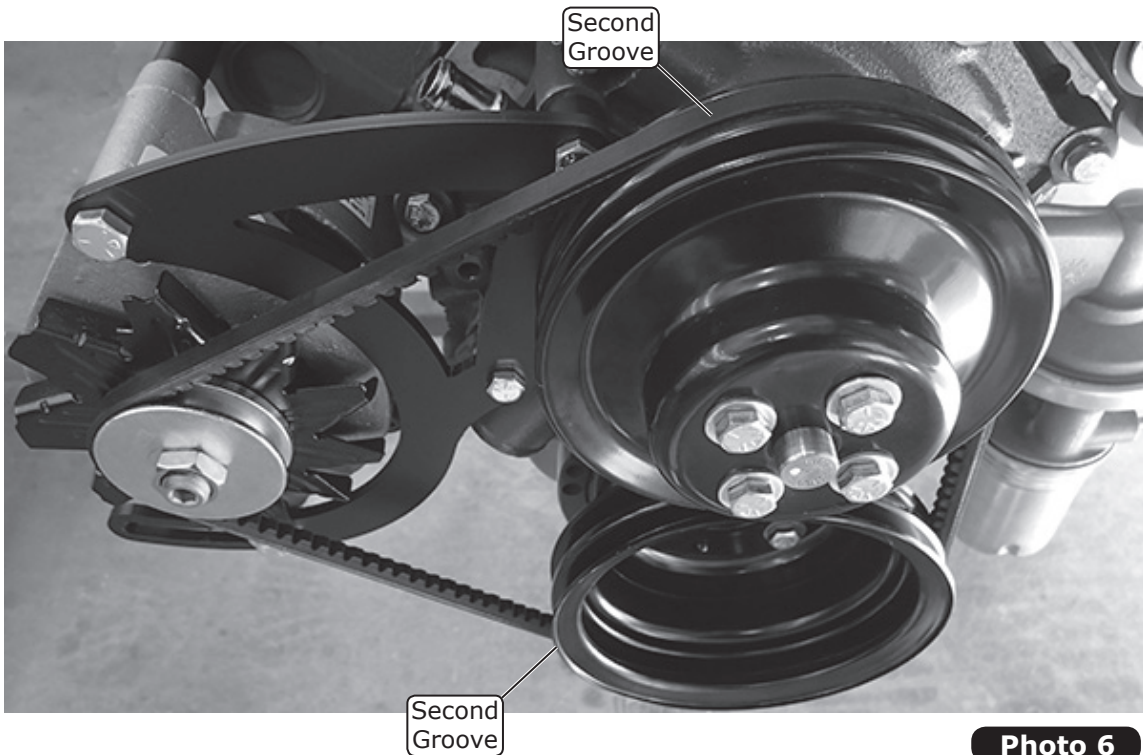


Photo 6





www.vintageair.com

Packing List: Alternator Bracket Kit (131112)

No.	Qty.	Part No.	Description
1.	1	131000	Bracket, Alternator
2.	1	191043	Hardware Kit

Checked By: _____
Packed By: _____
Date: _____

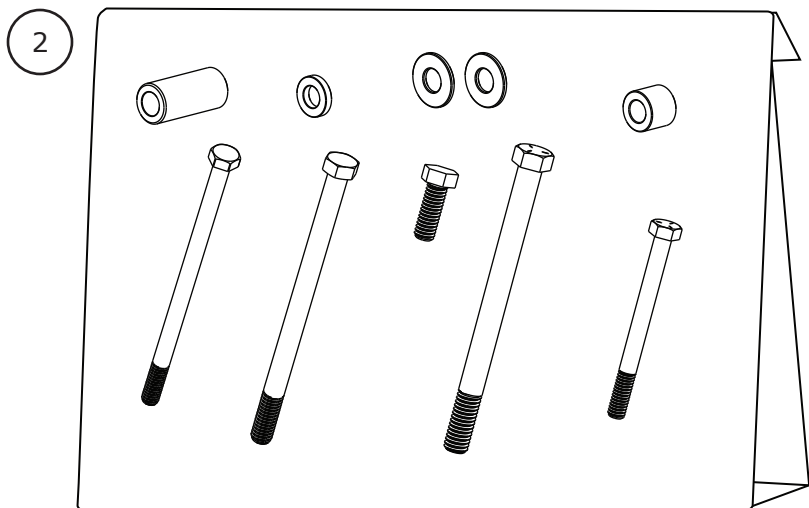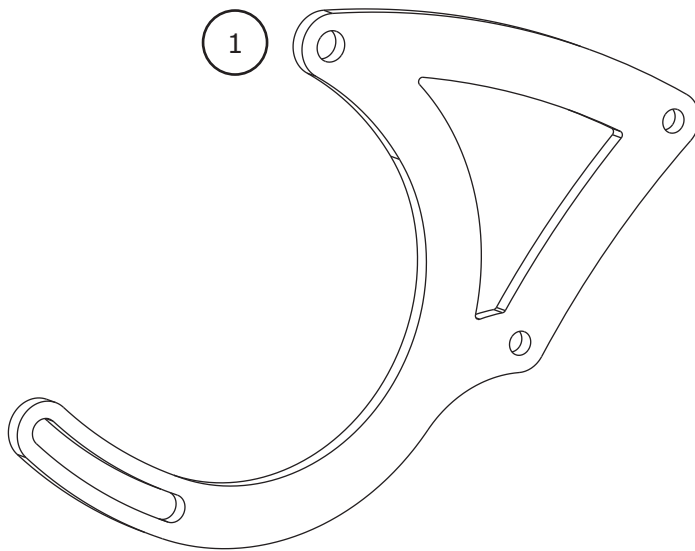

**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**