




SBC LP A/C BRACKET PASSENGER SIDE TOP MOUNT

COMPRESSOR MOUNTING BRACKET INSTALLATION

- ☐ REMOVE THE TOP (2) WATER PUMP MOUNTING BOLTS (DISCARD).
- ☐ REMOVE THE PASSENGER SIDE FRONT INTAKE MOUNTING BOLT (DISCARD).
- ☐ INSTALL THE COMPRESSOR BRACKET AND COMPRESSOR AS SHOWN BELOW.


NOTE: START ALL MOUNTING BOLTS BEFORE TIGHTENING.

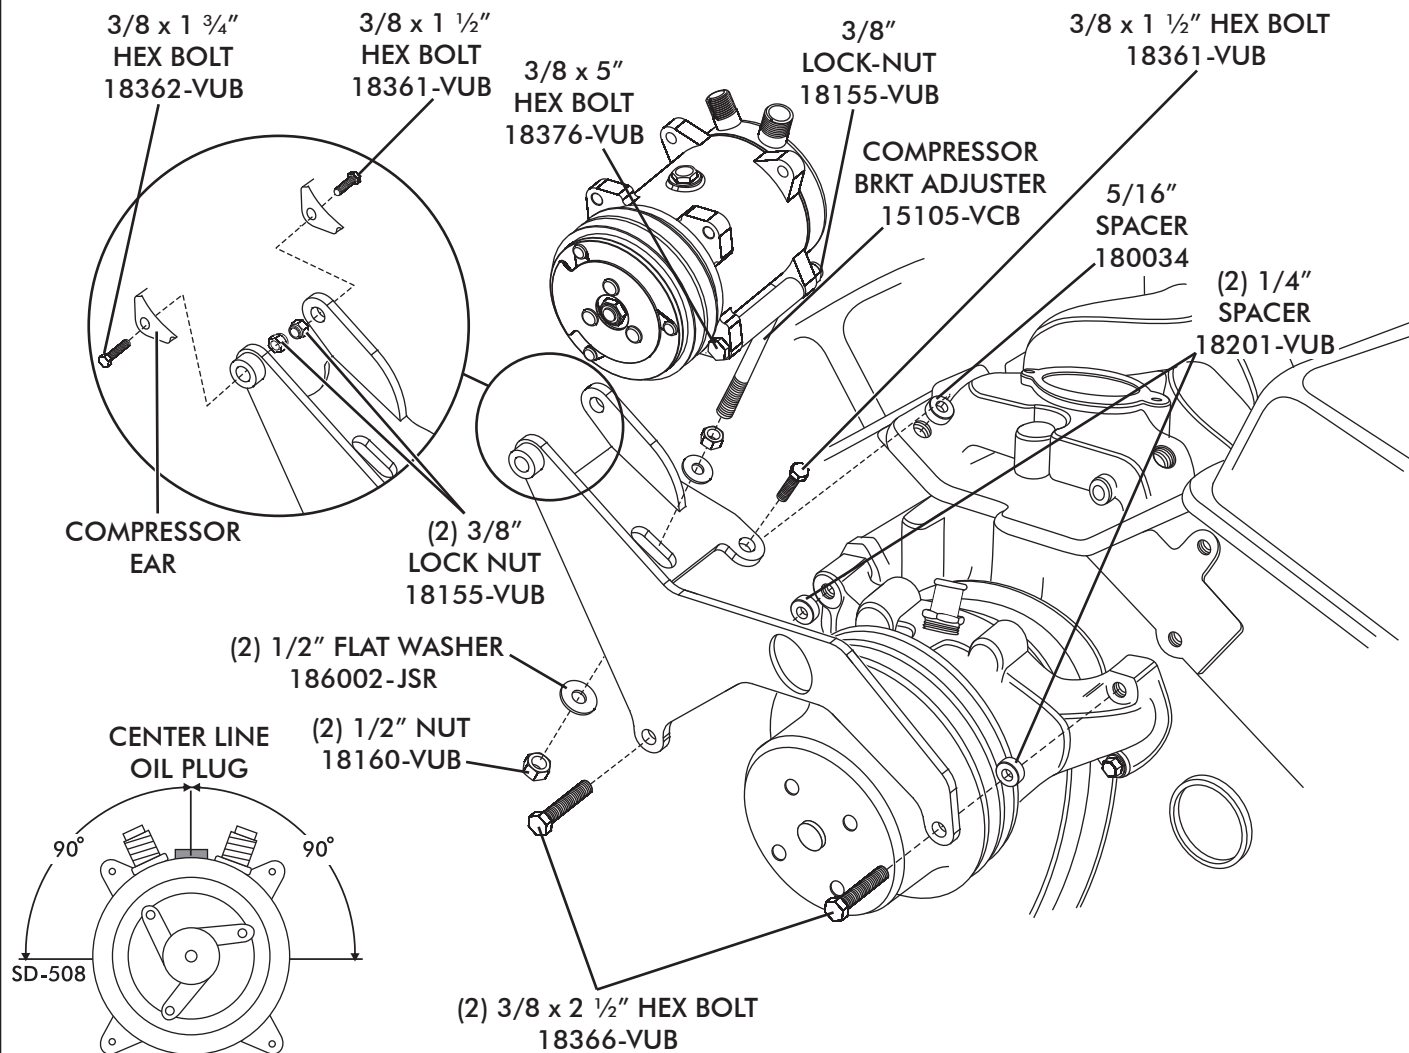


SBC LP A/C BRACKET PASSENGER SIDE TOP MOUNT

**BRACKET KIT
15122-VCB**

No.	QTY.	PART No.	DESCRIPTION
1.	1	141107	BRACKET ASSEMBLY, SBC LP A/C PASSENGER SIDE TOP MOUNT
2.	1	191009	HARDWARE KIT

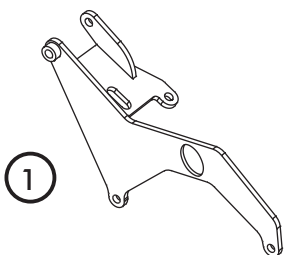

②

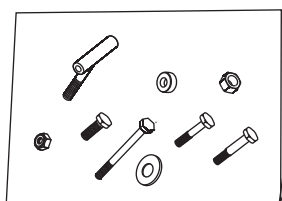


CHECKED BY: _____
PACKED BY: _____
DATE: _____




SBC LP A/C BRACKET PASSENGER SIDE TOP MOUNT

BELT ROUTING

- ☐ ROUTE BELTS AS SHOWN BELOW. VINTAGE AIR RECOMMENDS USING ONLY DAYCO, GATES OR GOODYEAR BRAND REINFORCED V-BELTS WITH THIS COMPRESSOR BRACKET KIT.

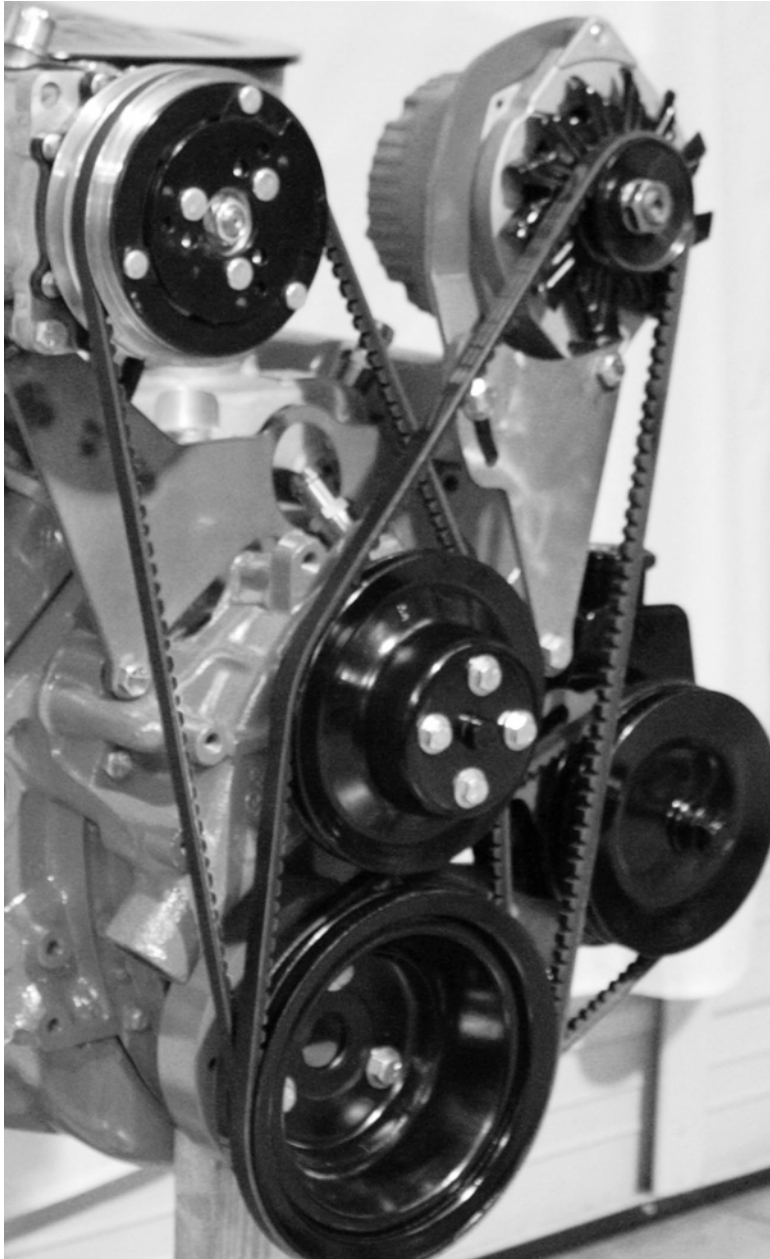

CRANKSHAFT PULLEY GROOVES:

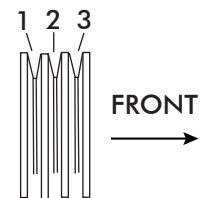

1. CRANKSHAFT & POWER STEERING
2. CRANKSHAFT, WATER PUMP & COMPRESSOR
3. CRANKSHAFT, WATER PUMP & ALTERNATOR