



### Part # 12300298 - 1965-1972 Ford Galaxie Air Suspension Kit



#### Front Components:

12302401                      Front Shockwaves

#### Rear Components:

12304010                      Rear CoolRide Kit

#### Recommended Tools

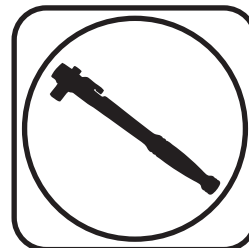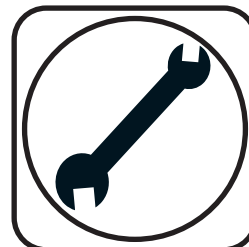

## 1965-1972 Ford Galaxie Air Suspension Kit Installation Instructions

#### Table of contents

Pages 2-6.....Front Shockwaves

Pages 7-14.....Rear CoolRide


Pages 15.....Shock Adjustment





**Part # 12302401** - 65-72 Ford Galaxie Front HQ Shockwave, OEM Control Arms

### Recommended Tools

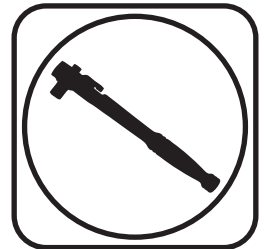

## 1000 Series Bellow, 2.0" Stud/Trunnion 2.9" Shock Installation Instructions

### Table of contents

Page 3..... Included Components

Page 4-6..... Shockwave Installation

Page 6..... Notes and Care of Your Shockwave

### ShockWave Dimensions:

Mount to Mount:

Compressed: 9.60"

Ride Height: 11.00"

Extended: 11.90"

THE DELRIN BALL REQUIRES A 3/4" HOLE FOR THE FLANGE TO GO THROUGH. THIS CAN BE DRILLED WITH A UNIBIT.

[www.ridetech.com](http://www.ridetech.com)






### Major Components .....In the box

**THE CONTROL ARM REINFORCEMENT MUST BE INSTALLED BETWEEN THE TRUNNION AND CONTROL ARM.** See Image 8.

| Item # | Part #       | Description                                                       | QTY |
|--------|--------------|-------------------------------------------------------------------|-----|
| 1      | 982-10-802   | 2.9" Stroke HQ Series Shock                                       | 2   |
| 2      | 90009986     | 2" Stud Top (Installed on Shock) - Includes Adjuster Knob & Screw | 2   |
| 3      | 24090199     | 1000 Series 6.5" Double Convoluted AirSpring                      | 2   |
| 4      | 234-00-153   | AirSpring Locking Ring (Installed on shock)                       | 2   |
| 5      | 99055000     | Locking Ring Set Screw (Installed on shock)                       | 2   |
| 6      | 90002060     | Universal Trunnion                                                | 4   |
| 7      | 90002312     | 2" Aluminum Stud Top Base                                         | 2   |
| 8      | 90001904     | Bottom Delrin Ball                                                | 2   |
| 9      | 90001903     | Top Delrin Ball                                                   | 2   |
| 10     | 90001902     | Delrin Ball Aluminum Top Cap                                      | 2   |
| 11     | 99562003     | 9/16"-18 Thin Nylok Nut                                           | 2   |
| 12     | 210-35-120-0 | Adjuster Knob - (90009986 assembly)                               | 2   |
| 13     | 90009969     | #4-40 X 1/4" SS, 18-8 Pan Head Torx Cap - (90009986 assembly)     | 2   |
| 14     | 90001980     | Trunnion Locking Rings                                            | 4   |
|        | 90003323     | Control Arm Reinforcement Plate (NOT SHOWN)                       | 2   |
|        | 70012160     | 2" Stud Top Metering Rod (installed in stud top)                  | 2   |
|        | 90001994     | 5/8" ID Bearing (installed in shock and eyelet)                   | 4   |
|        | 90001995     | Bearing Snap Ring (installed in shock and eyelet)                 | 8   |

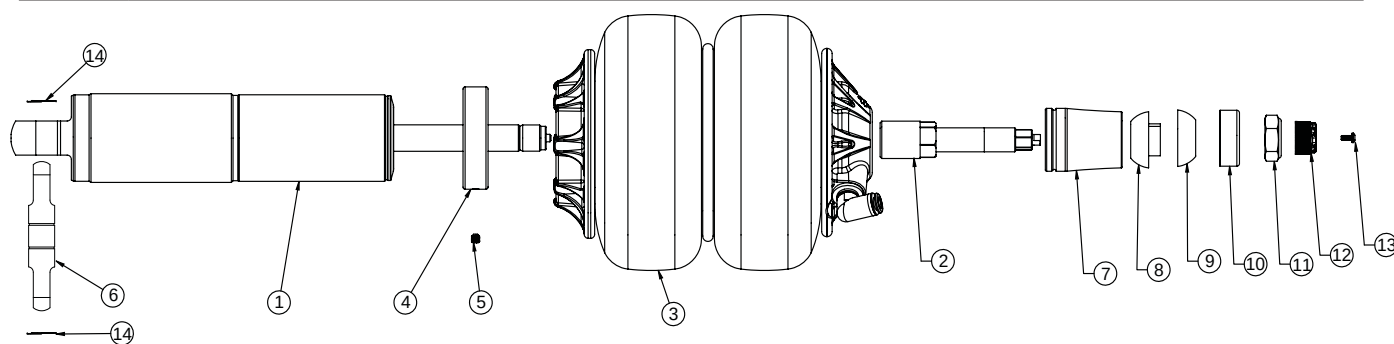

**THE DELRIN BALL REQUIRES A 3/4" HOLE FOR THE FLANGE TO GO THROUGH. THIS CAN BE DRILLED WITH A UNIBIT.**

### Hardware List .....In the box (Kit# 99010173)

| Part Number                          | Description            | QTY | Part Number                    | Description               | QTY |
|--------------------------------------|------------------------|-----|--------------------------------|---------------------------|-----|
| <b>FRONT LOWER CONTROL ARM BRACE</b> |                        |     | <b>TRUNNION TO CONTROL ARM</b> |                           |     |
| 99311030                             | 5/16"-18 x 1" Hex Bolt | 4   | 99373006                       | 3/8" Split Lock Washer    | 4   |
| 99312003                             | 5/16"-18 NYLOK NUT     | 4   | 99373002                       | 3/8" SAE Flat Washer      | 4   |
| 99313001                             | 5/16" SAE Flat Washer  | 2   | 99371024                       | 3/8"-16 x 1 3/4" Hex Bolt | 4   |



### ShockWave Installation




1. Raise and support vehicle at a safe, comfortable working height. Let the front suspension hang freely.

2. Remove the coil spring and shock absorber. Refer to factory service manual for proper disassembly procedure.

3. The upper shock hole needs drilled to 3/4". A Unibit works well for drilling the hole.



4. Lay the lower shock mount on the lower control arm aligning the outer holes with the OEM shock mounting holes. This mount strengthens the control arm and relocates the bottom of the shock toward the engine.

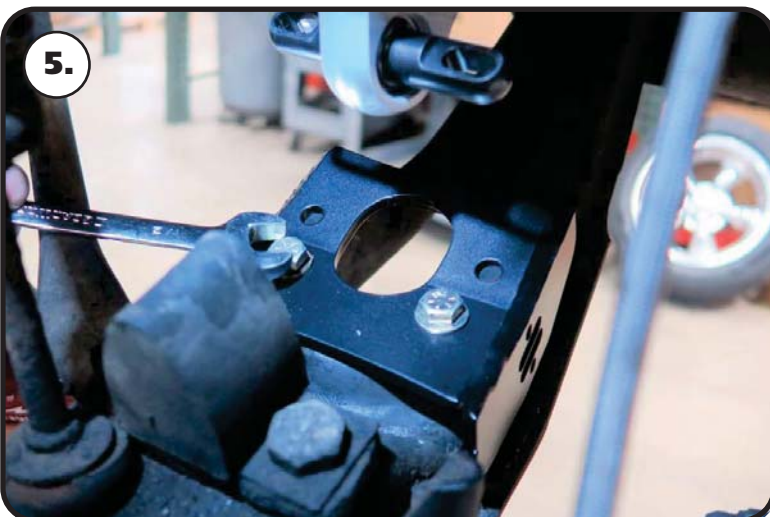

5. Install a 5/16" flat washer on each of (2) 5/16"-18 x 1" bolts. Insert the bolt/washer in the aligned holes of the lower mount and control arm. Install a 5/16" flat washer & 5/16" nylok nut on each of the bolts. Torque to 25 ft-lbs.



### Installation


6.



6. Use a 5/16" drill bit to drill the (2) inner holes using the lower mount as a guide.

**Note:** The airline must also be routed at this time.

7.

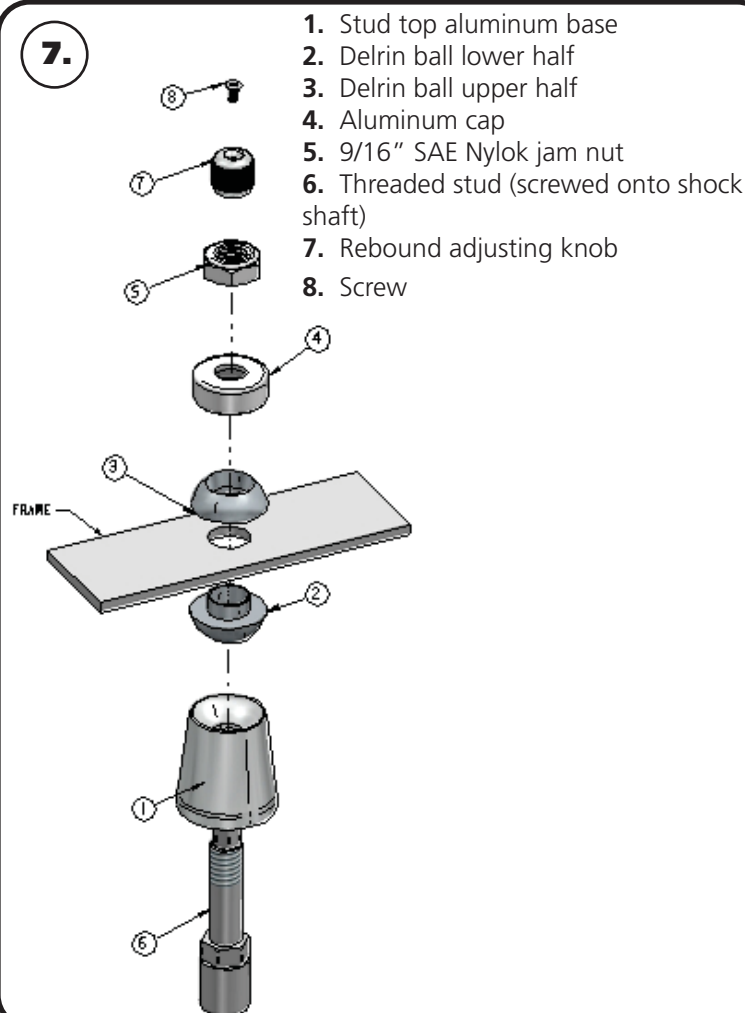

1. Stud top aluminum base
2. Delrin ball lower half
3. Delrin ball upper half
4. Aluminum cap
5. 9/16" SAE Nylok jam nut
6. Threaded stud (screwed onto shock shaft)
7. Rebound adjusting knob
8. Screw

7. Apply thread sealant to a 90 degree air fitting and screw it into the top of the Shockwave. The air fitting location can be rotated by twisting the bellow assembly separate of the shock. Place the Shockwave into the coil spring pocket with the stud sticking through the OEM shock hole. See assembly **Diagram 7**. OEM Shock hole **must** be drilled out to 3/4"

1. Stud top aluminum base
2. Delrin ball lower half
3. Delrin ball upper half
4. Aluminum cap
5. 9/16" SAE Nylok jam nut
6. Threaded stud (screwed onto shock shaft)
7. Rebound adjusting knob
8. Screw

**TIGHTENING THE TOP 9/16"-18 NUT:** SNUG THE NUT DOWN AGAINST THE TOP CAP. YOU NEED TO BE ABLE TO ARTICULATE THE SHOCK BY HAND. WE TORQUE THE NUT TO 80 IN-LBS USING A 7/8" CROWS FOOT WRENCH ON A TORQUE WRENCH.



### ShockWave Installation



8. Raise the lower arm up to the Shockwave and bolt them together using the 5/16" x 1 1/2" bolts, washers, & nylok nuts supplied with the ShockWaves. Torque to 25 ftlbs.

9. The best ride quality will occur around 50-60% suspension travel; depending on vehicle weight this typically occurs around 100-110 psi.

#### NOTES:

**WARNING: ATTEMPTING TO REMOVE THE AIR FITTING WILL DAMAGE IT AND VOID THE WARRANTY.**

**TIGHTENING THE TOP 9/16"-18 NUT:** SNUG THE NUT DOWN AGAINST THE TOP CAP. YOU NEED TO BE ABLE TO ARTICULATE THE SHOCK BY HAND. WE TORQUE THE NUT TO 80 IN-LBS USING A 7/8" CROWS FOOT WRENCH ON A TORQUE WRENCH.

You can clock the airfitting location on the ShockWave by turning the AirSpring assembly of the shock. Make sure the fitting doesn't contact the frame.

When cutting the airline, use a razor blade. The cut needs to be a clean cut and square for the airline to seal properly.

**The Locking ring on the shock is NOT adjustable. These rings are set at the factory to optimize the AirSpring stroke with the shock stroke.**

### The care and feeding of your new ShockWaves

1. Although the ShockWave has an internal bumpstop, **DO NOT DRIVE THE VEHICLE DEFLATED RESTING ON THIS BUMPSTOP. DAMAGE WILL RESULT.** The internal bumpstop will be damaged, the shock bushings will be damaged, and the vehicle shock mounting points may be damaged to the point of failure. This is a non warrantable situation.

2. Do not drive the vehicle overinflated or "topped out". Over a period of time the shock valving will be damaged, possibly to the point of failure. This is a non warrantable situation! If you need to raise your vehicle higher than the ShockWave allows, you will need a longer unit.

3. The ShockWave is designed to give a great ride quality and to raise and lower the vehicle. **IT IS NOT MADE TO HOP OR JUMP!** If you want to hop or jump, hydraulics are a better choice. This abuse will result in bent piston rods, broken shock mounts, and destroyed bushings. This is a non warrantable situation.

4. Do not let the ShockWave bellows rub on anything. Failure will result. This is a non warrantable situation.


5. The ShockWave product has been field tested on numerous vehicles as well as subjected to many different stress tests to ensure that there are no leakage or durability problems. Failures have been nearly nonexistent unless abused as described above. If the Shockwave units are installed properly and are not abused, they will last many, many years. ShockWave units that are returned with broken mounts, bent piston rods, destroyed bumpstops or bushings, or abrasions on the bellows will not be warrantied.



### Part # 12304010 - 1965-1972 Galaxie Rear CoolRide Kit



#### Recommended Tools

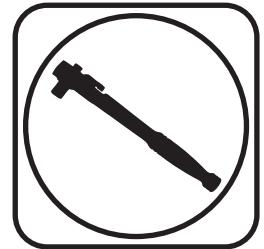

## 1965-1972 Galaxie Rear CoolRide Kit Installation Instructions

### Table of contents

|                 |                                 |
|-----------------|---------------------------------|
| Page 8.....     | Air Spring Kit Components       |
| Page 9.....     | Hardware List & Getting Started |
| Page 10-14..... | Installation                    |
| Page 15.....    | Shock Adjustment                |



### Air Spring Kit Components .....In the box

| Item # | Part Number | Description                                         | QTY |
|--------|-------------|-----------------------------------------------------|-----|
| 1      | 90009002    | 5" Diameter Rolling Sleeve Air Spring               | 2   |
| 2      | 90003326    | Upper Air Spring Mount                              | 2   |
| 3      | 90003325    | Upper Mounting Spacer                               | 4   |
| 4      | 90003328    | Air Spring Roll Plate                               | 2   |
| 5      | 90003324    | Lower Clamping Plate                                | 2   |
| 6      | 90003327    | Bumpstop Mount                                      | 2   |
| 7      | 90002284    | Upper Mount Cotter Pin                              | 2   |
| 8      | 70013322    | Bumpstop                                            | 2   |
| 9      | 23289999    | 7.55 Universal Bottom Shock                         | 2   |
| 10     | 70011138    | .750" ID Shock Bushing (installed in shock)         | 2   |
| 11     | 90002103    | .625" ID x 1.312" Shock Sleeve (installed in shock) | 2   |
| 12     | 72000224    | Shock Stud (installed in shock)                     | 2   |
| 13     | 70012188    | Shock Stud Bushing Kit                              | 2   |
| 14     | 99372006    | 3/8"-24 Shock Stud Jam Nut                          | 4   |





### Hardware List .....In the box (Kit# 99010176)

The Hardware Kit contains bags to help aid in selecting the correct hardware for the component being installed. The hardware list shows how the hardware is bagged.

| Part Number                  | Description             | QTY |
|------------------------------|-------------------------|-----|
| <b>REAR BAG TO UPPER CUP</b> |                         |     |
| 99371071                     | 3/8"-16 x 1/2" Hex Bolt | 4   |
| 99373002                     | 3/8" SAE Flat Washer    | 4   |
| <b>BUMPSTOP</b>              |                         |     |
| 99372004                     | 3/8"-16 Hex Nut         | 2   |

| Part Number                 | Description            | QTY |
|-----------------------------|------------------------|-----|
| <b>REAR BAG TO REAR END</b> |                        |     |
| 99371072                    | 3/8"-16 x 1" Hex Bolt  | 2   |
| 99373006                    | 3/8" Split Lock Washer | 2   |
| 99373002                    | 3/8" SAE Flat Washer   | 2   |

### Getting Started.....

1. Raise the vehicle up to a comfortable work height. You will need the support the car by the frame to be able to freely raise and lower the rear axle. Use a jack under the differential to support it.
2. Remove the rear shocks, coil springs. Retain the lower shock hardware for installation of the new shocks supplied with this kit.



3. Remove the bump stops from the OEM location, retaining the OEM hardware. A new bumpstop and bracket will be installed later.



4. Drill a 3/4" hole in the center of the upper coil spring locator. A unibit works well for this.



### Installation



5. Thread the bumpstops in the bumpstop mounts. Thread a 3/8"-16 nut on the threads of the bumpstop. Tighten the nut against the bumpstop mount.



6. Install the bumpstop/mount in the OEM location using the OEM hardware.



7. Insert the (2) upper mount spacers in the top side of the coil spring locator. The center hole should line up with the hole drilled in **Step 4**.



### Installation



8. Put thread sealant on air fittings and thread them into the top of each air spring and tighten.

**IMPORTANT NOTE:** MAKE SURE THE AIR SPRING MOUNTING HARDWARE DOES NOT BOTTOM OUT IN THE AIR SPRING. IF THE HARDWARE IS TOO LONG, IT CAN DAMAGE THE AIR SPRING.




9. Align the upper air spring mount with the mounting holes in the top of the air spring. The upper mount is notched out to clear the air fitting. Align the notch with the air fitting and the 2 mounting holes with the mounting holes of the air spring. Install a 3/8" flat washer on each of (2) 3/8"-16 x 1/2" hex bolts. Thread the bolt/washer in the top of the air spring. Torque to 23 ft-lbs.




10. The pin of the upper air spring will get inserted into the hole drilled in previous steps. The upper mount is positioned in the car with the air fitting to the rear of the car. The pin will go through the center of the spacers installed in **Step 7**.



### Installation

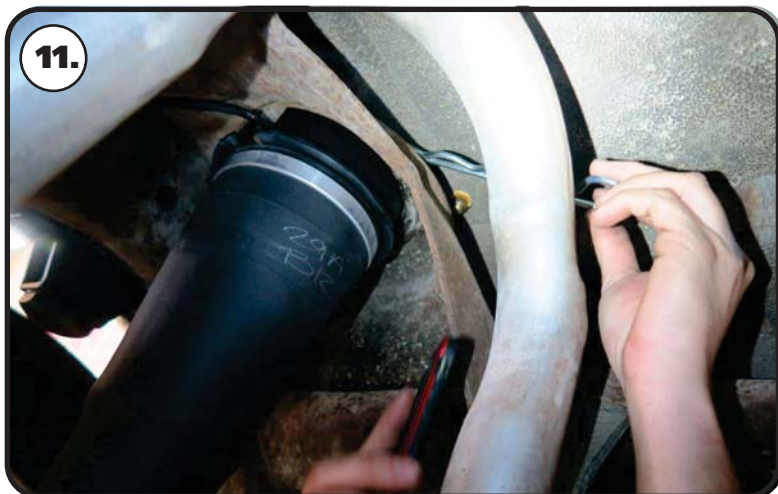

**11.** Insert the pin of the upper air spring mount through the hole drilled in the frame and the upper spacer. While holding it in place insert the long cotter pin in the hole of the pin. This will hold the air spring in place.

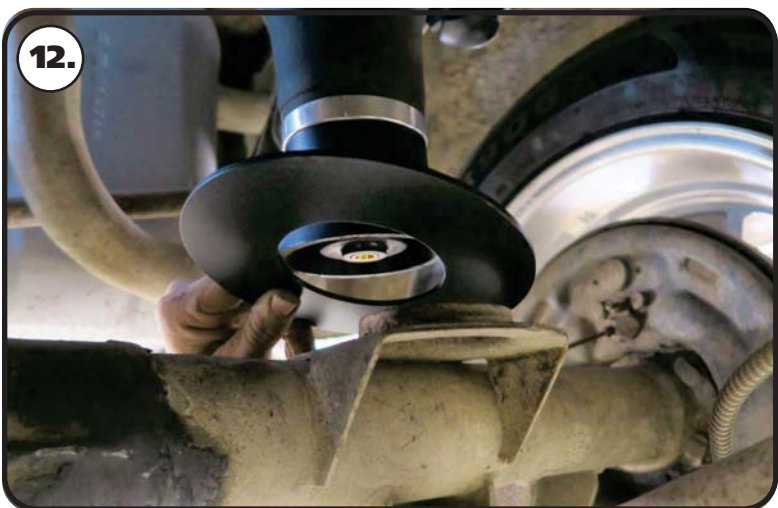

**12.** Install the lower air spring roll plate on the lower coil spring mount. The center hole of the roll plate will sit over the coil spring locator.



**13.** The piston of the air spring will sit over the coil spring locator with the center of the piston nesting into the center hole of the locator.




### Installation



**14.** The "D" shaped clamping plate will clamp the bottom of the air spring in place. The CURVED side of the plate will go to the front of the car, away from the axle tube.




**15.** Install a 3/8" split lock washer & 3/8" SAE flat washer on each a 3/8"-16 x 1" hex bolt. Insert the bolt in the hole of the clamping plate, threading it into the bottom of the air spring. Torque the bolts to 23 ft-lbs.

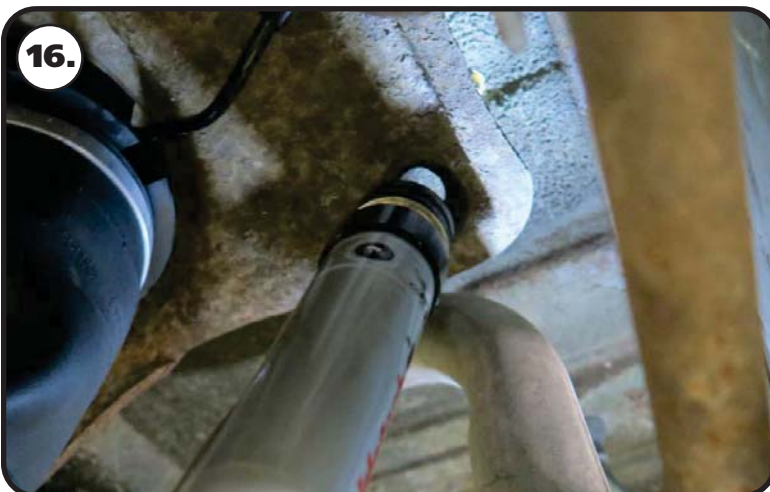

**16.** Use **Images 16 & 17** for proper installation of the shock to the frame of the car. The new shock will be installed in place of the OEM shock. The shock length is designed to work in relation to the air spring stroke length.



### Installation

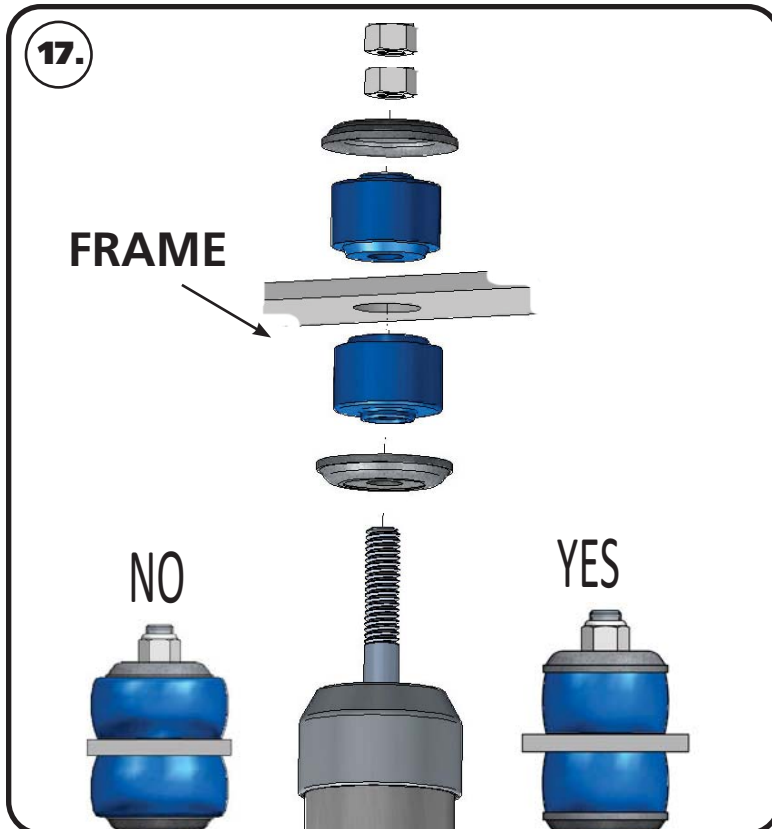

**17.** Use **Images 16 & 17** for proper installation of the shock to the frame of the car. Install a bushing support washer on to the stud of the shock body followed by a shock stem bushing. Insert the assembly through the factory shock hole in the frame. With the shock stud sticking through the frame, install a shock stem bushing on to the shock stud followed with a bushing support washer. Install a 3/8"-24 thin jam nut onto the threads and tighten to 35 in-lbs. The bushing should be tight, but not to the point that the bushing is bulging past the support washer. Install the 2nd 3/8-24 thin jam nut and tighten it against the first nut.



**18.** Attach the eyelet of the shock to the OEM shock stud using the OEM hardware. We recommend positioning the adjuster knob to be inside of the car for easier access. You may need to raise or lower the axle to align the shock eyelet with the shock stud.

**19.** Attach the air lines to the air springs.



### Bump Stop Adjustment

20.



20. The bumpstop nut can be moved to the bottom side of the bump stop bracket to limit the amount of compression travel your car has. You can use this to limit how low your car will go when deflated.


### Shock Installation and Adjustment

#### Shock adjustment 101- Single Adjustable

##### Rebound Adjustment:

How to adjust your new shocks

The rebound adjustment knob is located on the top of the shock absorber protruding from the eyelet or stud top. You must first begin at the ZERO setting, then set the shock to a street setting of 12 or handling setting of 8.

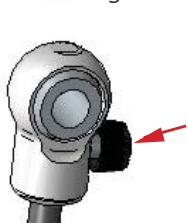


-Begin with the shocks adjusted to the ZERO rebound position (full stiff). Do this by rotating the rebound adjuster knob clockwise until it stops.



-Now turn the rebound adjuster knob counter clockwise 12 clicks. This sets the shock at 12 for a street setting. If you are after a handling setting only go 8 clicks.

##### Take the vehicle for a test drive.

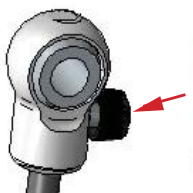

-if you are satisfied with the ride quality, do not do anything, you are set!

-if the vehicle is too soft increase the damping effect by rotating the rebound knob clockwise 3 additional clicks.



-If the vehicle is too stiff rotate the rebound adjustment knob counter clock wise 2 clicks and you are set!

Take the vehicle for another test drive and repeat the above steps until the ride quality is satisfactory.

##### Note:

One end of the vehicle will likely reach the desired setting before the other end. If this happens stop adjusting the satisfied end and keep adjusting the unsatisfied end until the overall ride quality is satisfactory.