



DRIVER

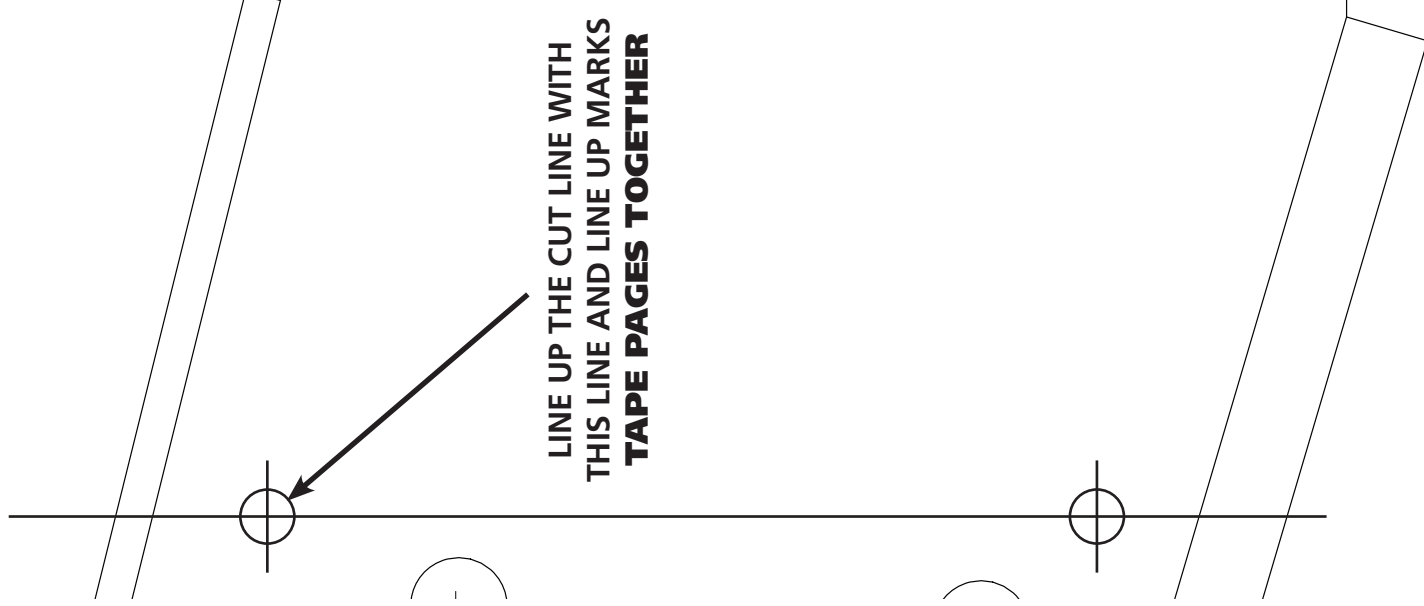

NOTES:


1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER

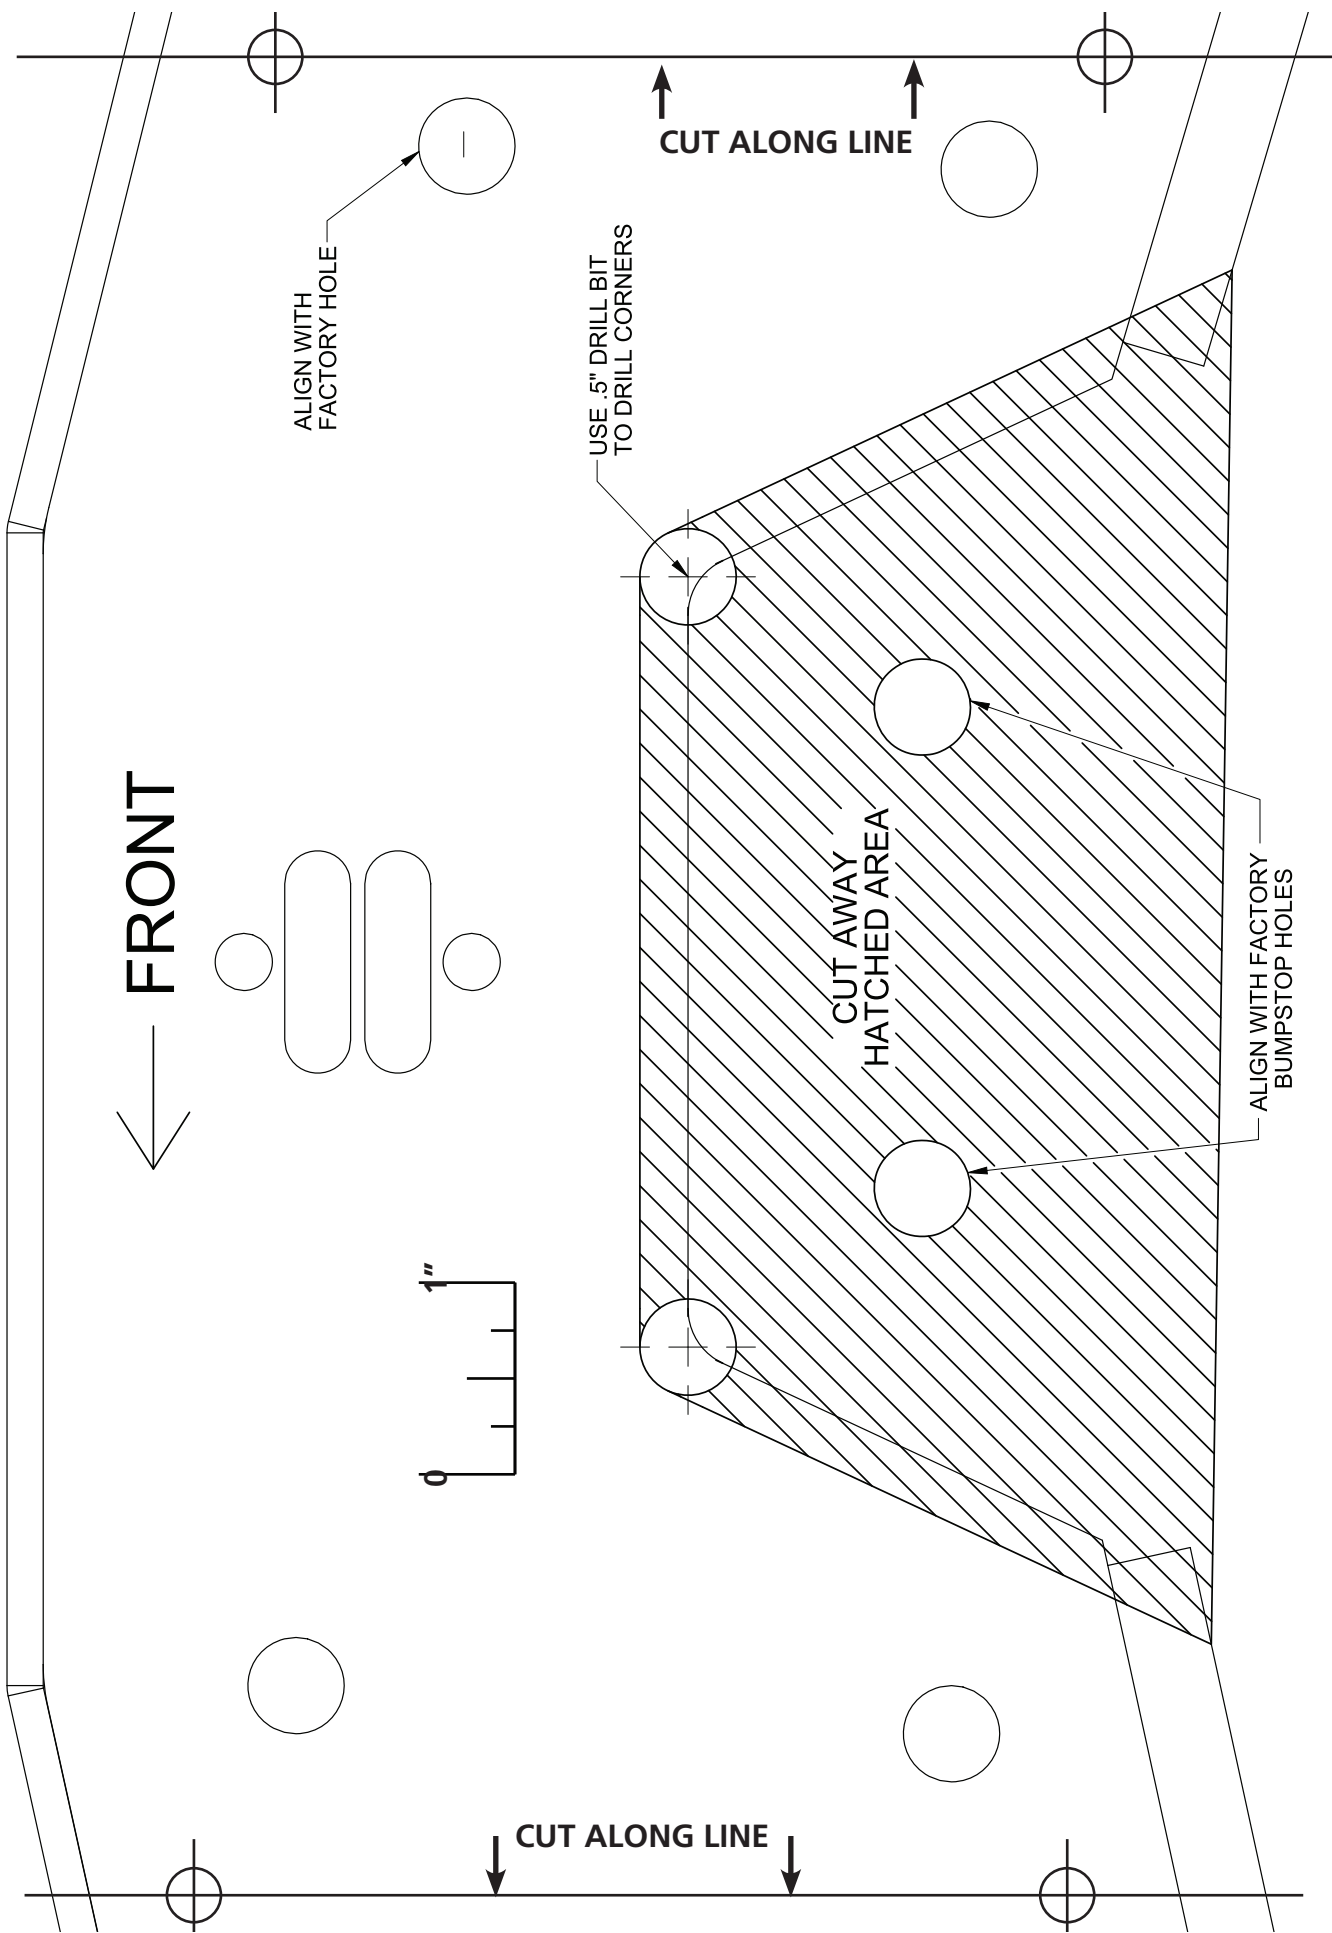

DRIVER


NOTES:
1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER

DRIVER

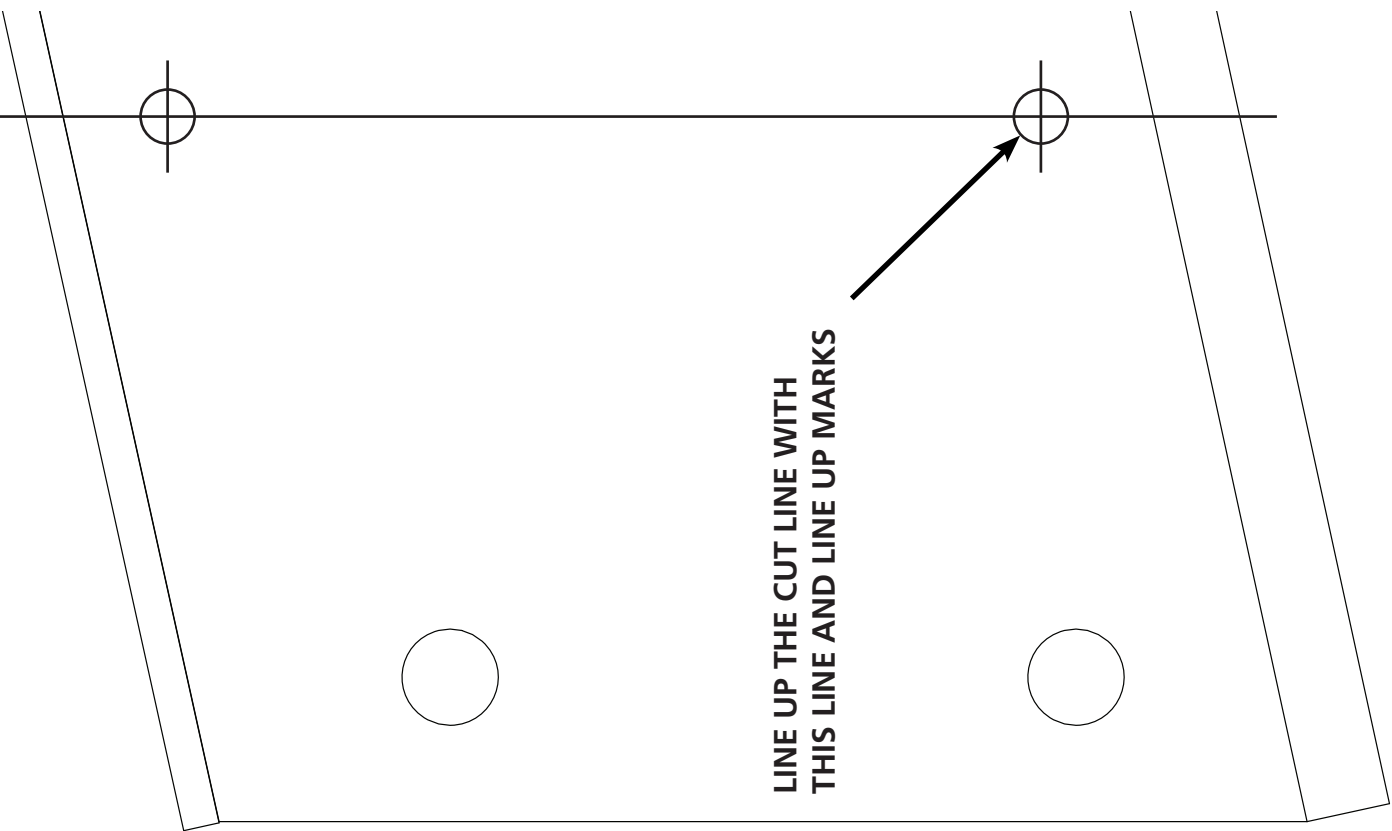

- NOTES:
1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER

PASSENGER

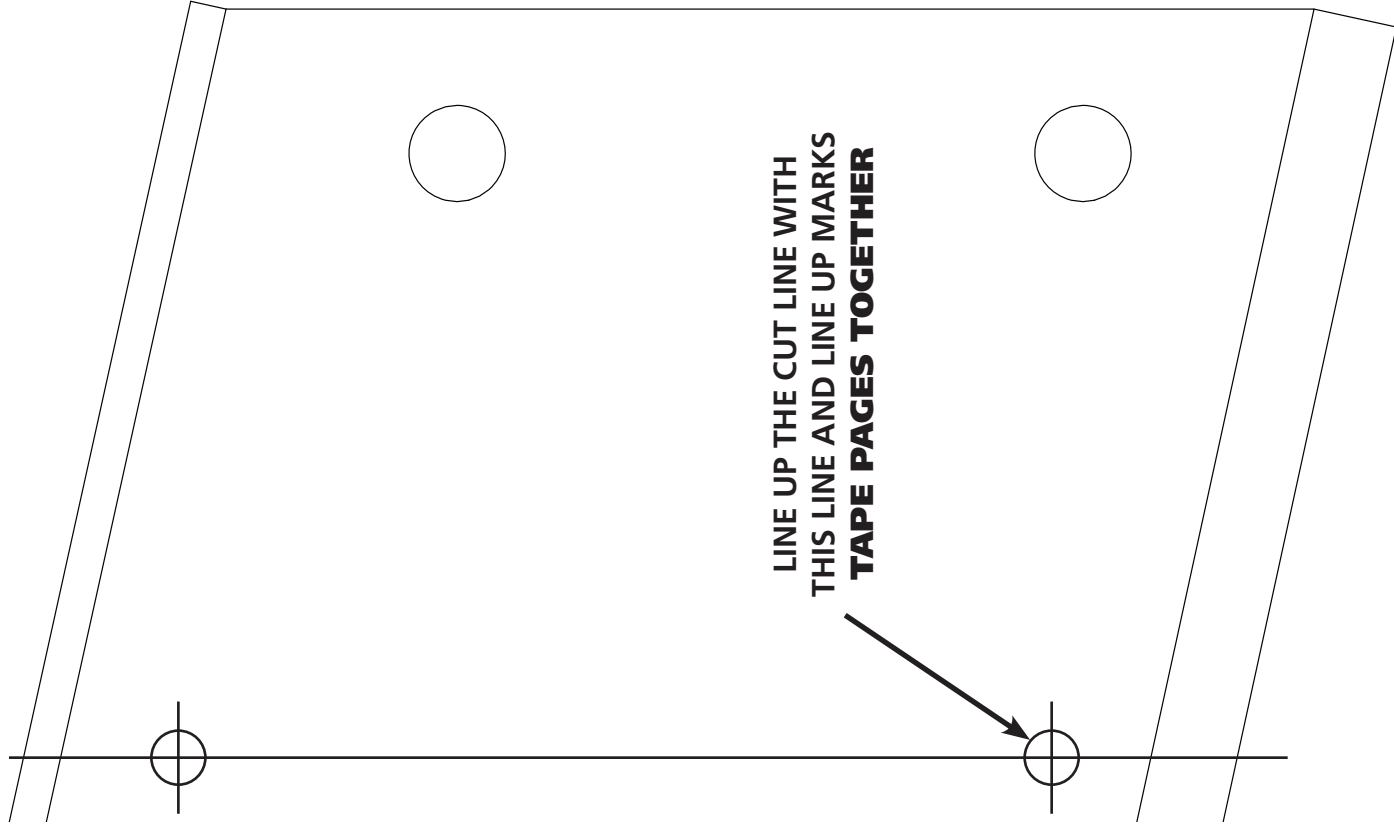


NOTES:

1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER

PASSENGER

FRONT



ALIGN WITH
FACTORY HOLE

CUT ALONG LINE

USE .5" DRILL BIT
TO DRILL CORNERS

CUT AWAY
HATCHED AREA

ALIGN WITH FACTORY
BUMPSTOP HOLES

CUT ALONG LINE

NOTES:
1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER

PASSENGER

LINE UP THE CUT LINE WITH
THIS LINE AND LINE UP MARKS



NOTES:
1. MUST PRINT TO FULL SCALE ON A 8 1/2" x 11" SHEET OF PAPER