

INSTRUCTIONS

© 2025, Speedway Motors, Inc.

SPEEDWAY
motors®

910-35800 - G-Comp 1962-67 Chevy II Inner Fender Panels


Kit Contents

Qty	Part #	Description	Item #
1	91035800.1.1-LH	Back Piece, Drivers Side	1
1	91035800.1.2-LH	Front Piece, Drivers Side	2
1	91035800.1.1-RH	Back Piece, Passenger Side	3
1	91035800.1.2-RH	Front Piece, Passenger Side	4

Hardware

Qty	Description	Tool Size	Location
20	#10-24 Button Head Cap Screw, .50" Long	3/8" Hex	H1
14	#10-24 Keps Nut	1/8" Allen	H2

1. Count and ensure that all listed parts in the instructions sheet are supplied.
2. Bolt the back piece, drivers side (1), and the front piece, drivers side (2) together using the #10-24 button head cap screws (H1), and the #10-24 Keps nuts (H2). Repeat this with the passenger side pieces as well.

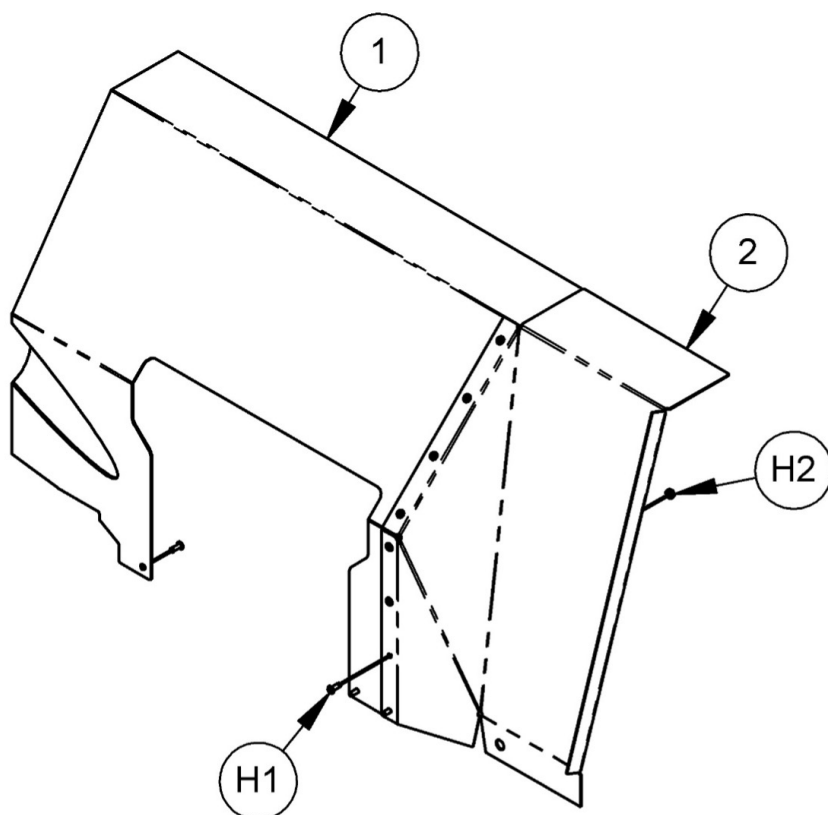


INSTRUCTIONS

© 2025, Speedway Motors, Inc.



3. Hold the inner fender panels in their desired location, (trimming of the inner fender panel along the firewall may be required to achieve a tight fit).
4. Once the the inner fender panels are in their desired location mark and drill holes aligned with the holes in the fender support.
5. After drilling the holes in the top of the the inner fender panels, bolt the inner fender panels to the fender support of the car.
6. Mark the frame rail where the smaller three holes in the bottom of the inner fender panels line up with the frame rail. Drill and tap these holes to #10-24. Use to remaining #10-24 button head cap screws to bolt the bottom of the inner fender panels to the frame rail.

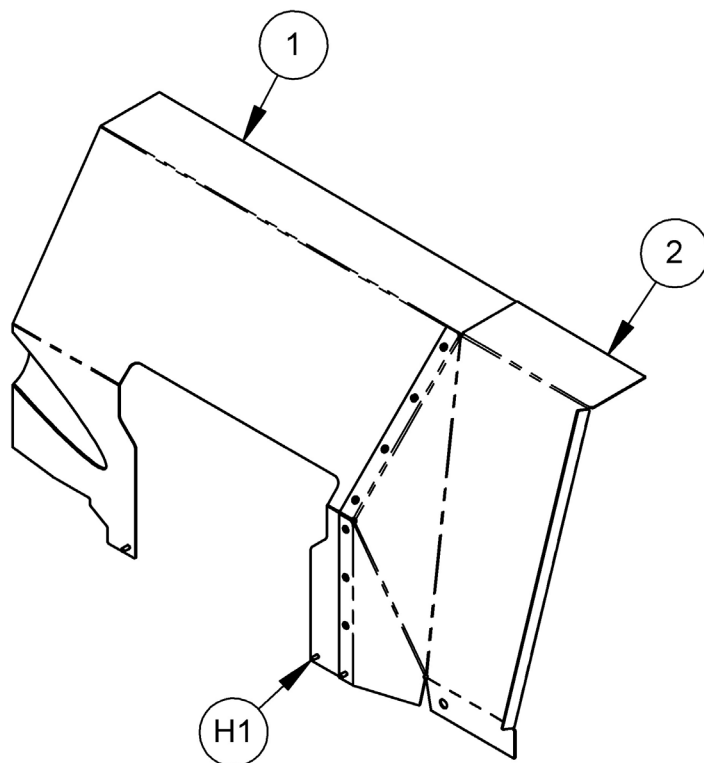

7. Reuse the bumper support bolts to bolt the bottom front of the inner fender panels to the frame rail.

