

INSTRUCTIONS

910-49801


FRONT PANHARD BAR

Though designed for use with TCI frames and suspension parts, the front panhard bar can be adapted to most any chassis using a 4-link, transverse spring and a beam or tube axle.

A. Bolt axle mounting bracket to inside of passenger side 4-link batwing with bar mount at bottom.

B. Using assembled bar as guide, position frame bracket (with open side towards engine) on bottom of drivers side frame rail just behind the front cross-member. Make sure that panhard bar runs parallel to axle and then weld frame bracket in place.

All welding should be done by a qualified welder.

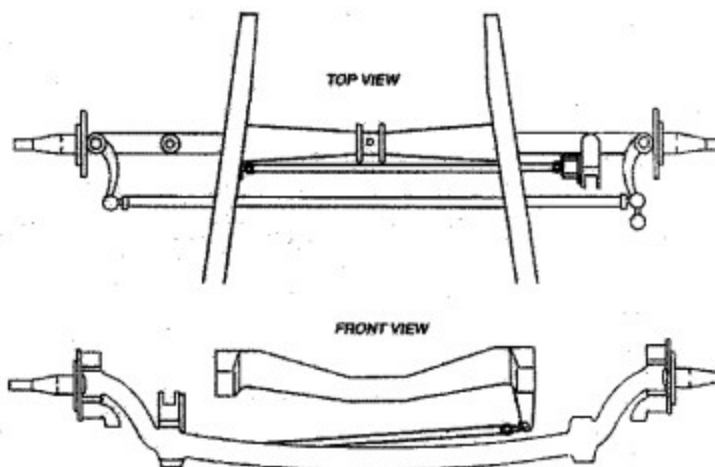

Speedway Motors Inc., P.O. Box 81906
Lincoln, NE 68501 (402) 323-3200
www.speedwaymotors.com

