


INSTRUCTIONS

© 2025, Speedway Motors, Inc.



910-98225 - 1973-80 Chevy C10 Hood Braces

Kit Contents		
Qty	Part #	Description
2	91098225.1	Hood Brace
10	91098225.2	#8 Pan Head Screw, Stainless

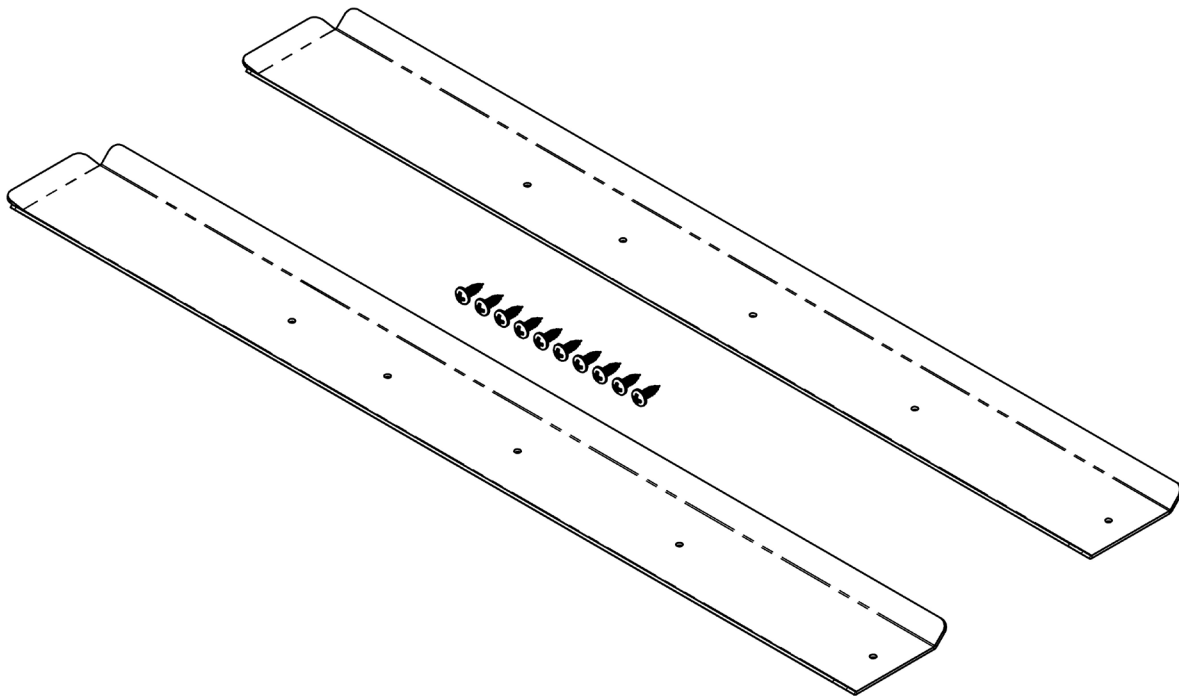

1. These braces are designed to reinforce the 1973-80 C10 hood to avoid the common issue of bending when closing.
2. Align the brace with the rib on the underside of the hood, just in front of the hinges. The flanged end of the brace should be positioned near the hood hinge, with the flanges facing upward. Center or position the brace where it best fits your specific application.
3. Mark the 5 holes for drilling and remove the brace.
4. Carefully drill pilot holes in the underside of the hood rib using a #29 (0.136" diameter drill). Take care to avoid hitting the body surface of the hood to avoid damage. A short drill bit or use of a spacer to set the maximum depth of the drill will help.
5. Apply a small amount of clear silicone around the holes to seal out water and avoid corrosion. Align the brace with the holes and install using 5 self-tapping screws.
6. Repeat these operations for the other brace.