

952-151 Dirt Wings, Jack Attachment

Kit Contents		
Part	Description	Quantity
952151	Dirt Wings, Jack Attachment	1

Product questions, issues?


Contact Speedway Motors:

Email: sales@speedwaymotors.com

Phone: 800.979.0122


Mon-Fri, 8am - 5pm (CT)

www.speedwaymotors.com

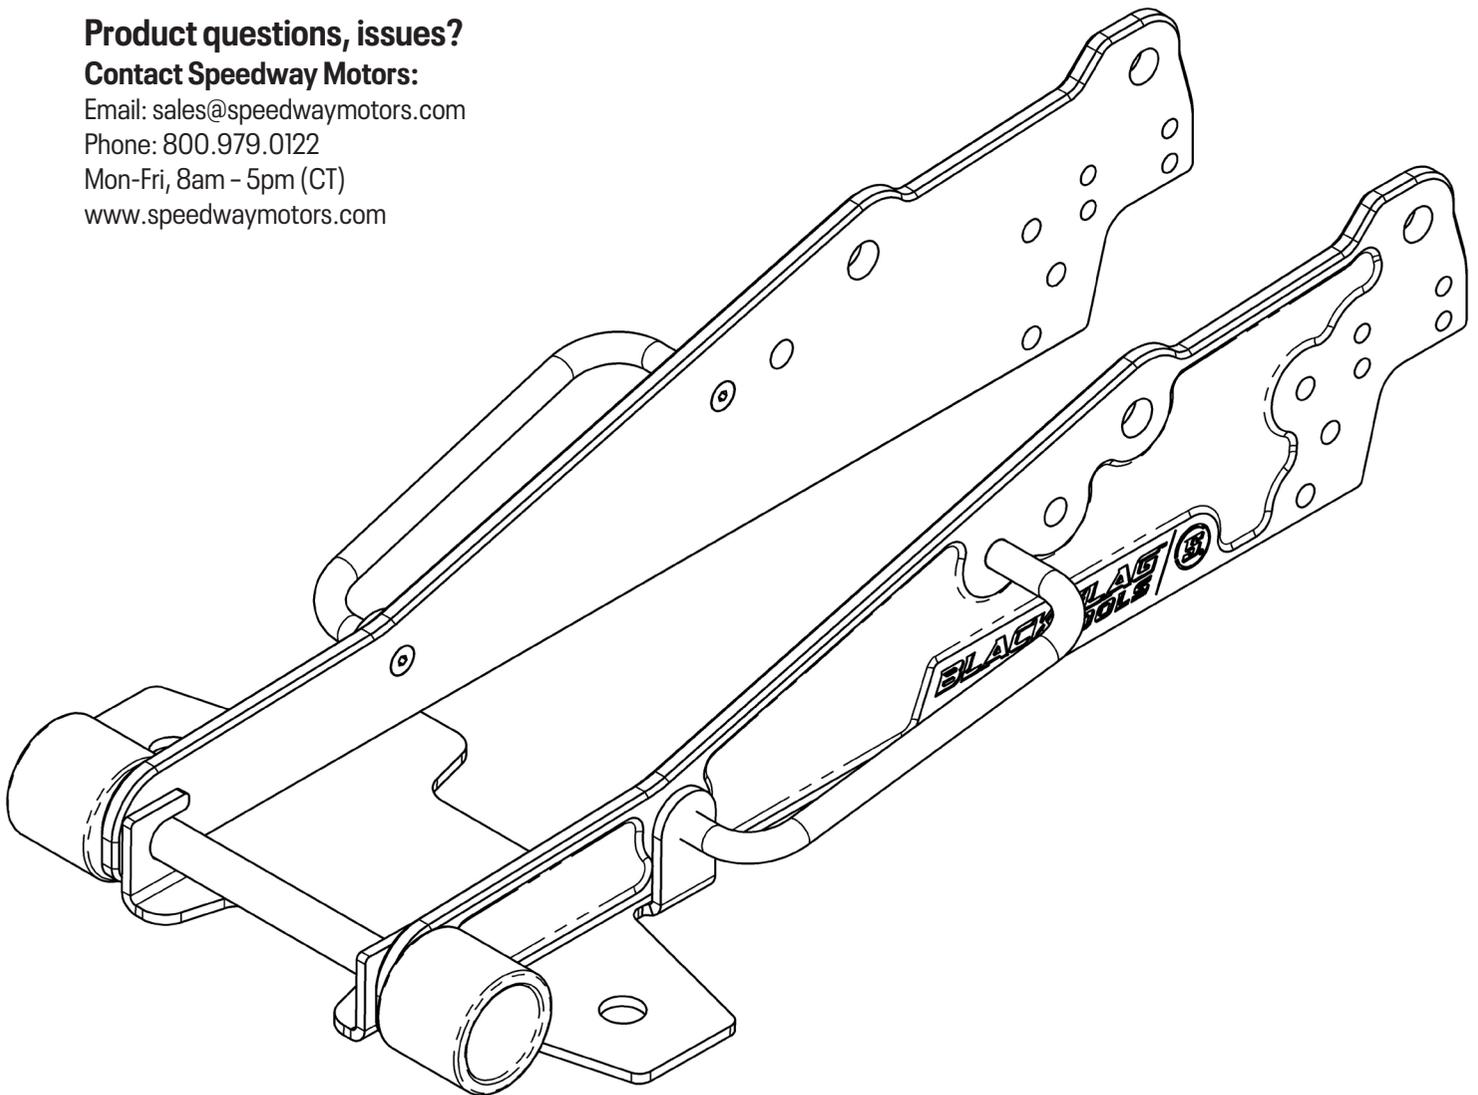


1. Start with removing both front wheels by loosening the nylon nuts in the center of both wheels as shown.

2. Remove the front most cap screws on both sides of the jack. The rear cap screws can be removed (remove handles) or loosened slightly to slide the wing attachment between the handles.

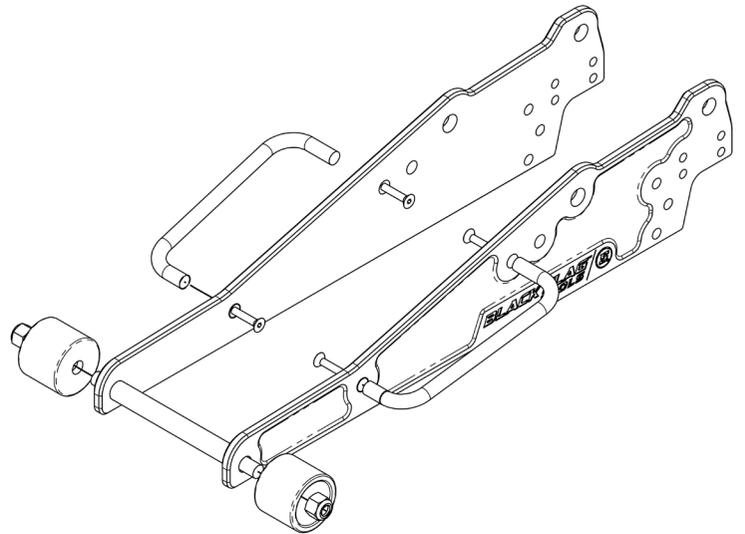

3. Hook the dirt wing attachment to the center rod on the jack, as shown.

4. Now, slide the rear mounting tabs between the handles and outside of the jack to line up with the mounting holes.

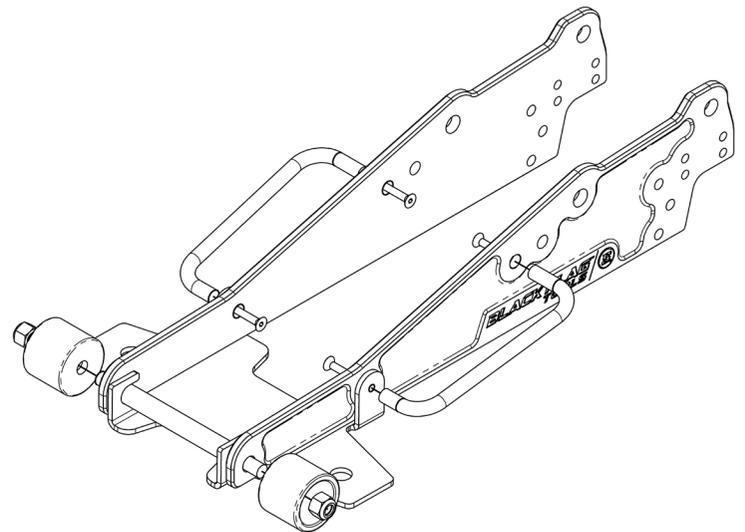

5. The jack can be reassembled, remember to tighten all fasteners carefully and adequately to be ready for use. The jack should look as pictured below after assembly.

