



PN 1008
79-04 Ford Mustang Rear End Housing Bushings



- 1.) Begin the installation by supporting your vehicle on a full size chassis lift or four heavy duty jack stands allowing the rear axle to hang.
- 2.) If your vehicle is not supported using a full size chassis lift you will have to use a hydraulic floor jack to raise the rear axle eliminating any downward load.
- 3.) Completely remove ONE rear upper control arm.
- 4.) Remove the OE bushing from the axle housing while making sure NOT to damage or remove the steel shell!
- 5.) Once you have removed the OE bushing, thoroughly clean any debris that may have been left during removal. Then install the new polyurethane bushings; see illustrations below for detailed information.
- 6.) Reinstall the rear upper control arm with all the existing OE hardware. Do not tighten fully at this time.
- 7.) Repeat steps 3-6 on the opposite rear upper control arm.
- 8.) If your vehicle is NOT supported using a full size chassis lift, carefully jack the rear axle housing upwards to its normal ride height position with the vehicle still remaining on the jack stands.
- 9.) Torque the bolt and nut assemblies to 70-100 lbft.
- 10.) Installation should be complete now and you can lower the vehicle from the lift or stands.

Thank you for putting your trust in a UMI Performance Product!
www.umiperformance.com

WARNING: 
Do not remove
the OE shells.

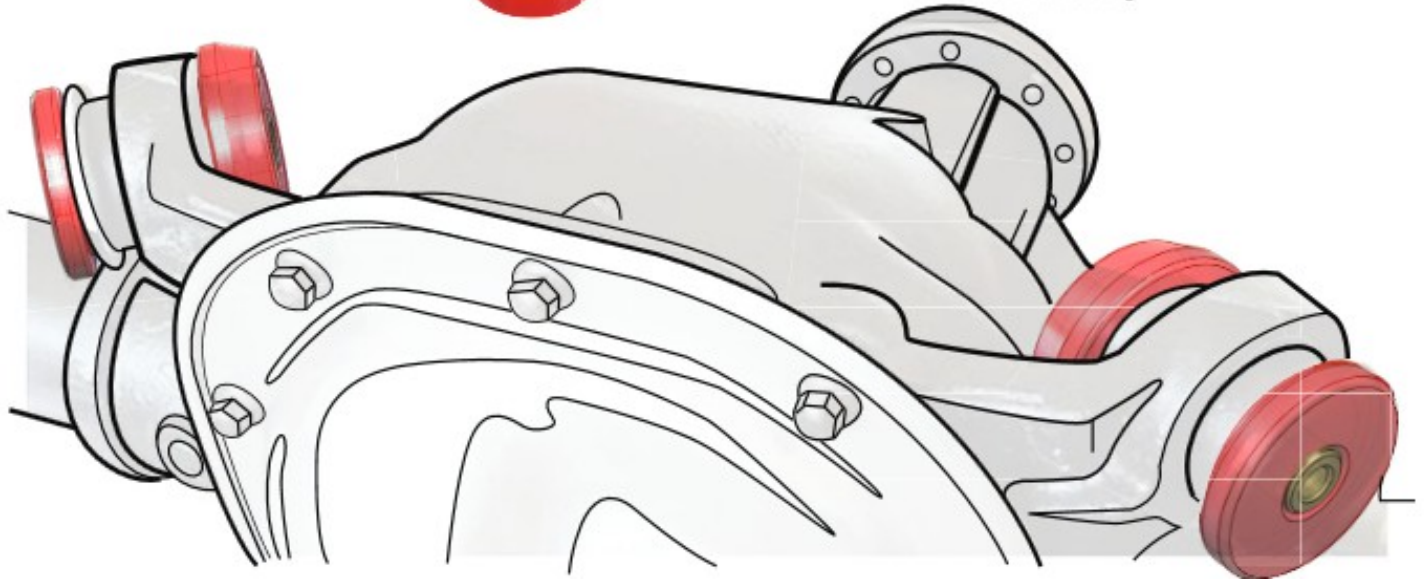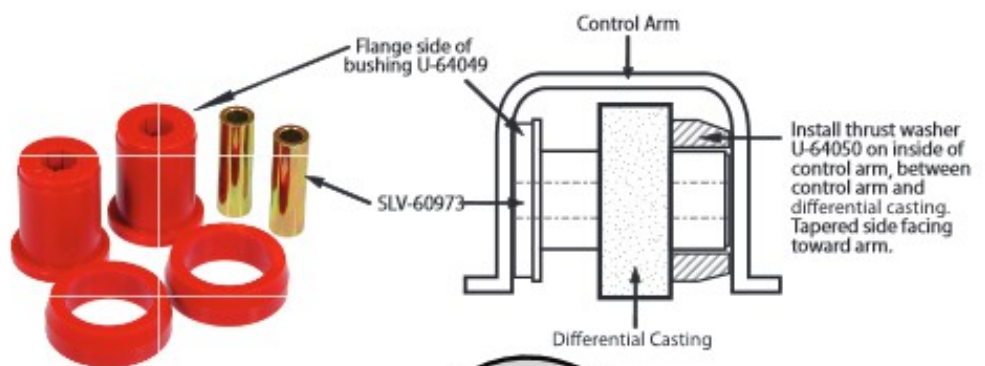

Item # 1008

79-04 Ford Mustang Axle Housing Bushings

UMI Performance Inc.
Made in Pennsylvania, USA