



an ISO 9001:2008 Registered Company

1963-65 CORVETTE

CONDENSER w/DRIER

021163

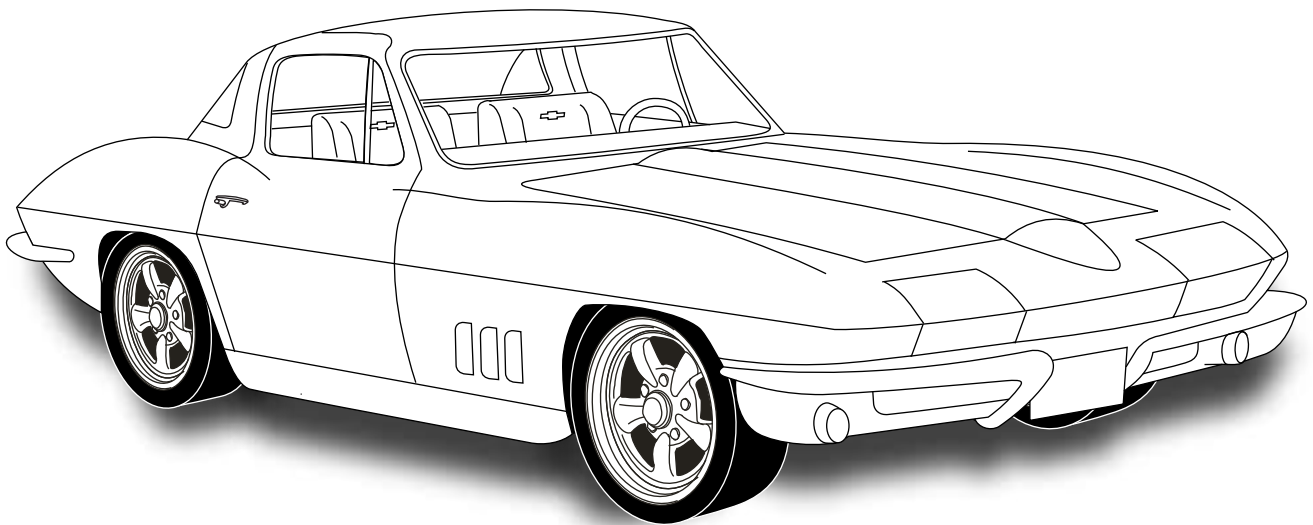




Table of Contents

PAGES


1. COVER
2. TABLE OF CONTENTS
3. PACKING LIST/PARTS DISCLAIMER
4. MOUNTING BRACKET INSTALLATION
5. MOUNTING BRACKET INSTALLATION CONT./DRIER INSTALLATION
6. CONDENSER & HARDLINE INSTALLATION
7. HARDLINE CLAMP & SAFETY SWITCH INSTALLATION
8. PACKING LIST



CONDENSER KIT 021163

No.	QTY.	PART No.	DESCRIPTION
1.	1	03766-VUC	14 X 22 PARALLEL FLOW COND.
2.	2	07113-VUB	DRIER CLAMP
3.	1	07321-VUC	DRIER
4.	1	644037	BRKT 63-65 VETTE COND TOP
5.	1	644038	BRKT 63-67 VETTE COND PASS SIDE BTM
6.	1	644039	BRKT 63-67 VETTE COND DR SIDE BTM
7.	1	644051	BRKT 14 3/4" TYPE 2 UNIVERSAL DRIER
8.	1	091079	HARDLINE 63-65 VETTE #6 DRIER/CORE
9.	1	091080	HARDLINE 63-65 VETTE #8 COND
10.	1	35130-VCG	HARDLINE 63-67 VETTE COND/DRIER
11.	8	18260-VUB	10-24 NUT w/STAR WASHER
12.	8	18249-VUB	10-24 x 3/8" PAN HEAD SCREW
13.	3	33857-VUF	#6 O-RING
14.	1	33858-VUF	#8 O-RING
15.	2	18247-VUB	#10 x 1/2" HEX SCREW
16.	1	11079-VUS	MALE BINARY SWITCH
17.	1	23135-VUW	COMPRESSOR LEAD
18.	1	31600-VUD	#2 ADEL CLAMP
19.	1	18250-VUB	10-32 x 1/2" PAN HEAD SCREW
20.	1	18251-VUB	10-32 NUT w/STAR WASHER

**** BEFORE BEGINNING INSTALLATION OPEN ALL PACKAGES AND CHECK CONTENTS OF SHIPMENT. PLEASE REPORT ANY SHORTAGES DIRECTLY TO VINTAGE AIR WITHIN 15 DAYS. AFTER 15 DAYS, VINTAGE AIR WILL NOT BE RESPONSIBLE FOR MISSING OR DAMAGED ITEMS.**

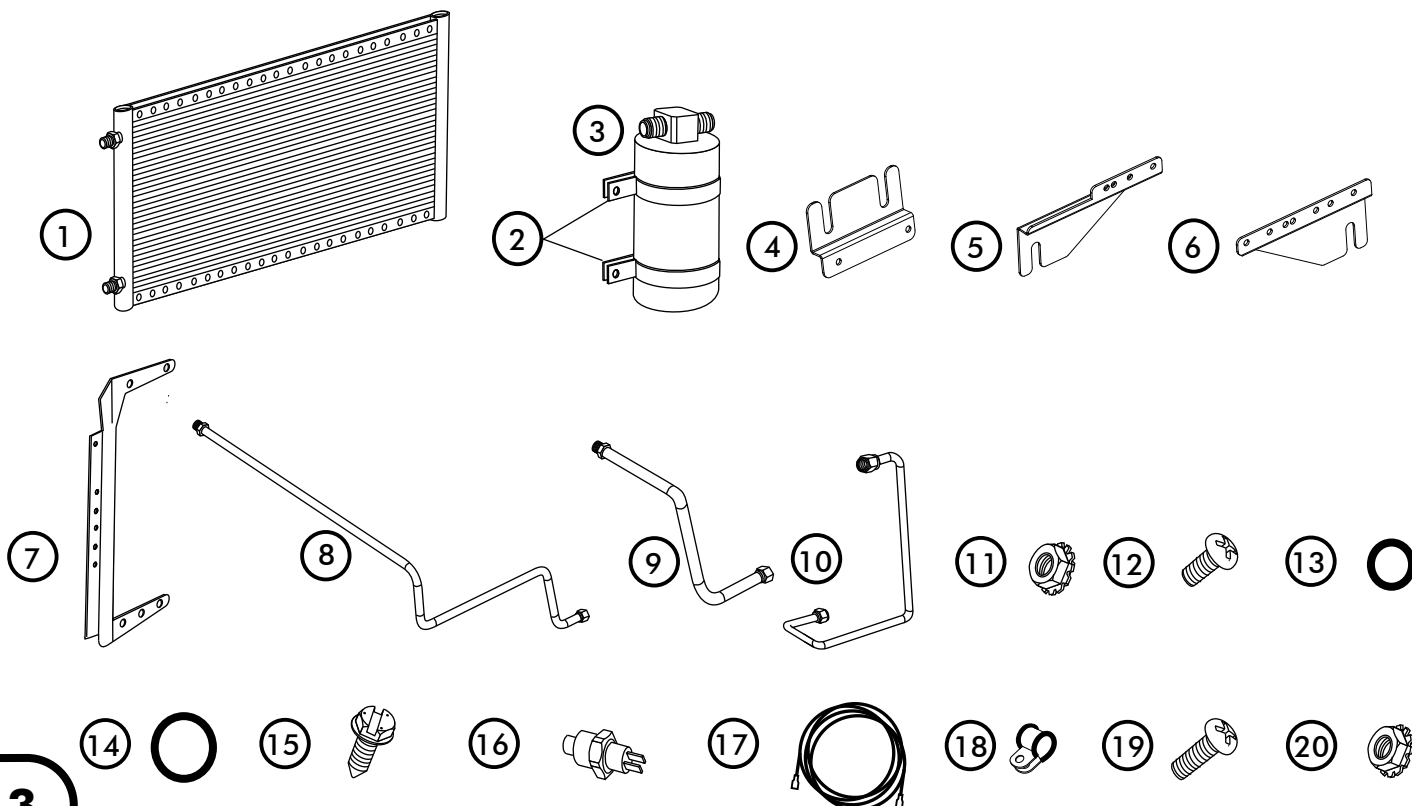




NOTE: MARK HINGE LOCATION ON HOOD AND REMOVE HOOD. REMOVE HOOD PROP.

MOUNTING BRACKET INSTALLATION


- INSTALL MOUNTING BRACKETS ON TO CONDENSER USING 10-24 x 3/8" PAN HEAD SCREWS AND 10-24 NUTS w/STAR WASHERS AS SHOWN BELOW.

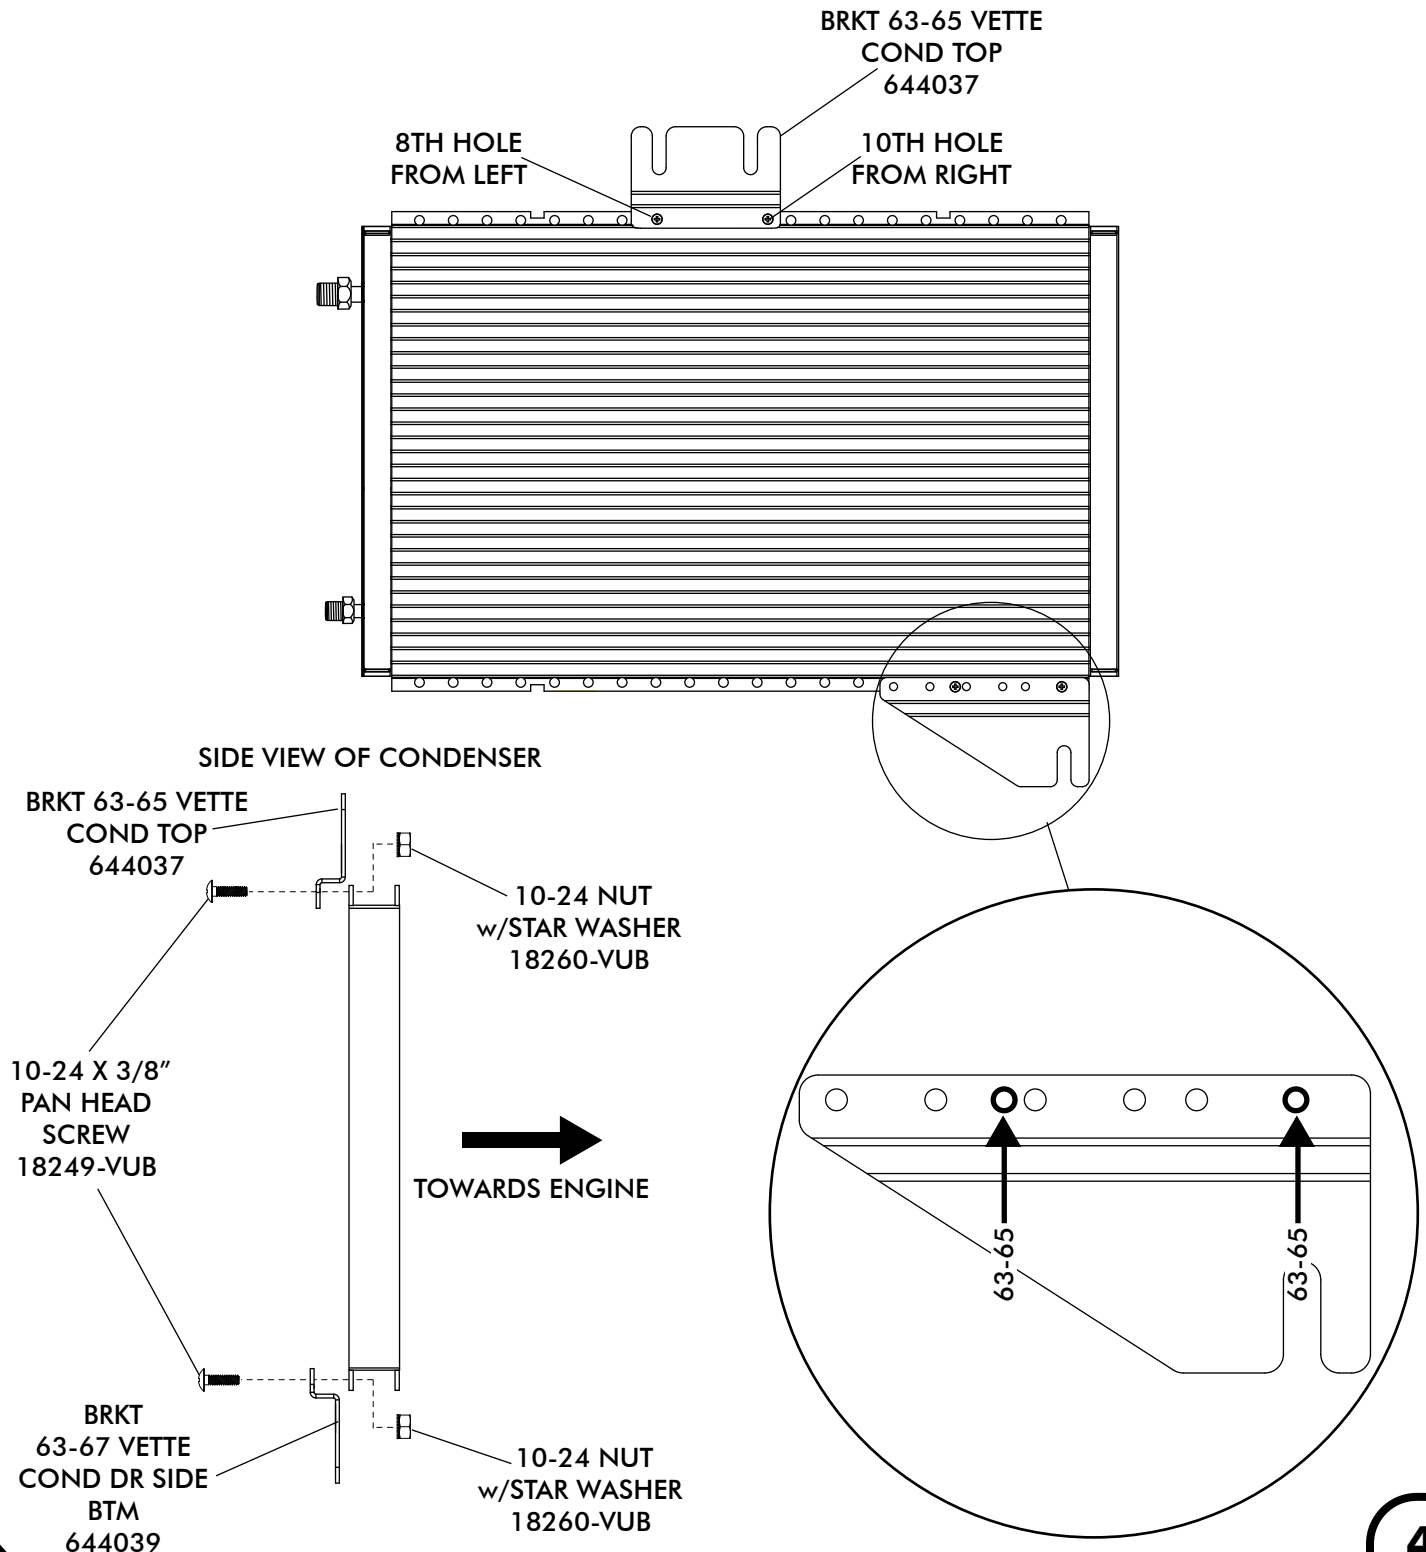



MOUNTING BRACKET INSTALLATION CONT./DRIER INSTALLATION


- ☐ INSTALL MOUNTING BRACKETS ON TO CONDENSER USING 10-24 x 3/8" PAN HEAD SCREWS AND 10-24 NUTS w/ STAR WASHERS AS SHOWN BELOW. **NOTE: BRACKETS MOUNT THROUGH THE 1ST AND 3RD HOLES IN THE CONDENSER.**
- ☐ INSTALL DRIER CLAMPS ON DRIER AS SHOWN.
- ☐ USING (2) #10 x 1/2" SHEET METAL SCREWS INSTALL DRIER ON BRACKET IN THE 4TH AND 6TH HOLES FROM THE TOP. **NOTE: REFRIGERANT FLOW THROUGH DRIER IS IN FROM CONDENSER, OUT TO EVAPORATOR.**

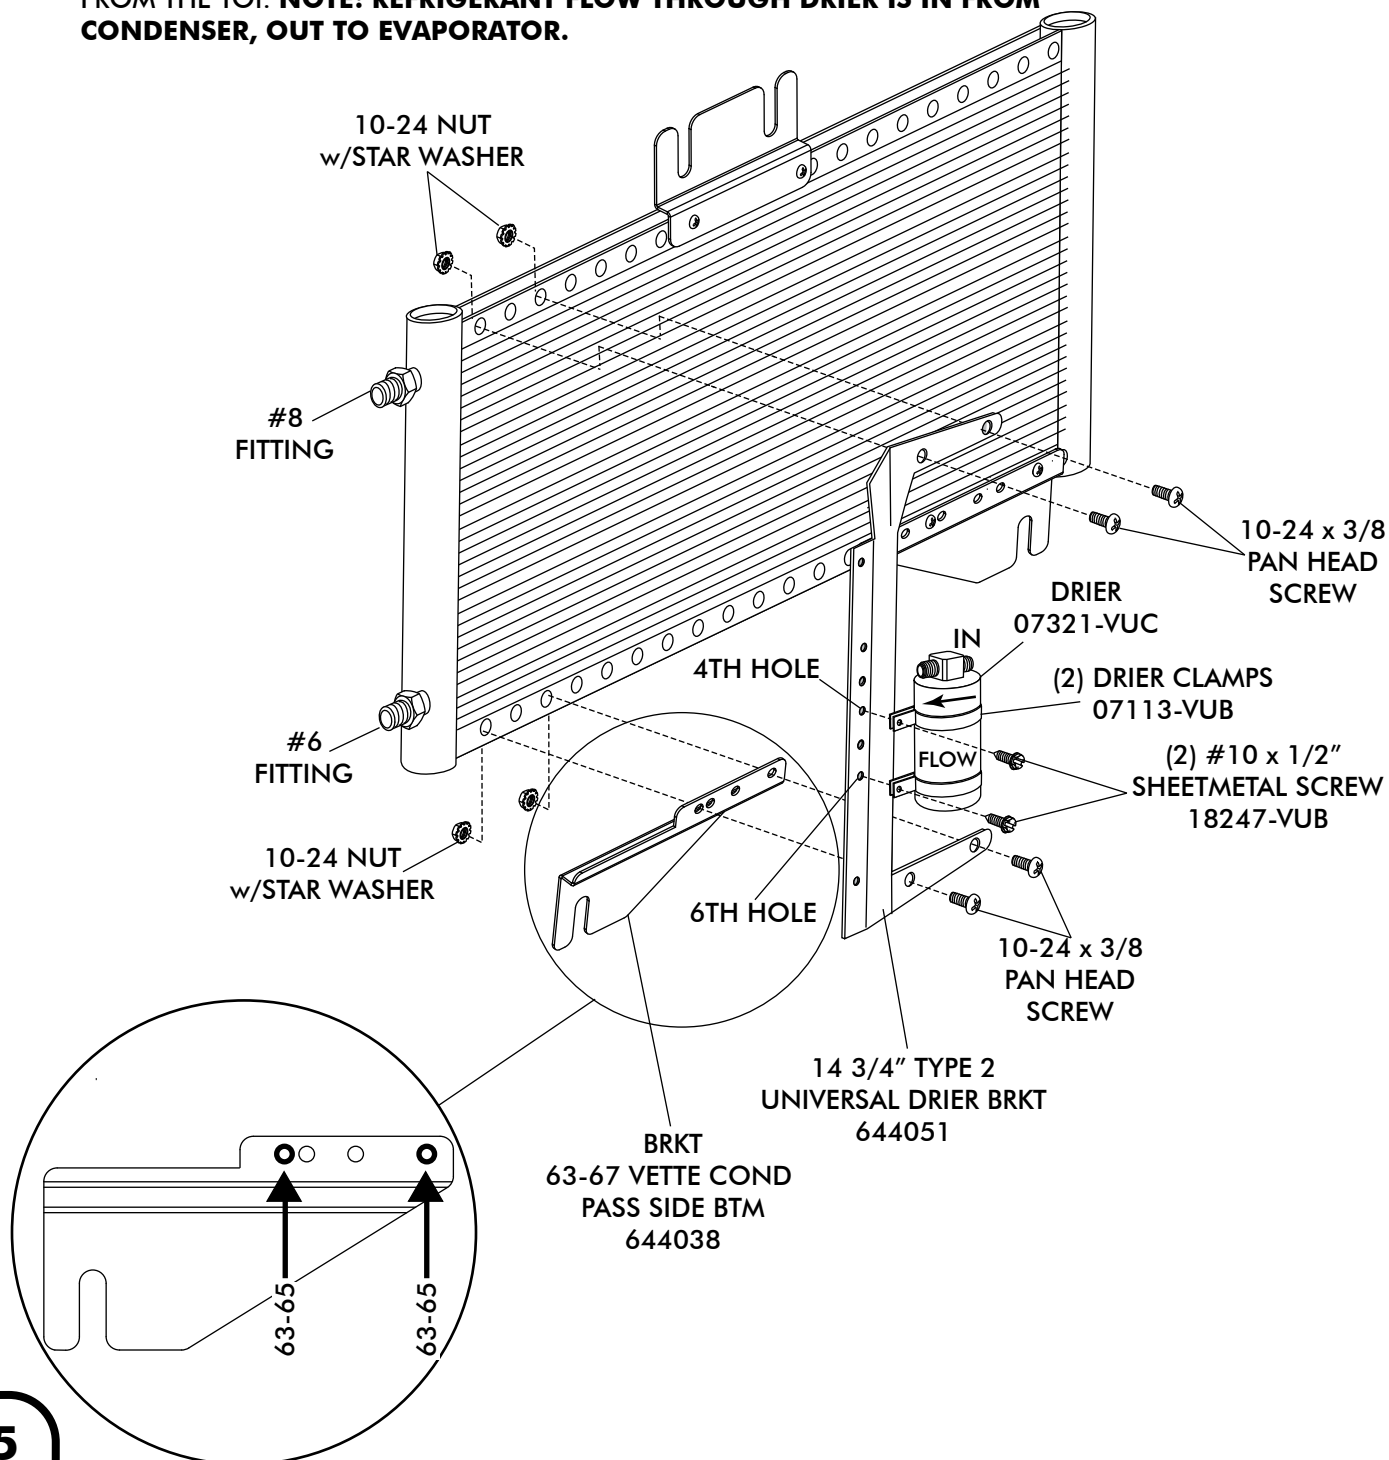



CONDENSER & HARDLINE INSTALLATION

- LUBRICATE (2) #6 O-RING (SEE FIGURE 1) AND INSTALL THE #6 COND/DRIER HARDLINE AS SHOWN.

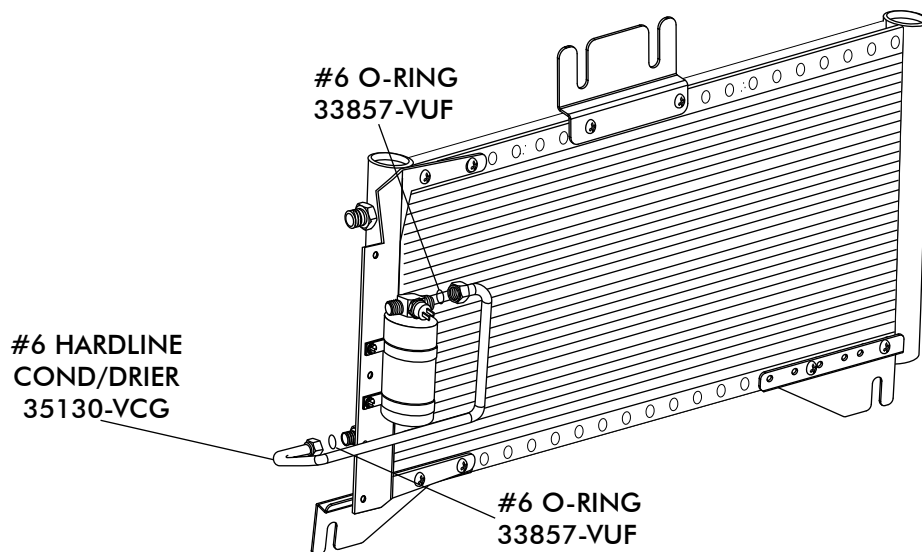

- INSTALL CONDENSER IN FRONT OF CORE SUPPORT AS SHOWN BELOW, USING OEM BOLTS.
- LUBRICATE #6 O-RING AND INSTALL THE #6 DRIER/CORE HARDLINE. LUBRICATE #8 O-RING AND INSTALL THE #8 COND HARDLINE AS SHOWN. (SEE FIGURE 1)


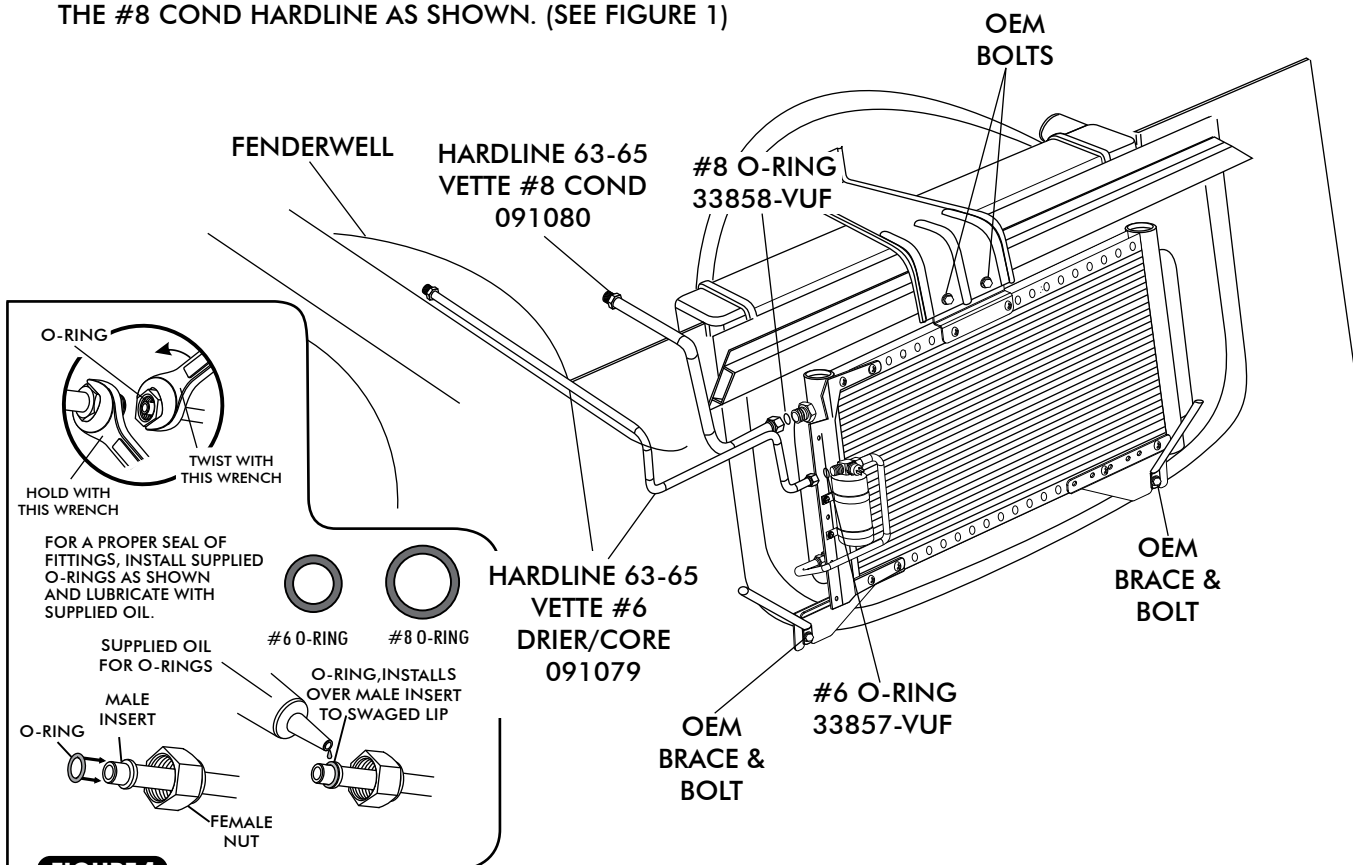


FIGURE 1



HARDLINE CLAMP & SAFETY SWITCH INSTALLATION




- ☐ SECURE #6 DRIER/CORE HARDLINE TO INNER FENDER AS SHOWN USING #2 ADEL CLAMP AND 10-32 x 1/2" PAN HEAD SCREW & NUT w/STAR WASHER.
- ☐ INSTALL SAFETY SWITCH AS SHOWN.
- ☐ RE-INSTALL HOOD AND HOOD PROP.

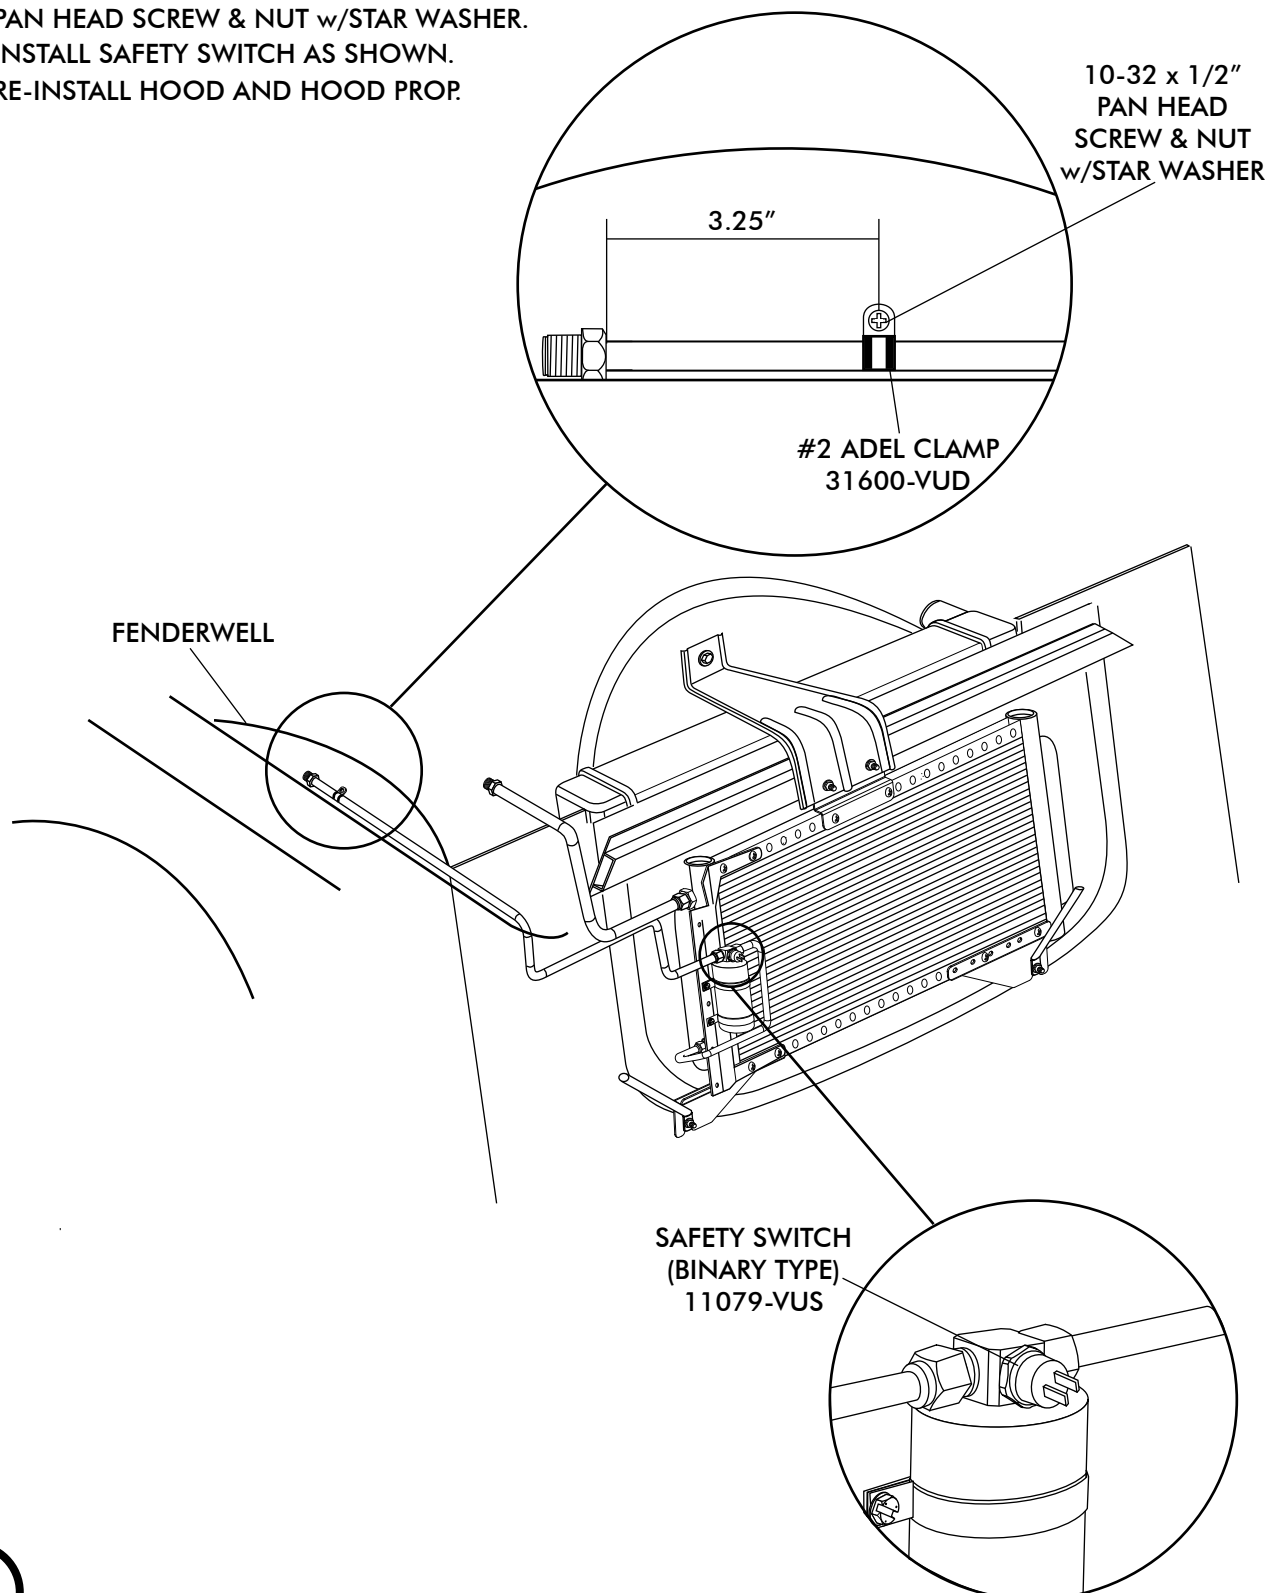



CONDENSER KIT 021163

No.	QTY.	PART No.	DESCRIPTION	
1.	1	03766-VUC	14 X 22 PARALLEL FLOW COND.	_____
2.	2	07113-VUB	DRIER CLAMP	_____
3.	1	07321-VUC	DRIER	_____
4.	1	644037	BRKT 63-65 VETTE COND TOP	_____
5.	1	644038	BRKT 63-67 VETTE COND PASS SIDE BTM	_____
6.	1	644039	BRKT 63-67 VETTE COND DR SIDE BTM	_____
7.	1	644051	BRKT 14 3/4" TYPE 2 UNIVERSAL DRIER	_____
8.	1	091079	HARDLINE 63-65 VETTE #6 DRIER/CORE	_____
9.	1	091080	HARDLINE 63-65 VETTE #8 COND	_____
10.	1	35130-VCG	HARDLINE 63-67 VETTE COND/DRIER	_____
11.	8	18260-VUB	10-24 NUT w/STAR WASHER	_____
12.	8	18249-VUB	10-24 x 3/8" PAN HEAD SCREW	_____
13.	3	33857-VUF	#6 O-RING	_____
14.	1	33858-VUF	#8 O-RING	_____
15.	2	18247-VUB	#10 x 1/2" HEX SCREW	_____
16.	1	11079-VUS	MALE BINARY SWITCH	_____
17.	1	23135-VUW	COMPRESSOR LEAD	_____
18.	1	31600-VUD	#2 ADEL CLAMP	_____
19.	1	18250-VUB	10-32 x 1/2" PAN HEAD SCREW	_____
20.	1	18251-VUB	10-32 NUT w/STAR WASHER	_____

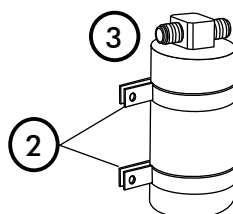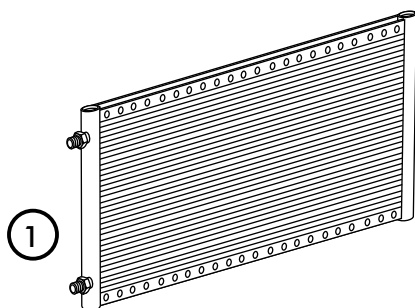

CHECKED BY: _____
PACKED BY: _____
DATE: _____

