

Saldana Racing Products

16 Gallon Mini Sprint Retro Kit

Installation Instructions

- 1. Using the cover plate template mark the location for your cover plate hole and cut the hole on the bottom of the tank shelf as shown below.**



- 2. Insert the foam filler plug through the cover plate hole and position it in the rear of the tank as shown.**




- 3. Fold and insert the bladder through the cover plate hole. Attach by lifting the top 4x6 nut ring and aligning the pick-up hole in the hard tank with that of the bladder. Once attached make sure the bladder is completely unfolded inside the tank and is not binding or kinking the fuel pick-up hose.**





- 4. Install Bulkhead fitting in tank (per drawing).**
- 5. Attach pick-up hose to inside of bulkhead fitting in tank (per drawing).**
- 6. Place 3 layers of duct tape over backs of nutserts on cover plate to prevent them from chafing against the bladder. Insert cover plate inside cover plate hole. Align nutserts on cover plate with holes in tank and install screws.**

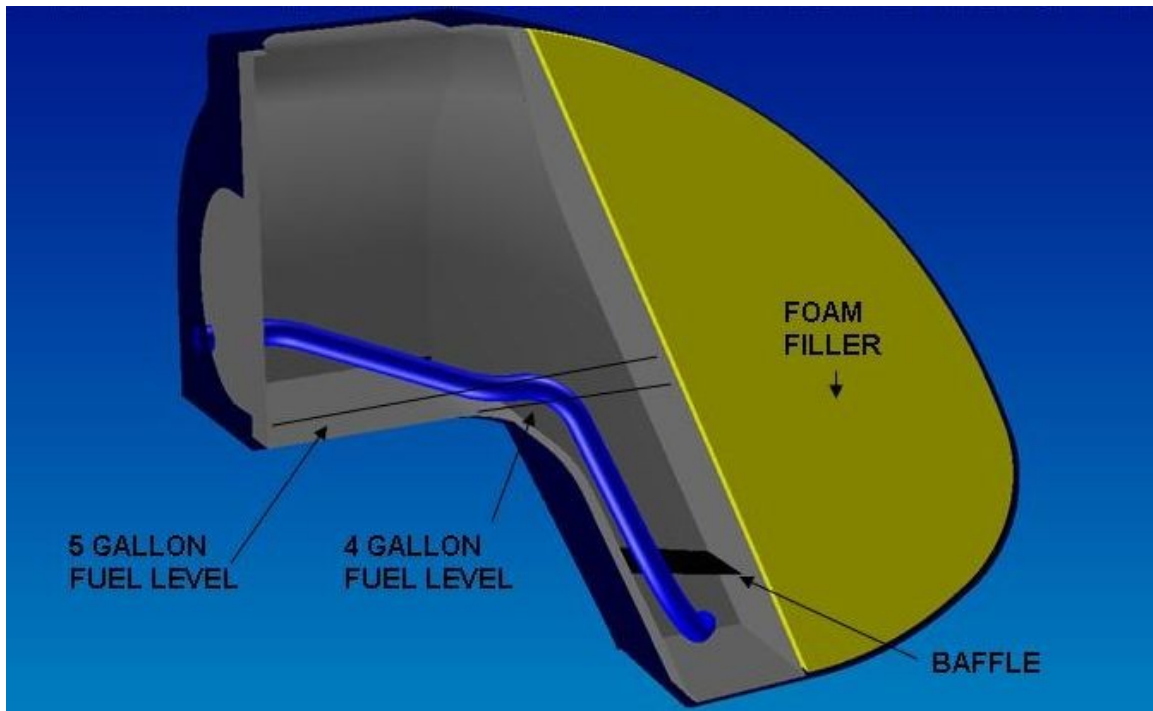

If you have any questions please call us at (317) 852-4193
or e-mail us at info@saldanaracingproducts.com



3800 North State Road 267, Unit B
Brownsburg, IN 46112
(317) 852-4193
www.saldanaracingproducts.com