


64-72 GM A-body Adjustable Upper A-arm
Item # 4056-3

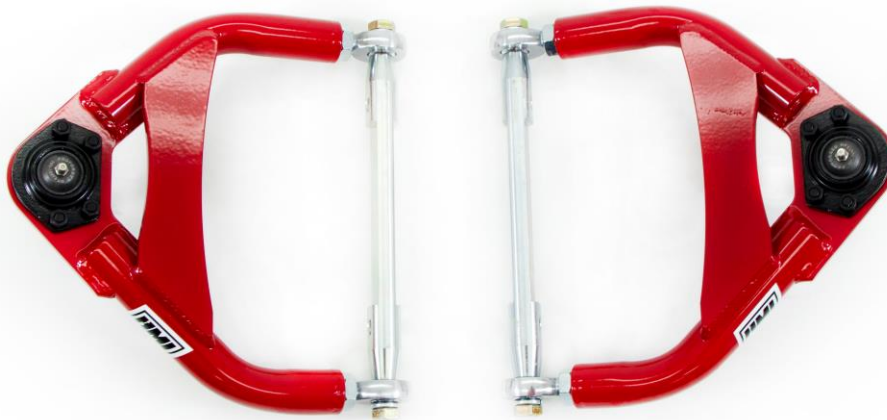

DRIVERS SIDE

PASSENGER SIDE

IMPORTANT NOTES

The UMI 4056 adjustable upper a-arm is intended to be used with extended height ball joints and/or spindles. This increase in spindle heights presents a more favorable camber curve and improves the handling of the 64-72 GM A-body.

UMI is not responsible discrepancies when used for applications other than the above, including but not limited to bump stop interference, ball joint binding, incorrect angles, etc.

The UMI 4056 adjustability is suitable for tall spindle applications and works nicely with zero to minimal shimming. UMI is not responsible for dimensions or alignments outside the intended range. Some shimming may be required in certain applications.

Please follow all applicable safety practices when working on a raised vehicle such as proper use of jack stands and safety glasses, and care when handling compressed coil springs.

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com



509 Hemlock St
Philipsburg, PA 16866
Ph- 814.343.6315 Fax- 814.343.6318
Installation Instructions
support@umiperformance.com
www.umiperformance.com

Installation Instructions:

1. Remove existing upper a-arms.
2. Install UMI 4056 oriented as shown in photograph. The ball joint pad should be facing forward of the centerline of the cross shaft to achieve correct caster setting.
3. Tighten cross shaft to a-arm mount bolts to 60 ft-lb.
4. Install ball joint into spindle. Tighten castle nut to 50 ft-lb and install cotter pin. With tall ball joints you may see exposed shaft. This is normal. The included taper is intended to fit GM A-body spindles.
5. Check tightness of end bolts on cross shaft. They should be 70 ft-lb.
6. Check tightness of jam nuts on rod ends. Jam nuts should be against the arm, not against the body of the rod end.
7. Check alignment.
8. After alignment is finalized and to ensure reliability you can place a drop of blue Loctite 242 on each end bolt.
9. Minimum rod end thread engagement should be approximately 14 threads for the proper safety factor. For cruising applications you may be able to extend a few more threads but this would be at your own discretion unrelated to UMI Performance, Inc.'s recommendations.

To change alignment:

1. Remove one end bolt at a time.
2. Lift the arm up and adjust the rod end.
3. Reinstall.
 - a. Extending the forward rod end increases positive caster.
 - b. Extending the rearward rod end decreases positive caster.
 - c. Extending both rod ends equally produces a change in camber towards zero and over to positive.
 - d. Shortening both rod ends equally produces more negative camber.
 - e. Adding shims equally produces more negative camber.
 - f. Adding shims to the front decreases positive caster.
 - g. Adding shims to the rear increases positive caster.
 - h. Shims may be necessary in extreme cases. There is no guarantee that your car will align without shims.

Bump stops:

1. The included bump stop is intended to be installed in the factory hole in the chassis near the spring pocket.
2. You may also install the bump stop in the a-arm if so desired.
3. The bump stop is not necessary for proper operation of the system but has been included due to popular demand.
4. A 3/8" threaded rod or bolt can also be installed as a drag race droop limiter.

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com

ALIGNMENT RECOMMENDATIONS

	Street and Cruise	Street Performance/Corner Carving	Competition (Not recommended for street use)
Camber	0 to -1/4 deg	-1/2 deg	-1 to -1.5 deg
Caster – Driver/Passenger	+4/+4.5 deg	+5/+5.5 deg	+5/+5.5 to +6/+6.5 deg
Toe	1/8" total toe-in	1/16" total toe-in	0" to 1/16" total toe-out

Tall Ball Joint Information:

Some UMI P/N's use tall upper and/or lower ball joints to enhance cornering performance (upper ball joints shown for illustration). Tall ball joints look different than the standard OEM ball joints. Please install with confidence.

It is 100% A-OK and expected for the ball joint shaft to be exposed. The taper is what locks the ball joint in place, and is a standard A-body spindle taper. The boot does not have to cover the shaft. Grease is only necessary on the pivot point.

Super-tall ball joints have a necessarily tall boot design. This design looks bad when in full droop but is A-OK when the car is at ride height.



Item # 4056-3

64-72 GM A-body Adjustable Upper A-arm

UMI Performance Inc.
Manufactured in Philipsburg, PA-USA

Thank you for Putting Your Trust in A UMI Performance Product!

www.umiperformance.com