




MD3 Modified Nose Assembly

Thank you for purchasing our new MD3 Mod Nose. Here are some tips on how to custom fit the center of your new nose.

MD3 Modified Nose

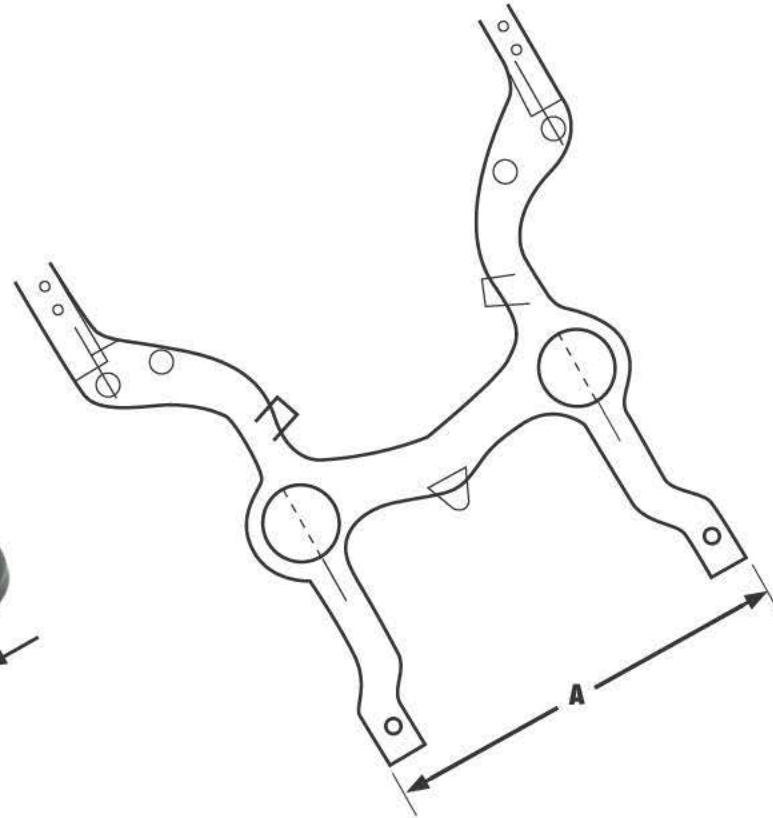

Nose comes pre-fit at 45-inches wide. For narrower frame width you need to adjust the nose as follows:

- Measure your current frame width (A)
- Subtract (A) width from 45-inches to determine width of Nose Center
- Trim equal amounts off each side of the Nose Center
 - Example: $45'' - 37.5'' (A) = 7.5''$ Divided by 2 - Trim 3.75'' (B) off each side of Nose Center